
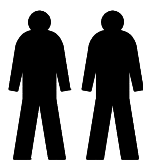


INSTALLATION GUIDE

LEA

Model#: MG09

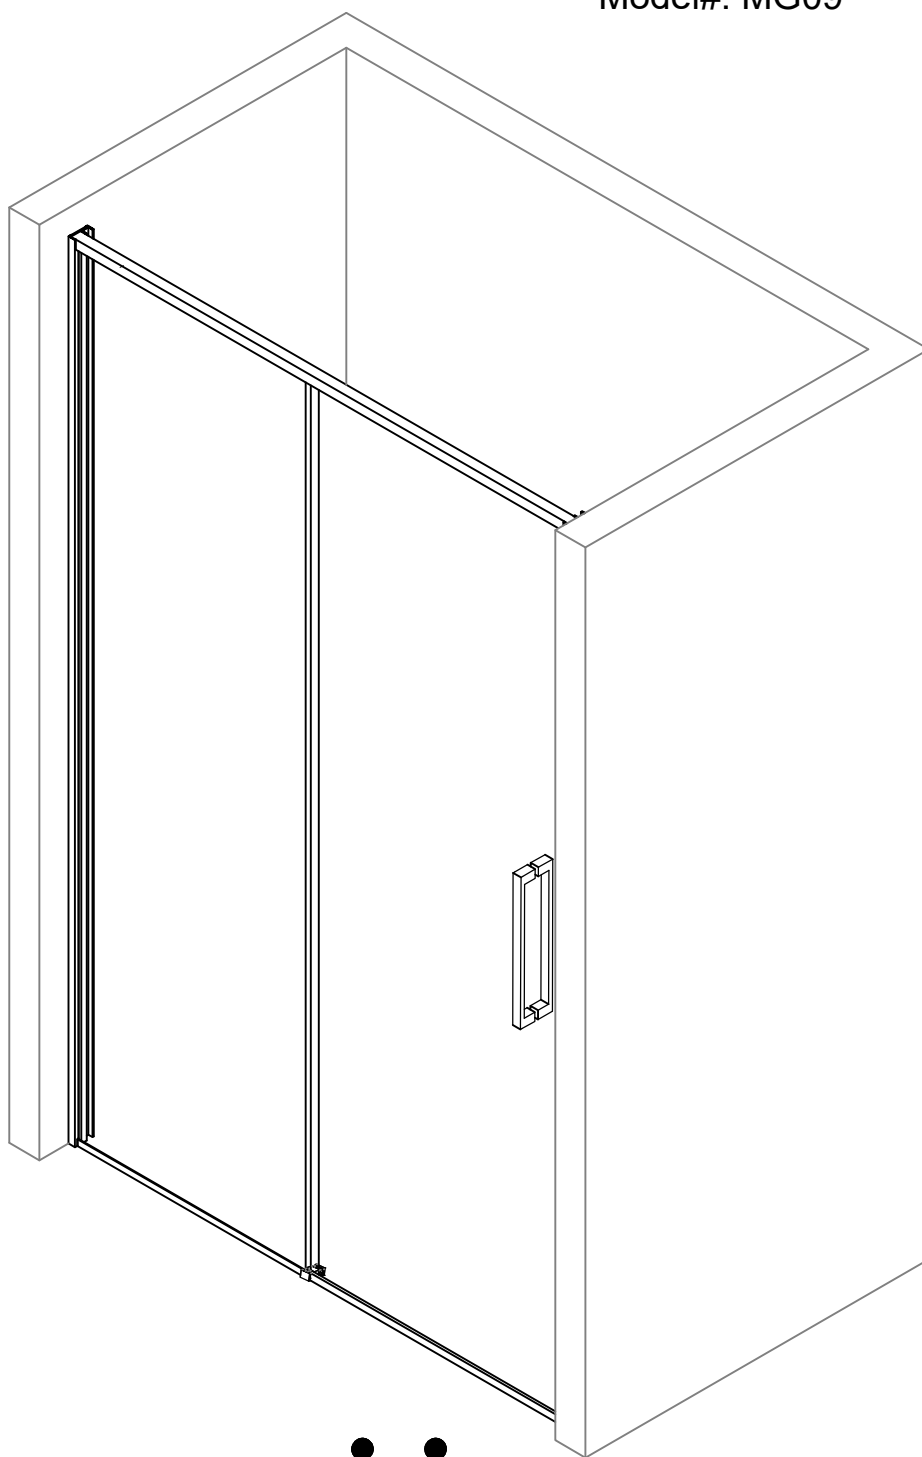

2 PEOPLE REQUIRED

**Please keep this manual and product code number for future reference
and for ordering replacement parts if necessary.**

GENERAL INSTRUCTIONS

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION*OVER*CERAMIC*TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.

NOTICE

- Caulking: no sealant is required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.











CARE FOR YOUR SHOWER DOOR

- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.

An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and metal parts looking new.


- We recommend wiping the glass panels with a squeegee after each use.

TOOLS REQUIRED


				
SPIRIT LEVEL	POWER DRILL	PENCIL	SILICONE	MALLET
				
TAPE MEASURE	SCREW DRIVER	6mm&3mm(1/4" &*1/8") DRILL*BITS	HACKSAW	SAFETY GLASSES





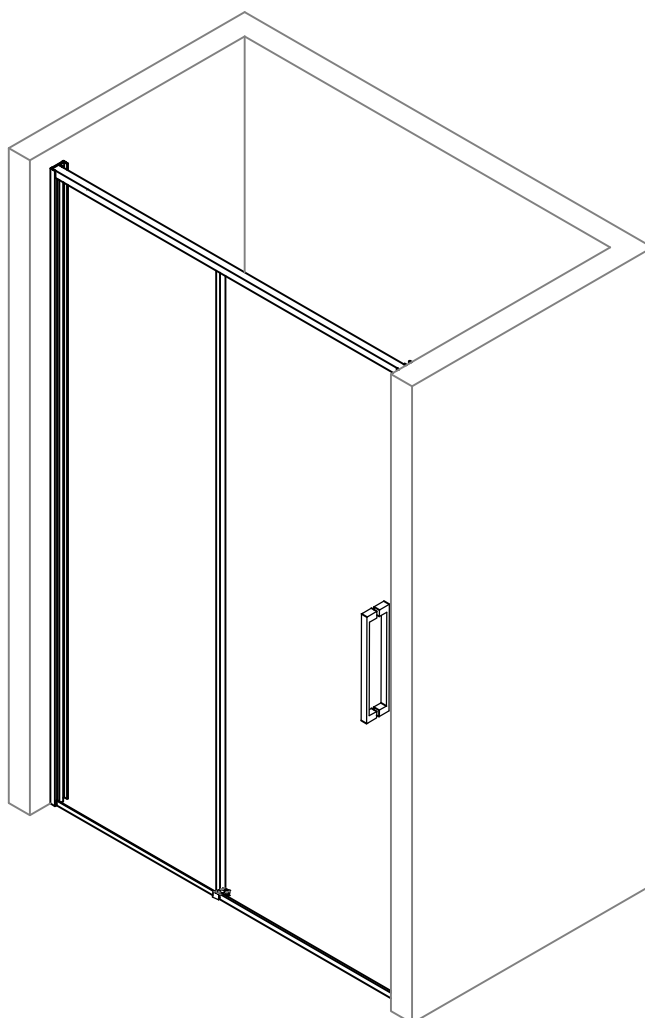



****Use a 6mm(?) drill bit for ceramic when drilling into ceramic tiles**

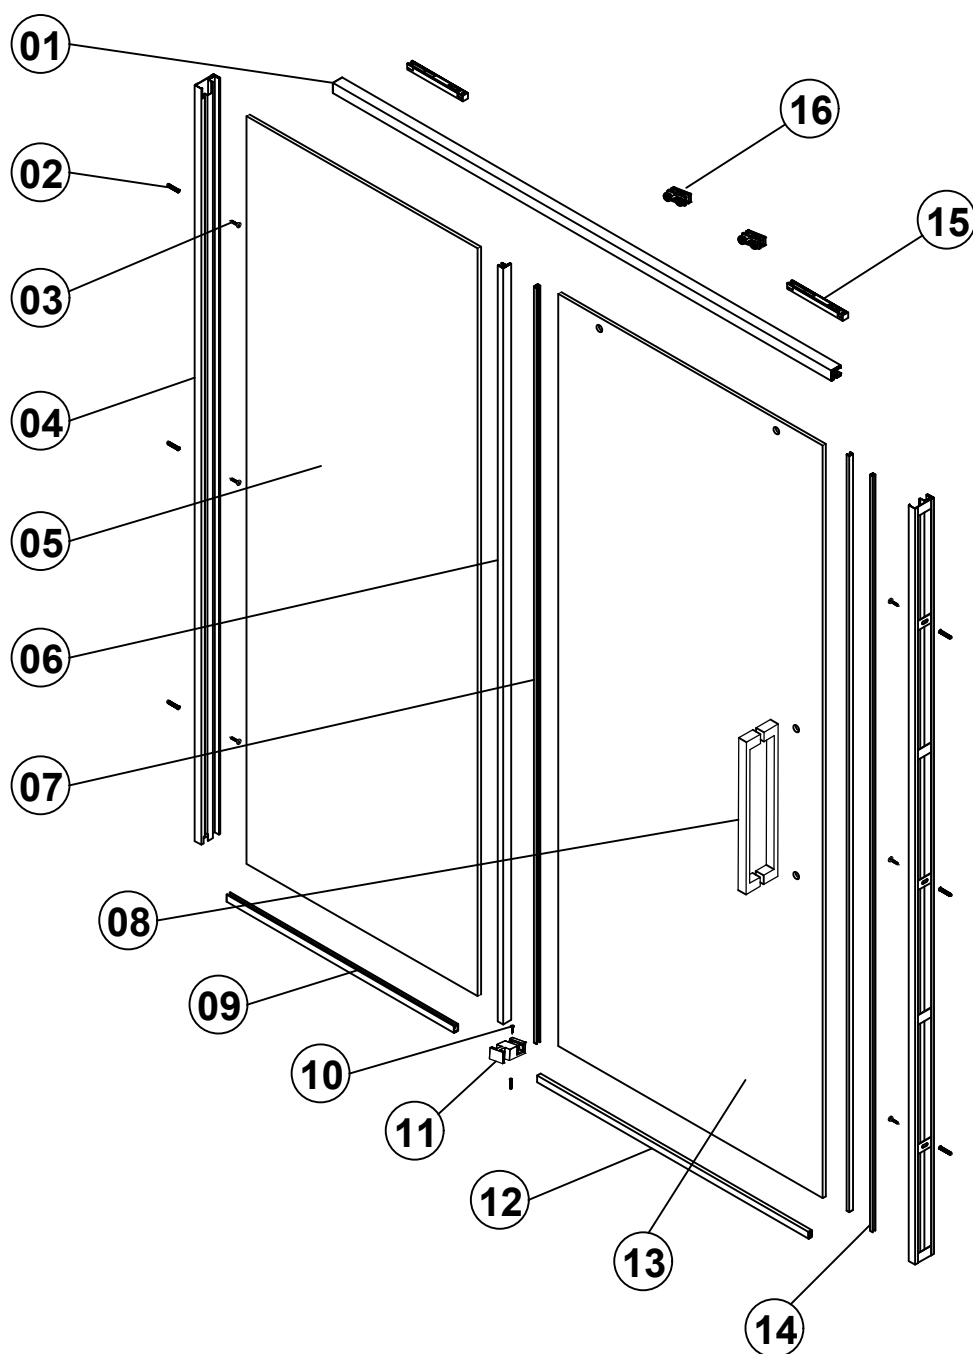







CHOOSE A CONFIGURATION




PARTS LISTING



ITEM	PARTS	DIAGRAM	QTY
1	Header Rail		1
2	Wall Anchor		7
3	Screw-ST4*30		6
4	Wall Jamb		2
5	Fixed Panel		1
6	Slip Jamb		1
7	Decorative Track		2
8	Handle		1

ITEM	PARTS	DIAGRAM	QTY
9	U Channel of Fixed Panel		1
10	Screw-ST4*20		1
11	Door Guide		1
12	Door Threshold		1
13	Door		1
14	Wall Jamb Cover		1
15	Soft-Close Kit		2
16	Roller		2


1

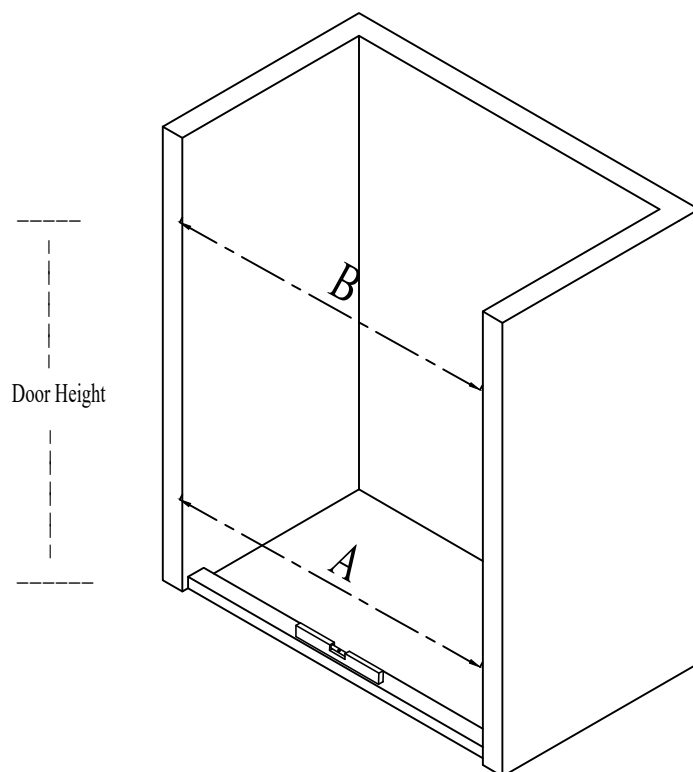

Step 1: For proper installation, the difference between distance (A) and distance (B) need to be less than 5/16".

Step 2: Make sure the shower curb is level.


2

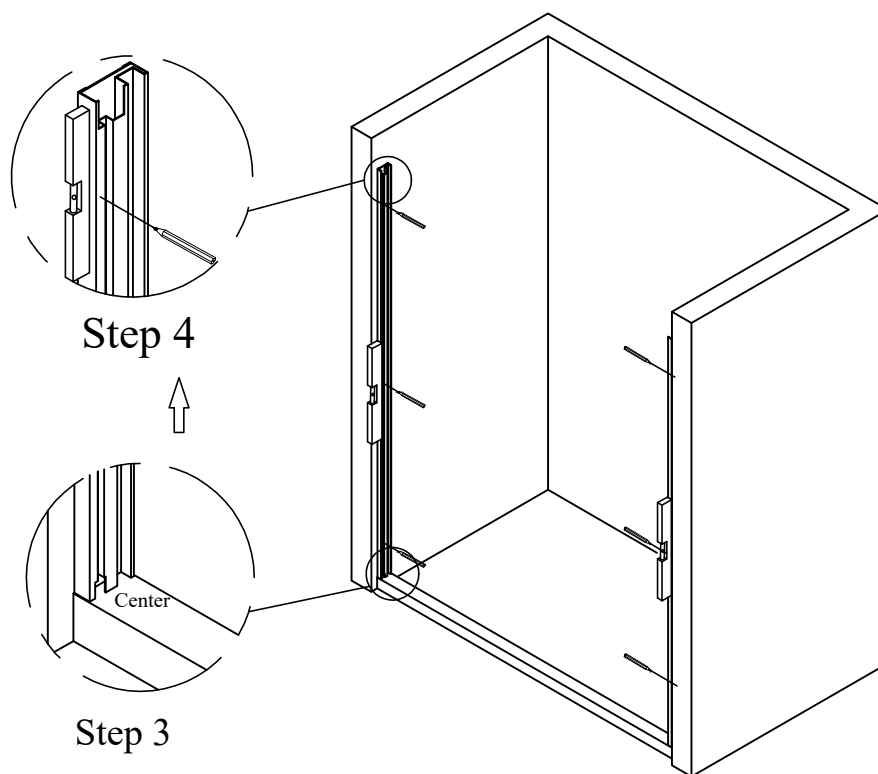

Step 3: On either wall, align the center of Wall Jambs(#4) with the center of shower curb.

Step 4: Make marks on pre-drilled holes with pencil.


3

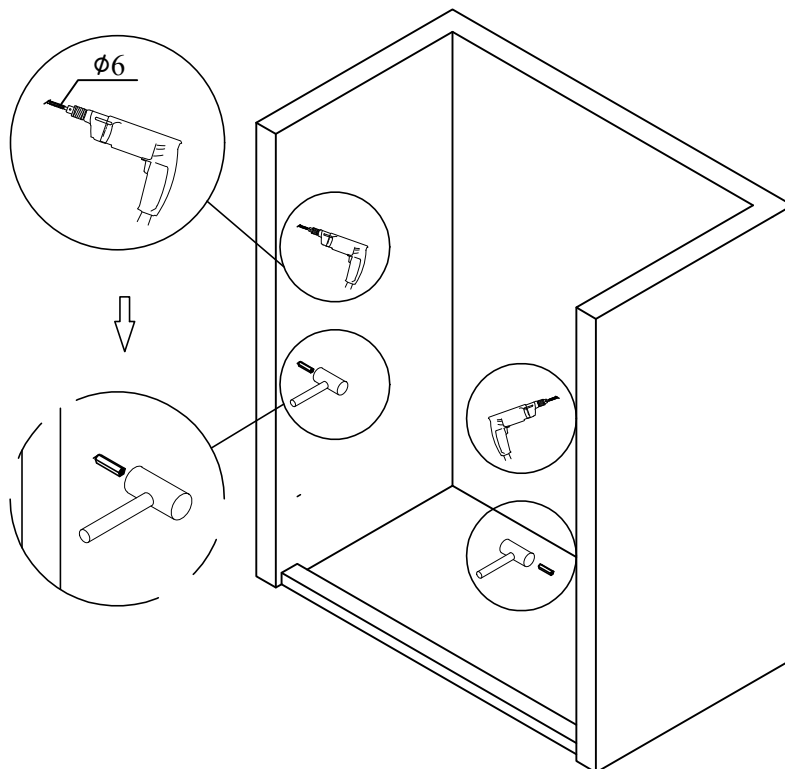

Step 5: Drill holes on marks.

Step 6: Gently tap Wall Anchor(#2) into each hole.

4

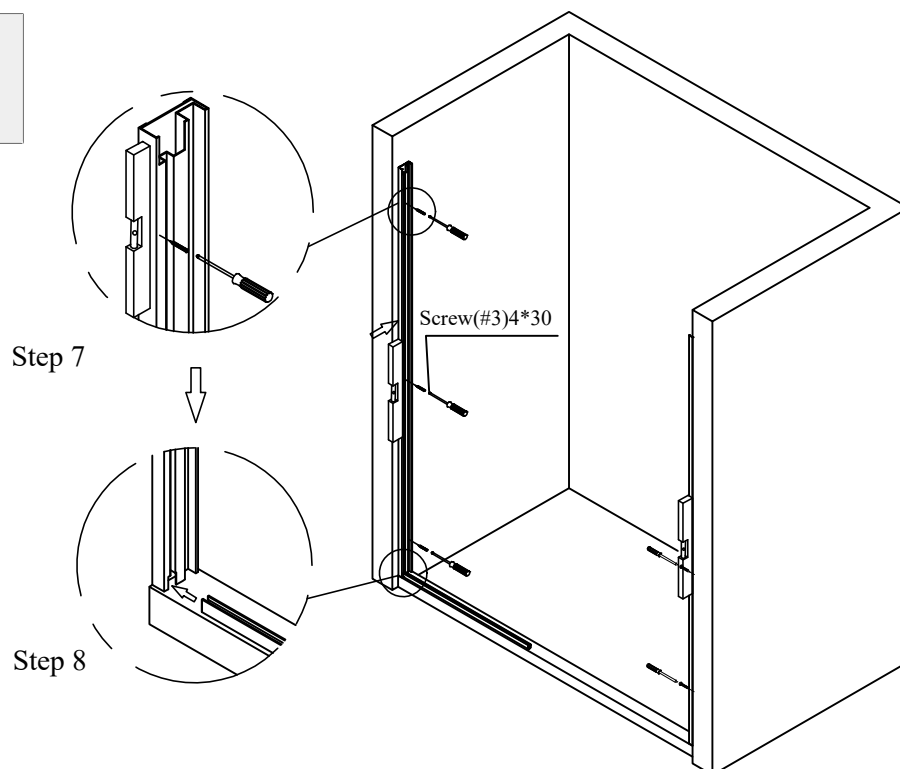



Step 7

Step 8

Step 7: Re-position Wall Jambs(#4) on both sides of the wall and secure with Screw(#3).

Step 8: Place U Channel of Fixed Panel(#9) into the bottom and outside of Wall Jamb(#4).


5

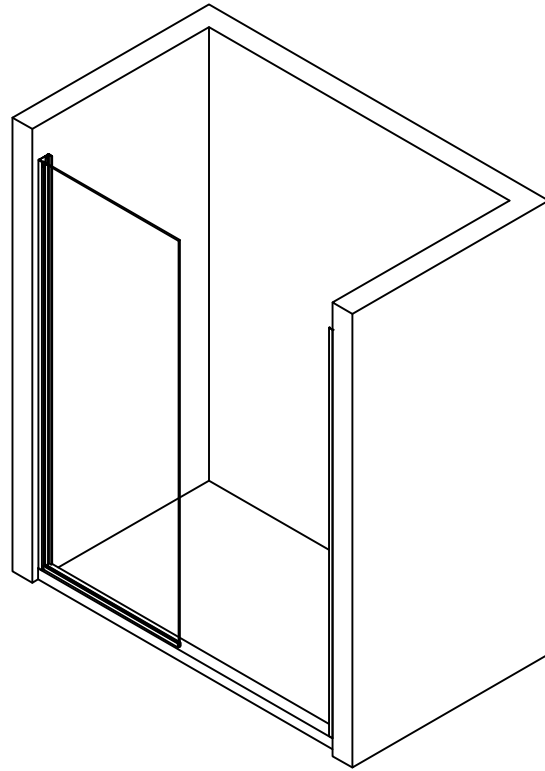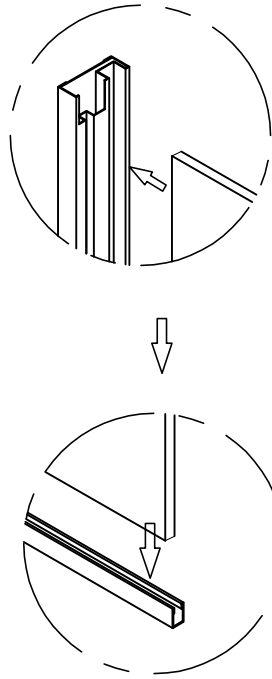


Step 9: Place Fixed Panel(#5) into Wall Jamb(#4) and U Channel of Fixed Panel(#9).

6



Step 10

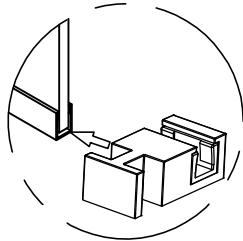

Step 11

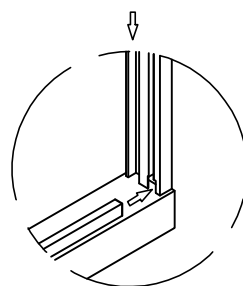

Step 12

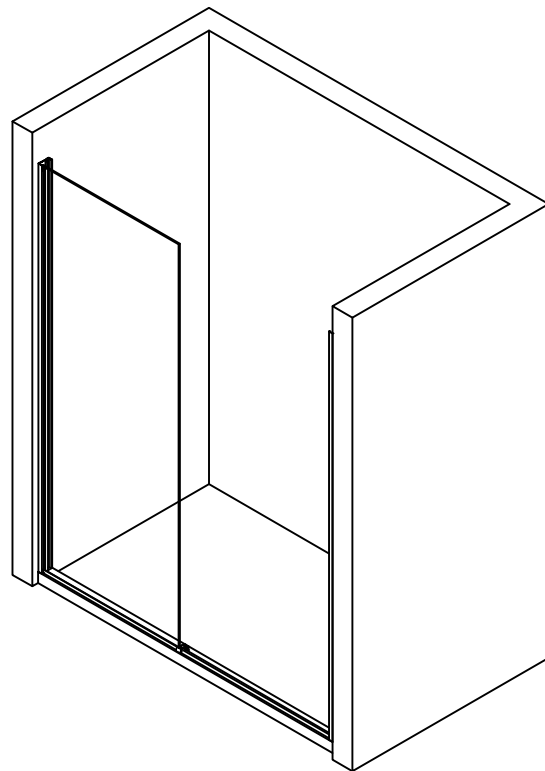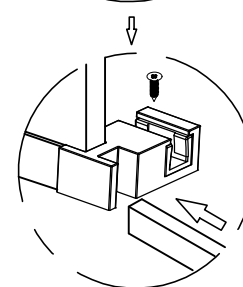


Step 10: Insert one side of Door Guide(#11) over U Channel of Fixed Panel(#9).

Step 11: Insert Door Threshold(#12) into the bottom and outside of the door side Wall Jamb(#4).



Step 12: Insert the other side of Door Guide(#11) over Door Threshold(#12), If the Door Threshold(#12) is too long, cut it with hacksaw to fit properly. Secure with Screw(#10).

7

Step 13

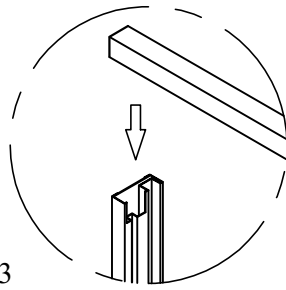

Step 14

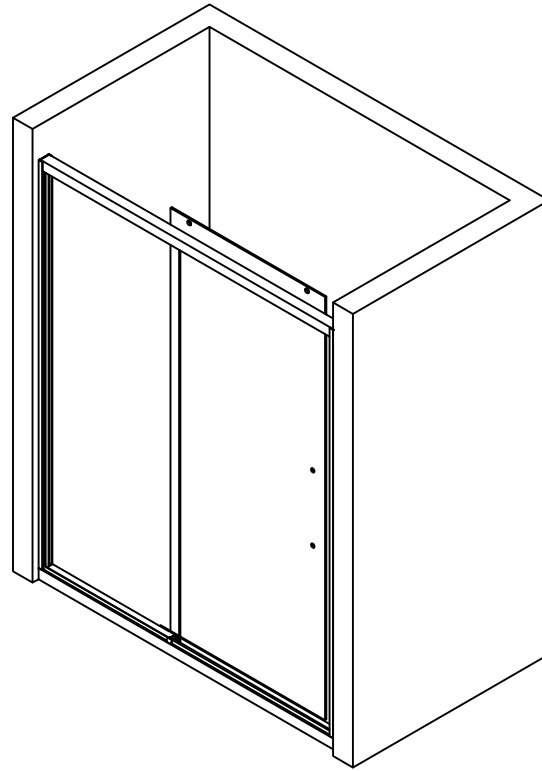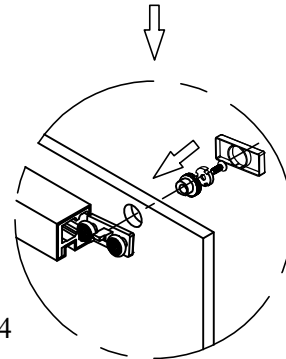


Step 13: Insert Header Rail(#1) between two Wall Jambs(#4).


Step 14: Place Door(#13) into Door Guide(#11) and lift a little to secure with Rollers(#16), then adjust the Soft-Close Kit(#15) to close the door completely.

8



Step 15

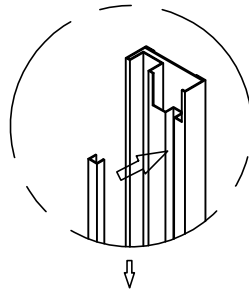

Step 16

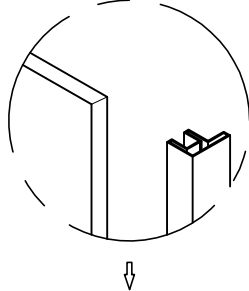

Step 17

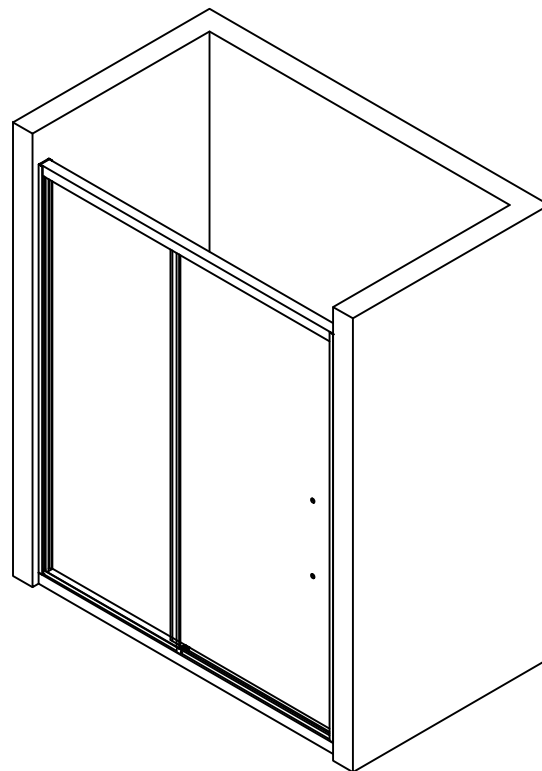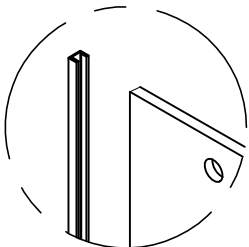


Step 15: Place Wall Jamb Cover(#14) into Fixed Panel side Wall Jamb(#4) for decoration.


Step 16: Insert Slip Jamb(#6) into Fixed Panel(#5).

Step 17: Insert Decorative Track(#7) into Door(#13).

9

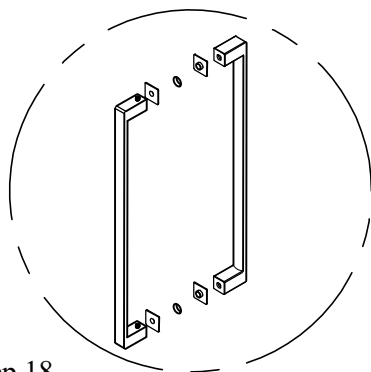


Step 18

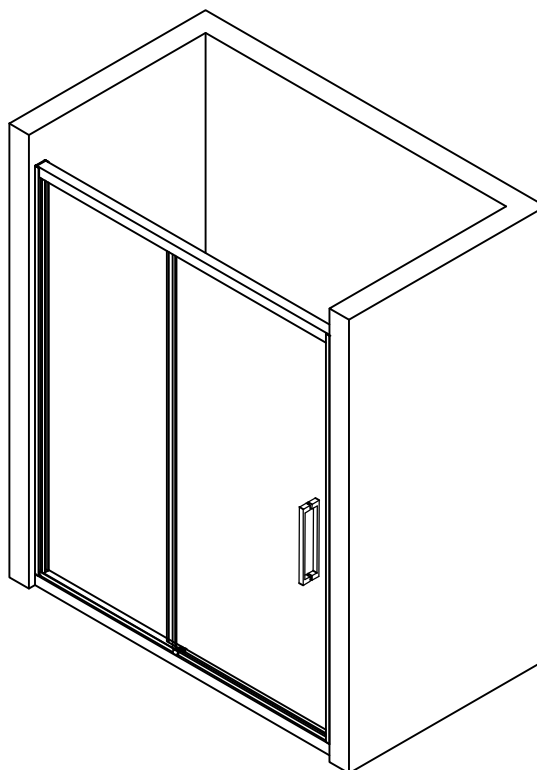

Step 18: Install Handle(#8).

10

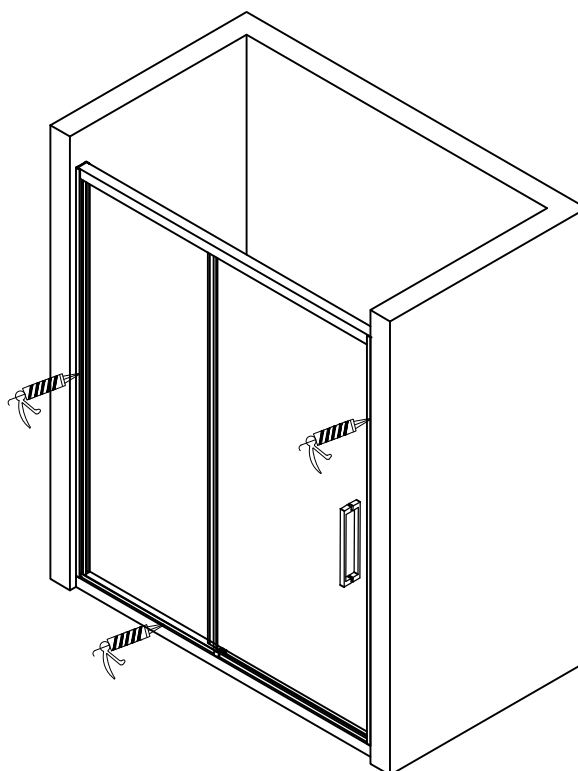

Step 19: Apply Silicone Sealant(not included) along the wall and floor.
Wait 24 hours before using shower.