


MASTERBUILT OVERLAY INSTALLATION INSTRUCTIONS

YOUR EXISTING PANEL LOOKS LIKE THIS BECAUSE THE OVERLAY DELAMINATED AND FELL OFF
CLEAN THIS SURFACE WITH ISOPROPYL ALCOHOL TO REMOVE ALL GREASE AND DEBRIS

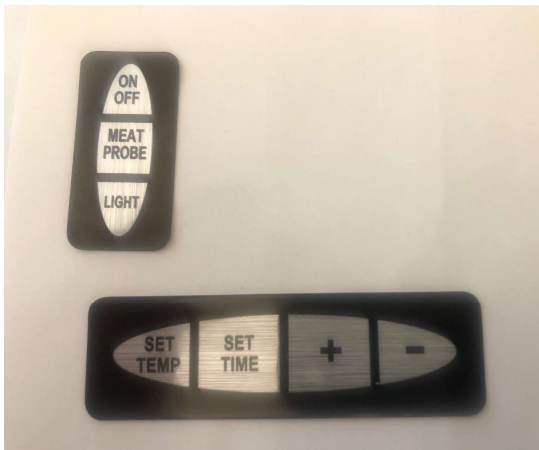

REMOVE YOUR NEW OVERLAYS AND POSITION CAREFULLY OVER THE EXPOSED BUTTON OPENINGS, ALIGNMENT IS RIGHT IN THE CENTERLINES VERTICAL AND HORIZONTAL OVER THE BUTTON OPENINGS

RUB OVER THE NEW OVERLAY AS THE ADHESIVE IS PRESSURE SENSITIVE, THIS WILL HELP MAKE SURE YOUR LABELS STAY ADHERED.
THIS NEXT STEP IS OPTIONAL BUT RECOMMENDED FOR MAXIMUM PROTECTION: ADHERE THE CLEAR LABEL OVER THE ENTIRE CONTROL PANEL COVERING YOUR NEW LABELS AND TRIM THE EXCESS WITH AN EXACTO KNIFE OR RAZOR BLADE.

