

INSYNC ENG – PENTAIR ULTRA TEMP PROTECTIVE METAL COVER INSTALLATION INSTRUCTIONS




TURN OFF POWER

YOUR COVER KIT SHOULD CONTAIN A COVER AND THREE SELF TAPPING SCREWS →




← YOUR COVER WILL FIT THE FOLLOWING SHAPED PENTAIR PLASTIC BEZEL

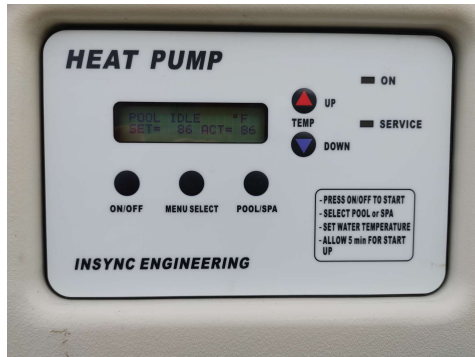

ALIGN TOP OF HINGE & MATCH DRILL

ALIGN TOP OF HINGE →

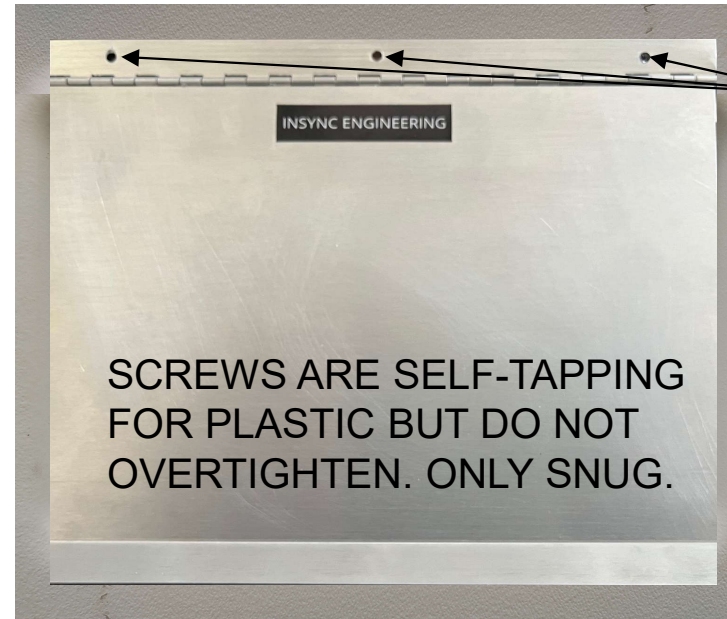

MATCH
DRILL
THREE
HOLES
.060 DIA

IMPORTANT NOTE ABOUT LENGTH OF DRILL BIT

KEEP THE LENGTH OF YOUR DRILL BIT TO .5 INCH MAX AND YOU WILL NOT HAVE TO WORRY ABOUT DAMAGING ANYTHING BEHIND YOUR PANEL

SCREWS ARE SELF-TAPPING FOR PLASTIC BUT DO NOT OVERTIGHTEN. ONLY SNUG.

ALIGN TOP OF HINGE ON FLAT SURFACE OF YOUR PLASTIC BEZEL . ADJUST PLACEMENT. COVER IS DESIGNED TO BE LONG ENOUGH TO SHUT ON FLAT SURFACE BELOW OPENING IN PLASTIC BEZEL. MATCH DRILL 3 ATTACHMENT HOLES INTO YOUR EXISTING PLASTIC. USE .060 TO .070 DIA DRILL BIT. SCREW HINGE TO PLASTIC BEZEL USING SELF TAPPING SCREWS