

INSYNC ENGINEERING - HAYWARD H SERIES PROTECTIVE METAL COVER INSTALLATION INSTRUCTIONS


YOUR COVER KIT SHOULD CONTAIN A COVER AND TWO SELF TAPPING SCREWS



YOUR COVER WILL FIT THE FOLLOWING SHAPED HAYWARD PLASTIC BEZEL




MATCH DRILL

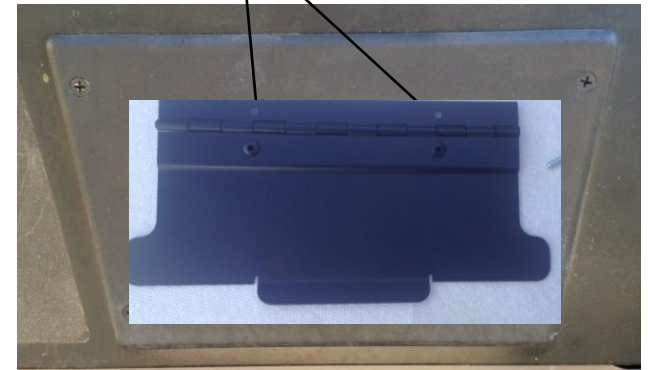

IMPORTANT NOTE ABOUT LENGTH OF DRILL BIT

KEEP THE LENGTH OF YOUR DRILL BIT TO .5 INCH MAX AND YOU WILL NOT HAVE TO WORRY ABOUT DAMAGING YOUR ELECTRONICS. HERE IS WHAT IS BEHIND THE PLASTIC WHERE YOU ARE DRILLING:

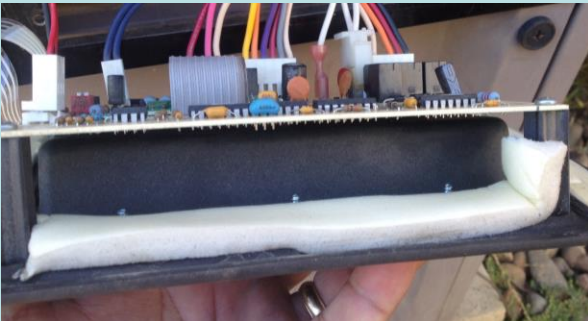

PLACE COVER APPROXIMATELY WHERE SHOWN AND MATCH DRILL 2 ATTACHMENT HOLES INTO YOUR EXISTING PLASTIC. USE .060 TO .070 DIA DRILL BIT. SCREW HINGE TO PLASTIC BEZEL USING SELF TAPPING SCREWS