


MASTERBUILT OVERLAY INSTALLATION INSTRUCTIONS

YOUR EXISTING PANEL WHEN NEW LOOKED LIKE THIS



6 MONTHS LATER IT LOOKS LIKE THIS
BECAUSE THE OVERLAY DELAMINATED
AND FELL OFF


CLEAN THIS SURFACE WITH ISOPROPYL ALCOHOL
TO REMOVE ALL GREASE AND DEBRIS



REMOVE YOUR NEW OVERLAYS AND
POSITION CAREFULLY OVER THE EXPOSED
BUTTON OPENINGS, ALIGNMENT IS RIGHT
IN THE CENTERLINES VERTICAL AND
HORIZONTAL OVER THE BUTTON OPENINGS



RUB OVER THE NEW OVERLAY AS THE ADHESIVE IS PRESSURE
SENSITIVE, THIS WILL HELP MAKE SURE YOUR LABELS STAY
ADHERED.

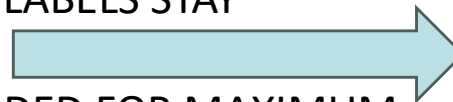

THIS NEXT STEP IS OPTIONAL BUT RECOMMENDED FOR MAXIMUM
PROTECTION: ADHERE THE CLEAR LABEL OVER THE ENTIRE CONTROL
PANEL COVERING YOUR NEW LABELS AND TRIM THE EXCESS WITH A
EXACTO KNIFE OR RAZOR BLADE.

