



INSTALLATION INSTRUCTIONS


Upper Cover
x1

Tamper Proof Screws
x8


Screw Mount Plate
x1

Rubber Gasket
x1

Looney® Splash Guard
x1

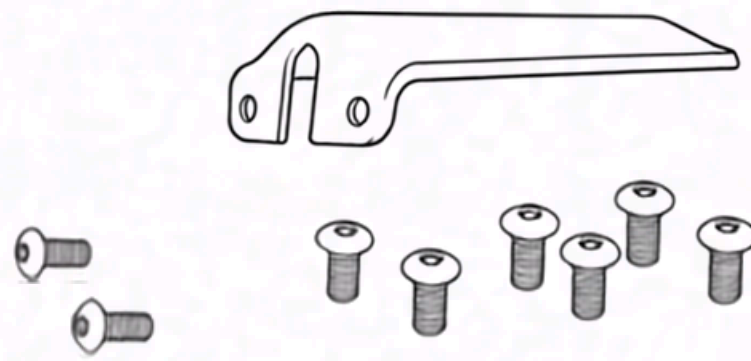

*Tool Required (not included)
screw driver with anti-tamper
hexscrew driver bit

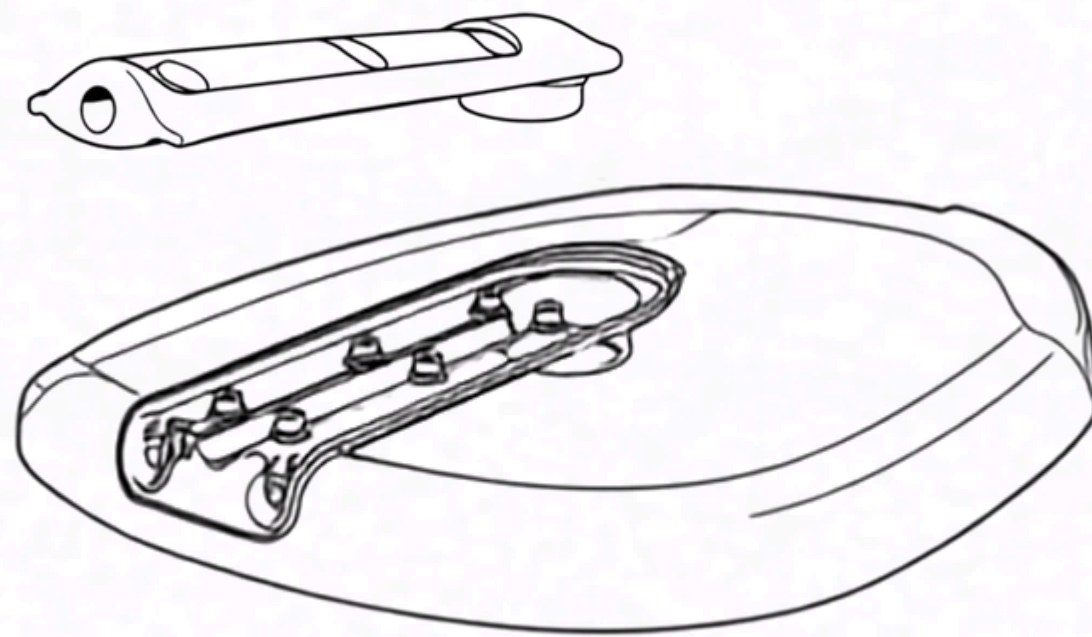

- Ensure the bedpan washing faucet is in good working order before installation.
- Ensure Looney® is compatible with the existing bedpan washing hardware.
- Remove all packaging from Looney®.
- Lower the bedpan washing diverter spray arm to the down position.
- Place the rubber gasket around the diverter spray arm faucet with the slit facing downward.
- Place the Looney® splash guard beneath the lowered diverter spray arm and rubber gasket. Apply gentle pressure to seat the faucet and gasket snugly into the channel in the splash guard.
- Place the screw mount over the gasket and insert the screws into the corresponding threads. Hand-tighten only. Do not overtighten.
- Slide the upper cover over the screw mount and secure it with the two screws using the corresponding threads. Hand-tighten only. Do not overtighten.
- Confirm that Looney® is securely attached before use.
- Looney® is now ready for use!