




GM Cabin Cube Sauna

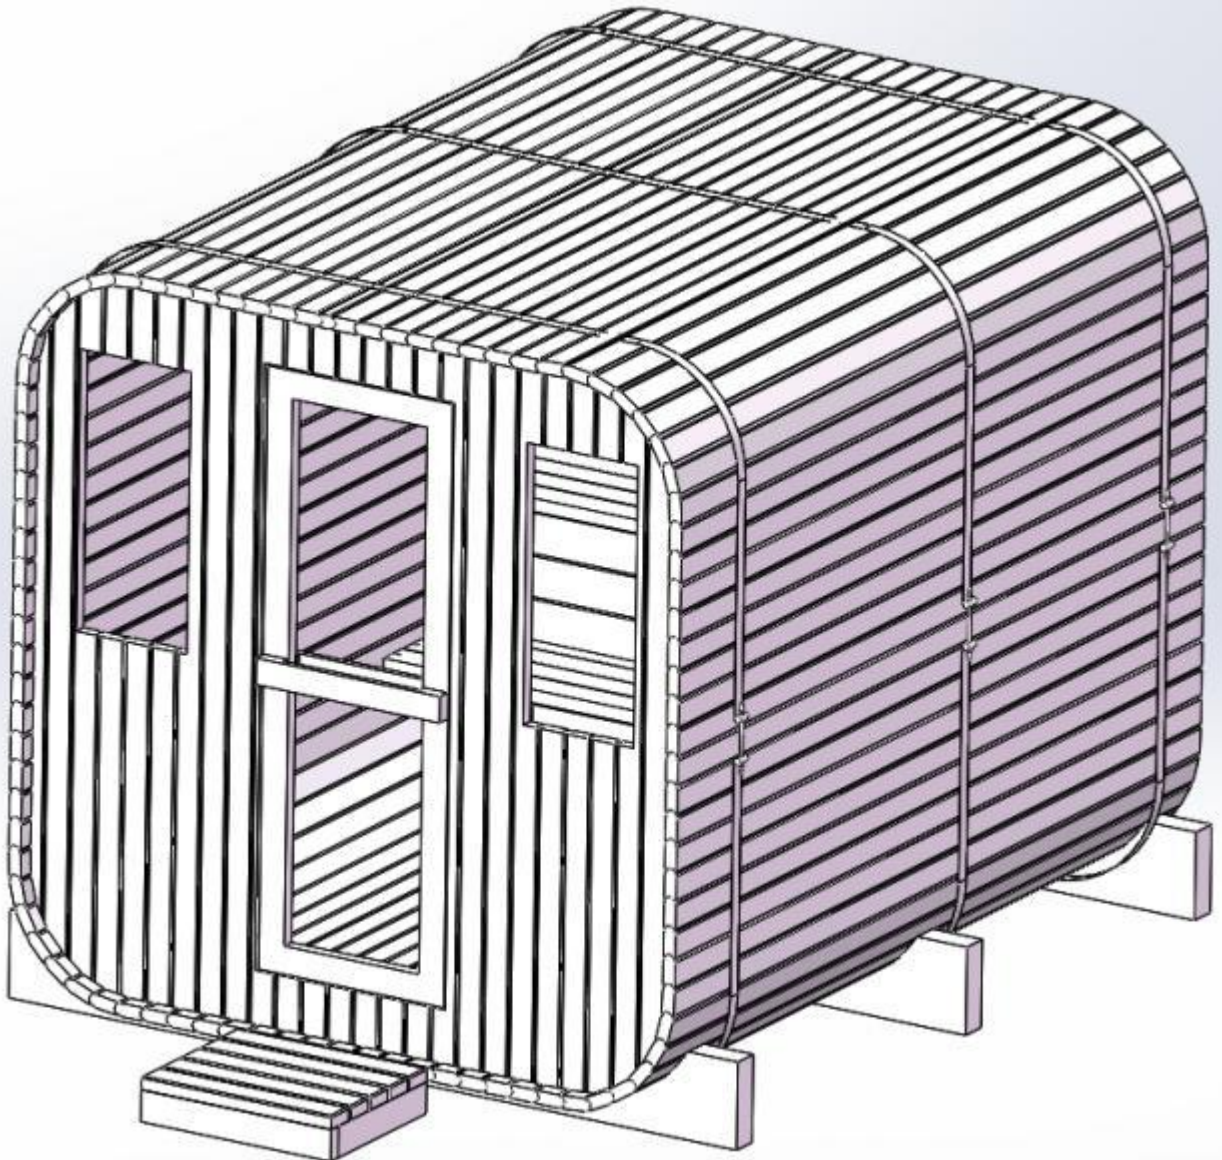


Step 1: Attach the front wall — Secure the left and right wall panels to the door frame using screws.

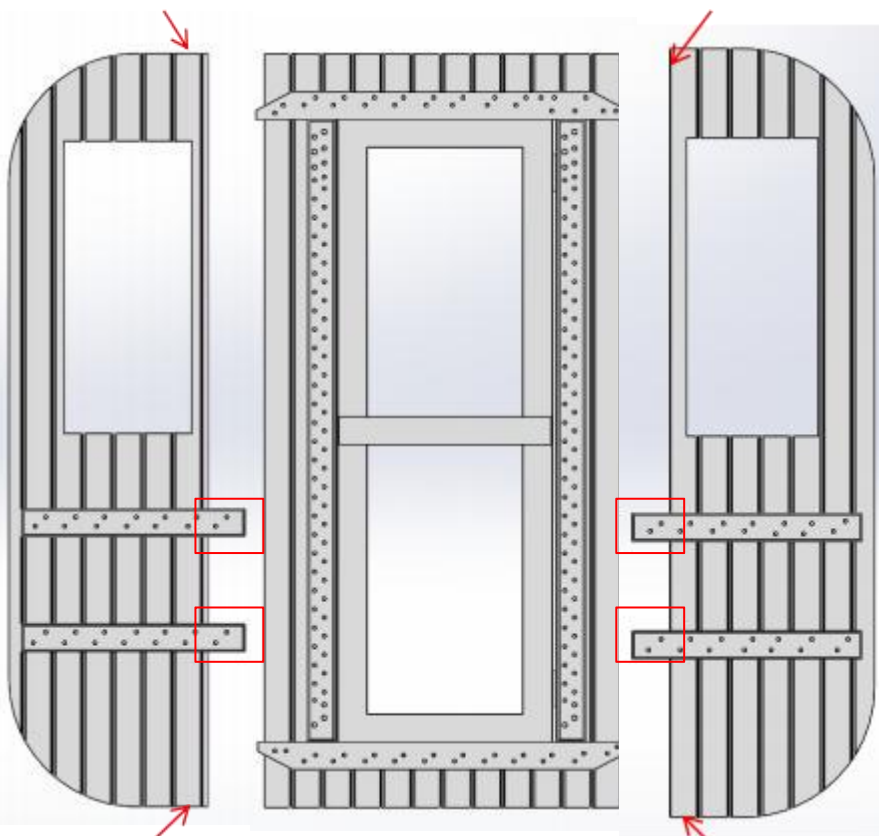


Assemble the front wall — Use screws to join the left panel, right panel, and door frame together."

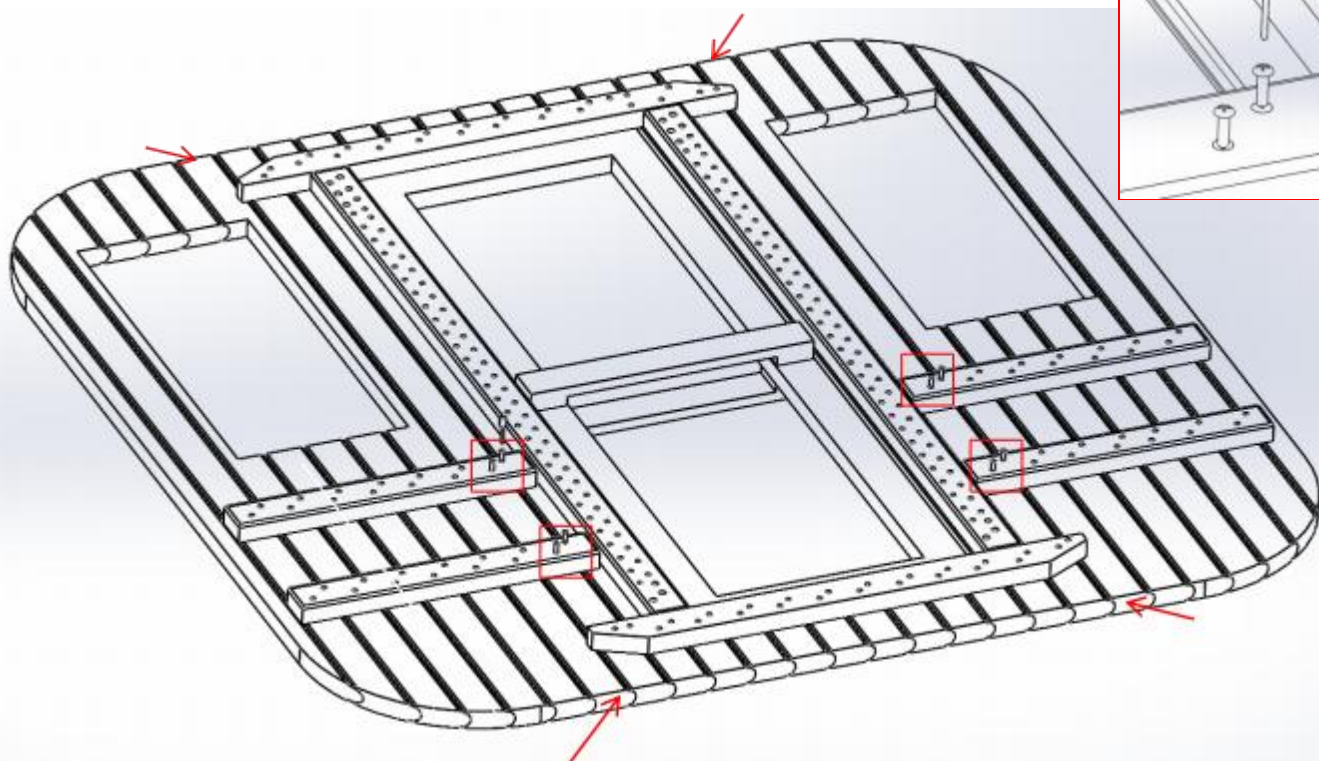


Step 2: Complete the same step for the backwall

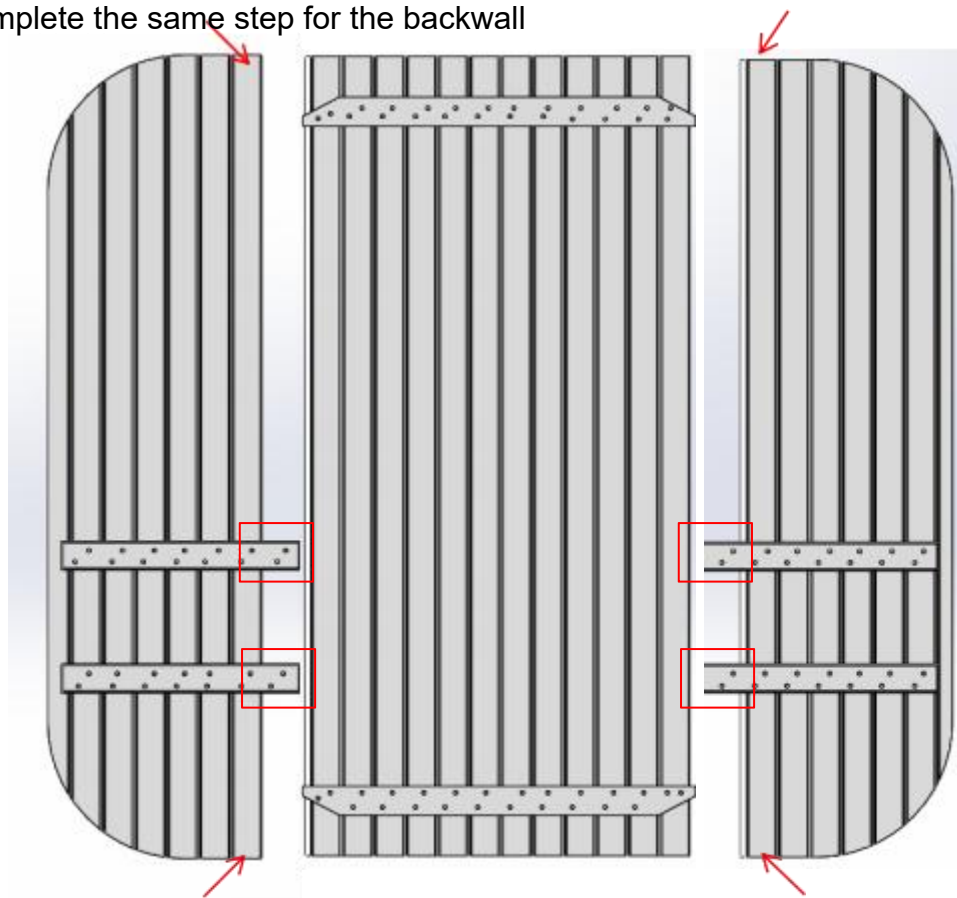



Connect all three parts together

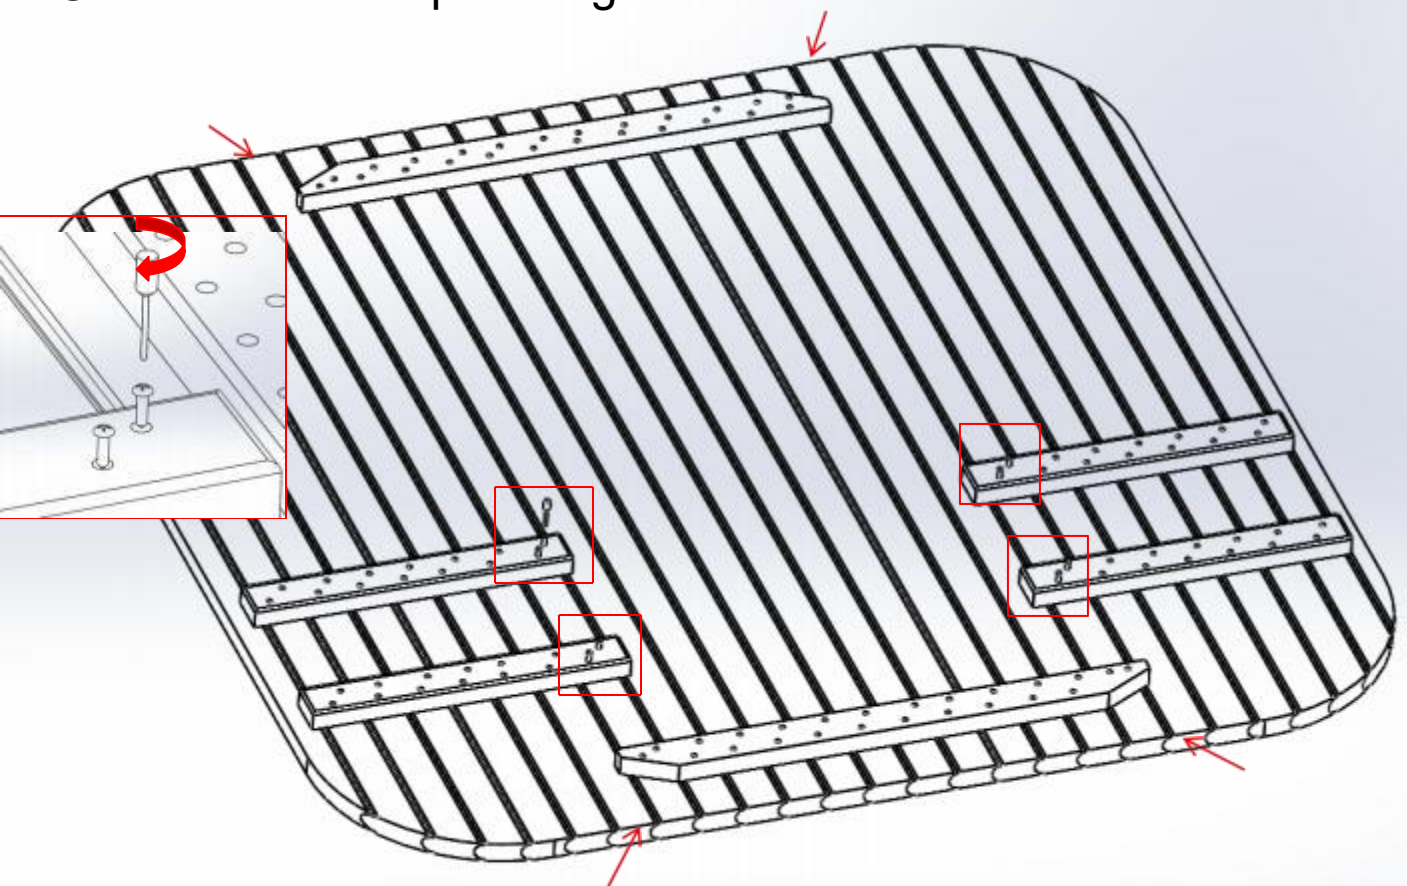


3. Base horizontal and leveled

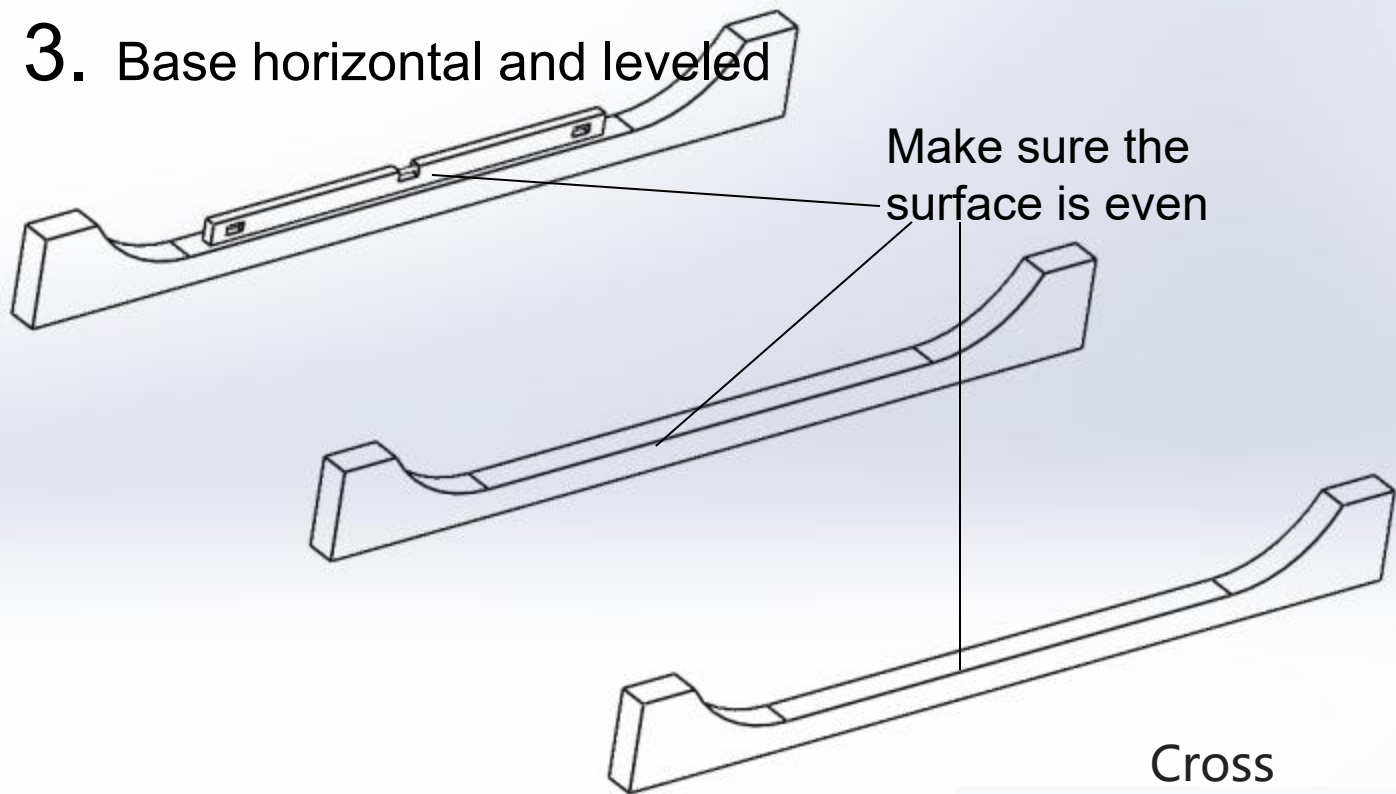


4. Base and the first stave - marked as 0

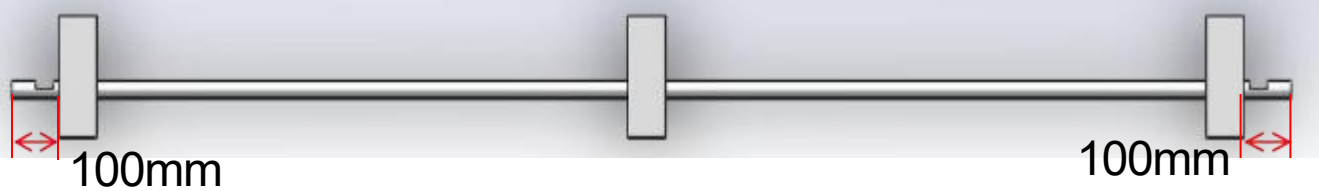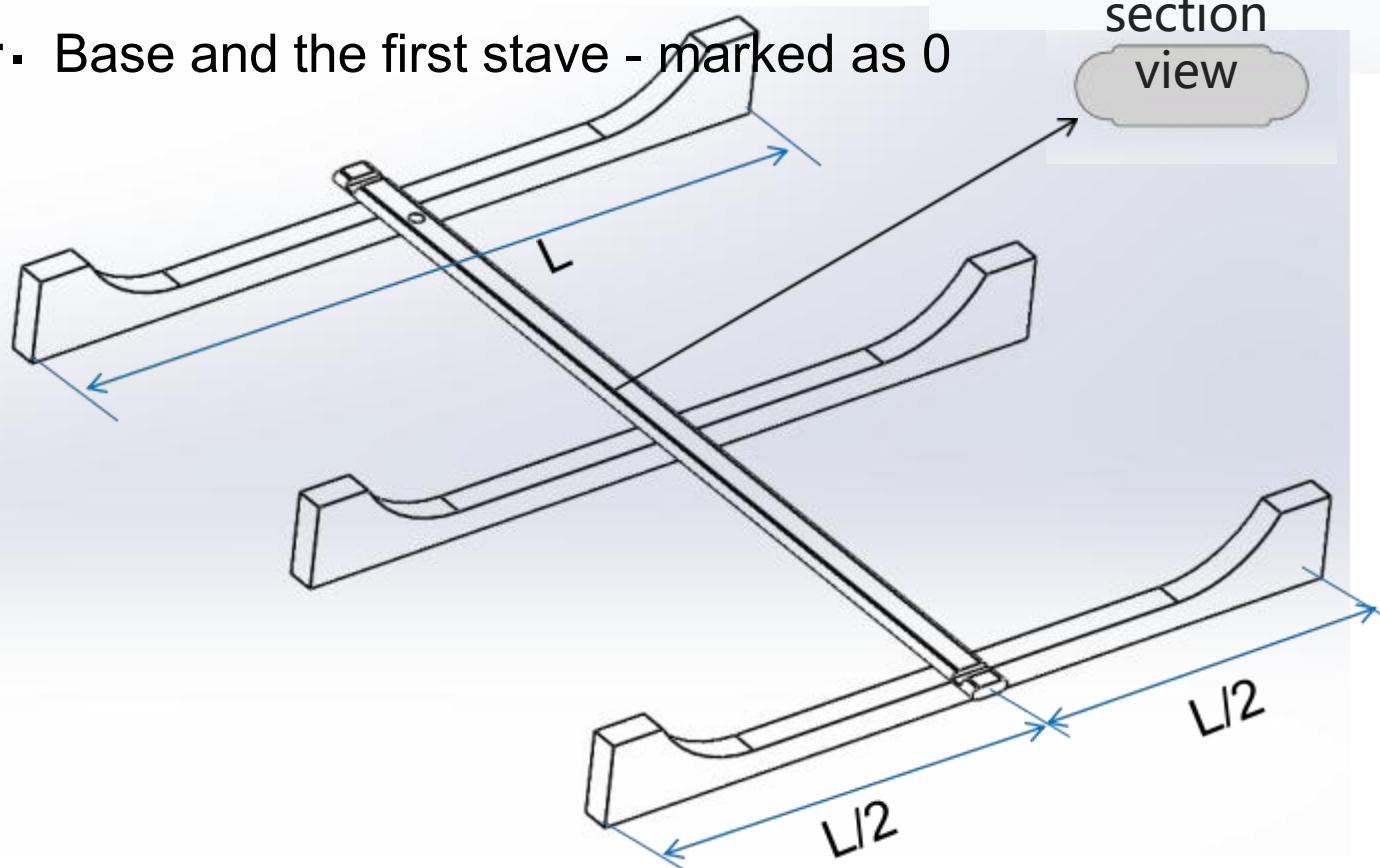

5. Screw in the stave across the base

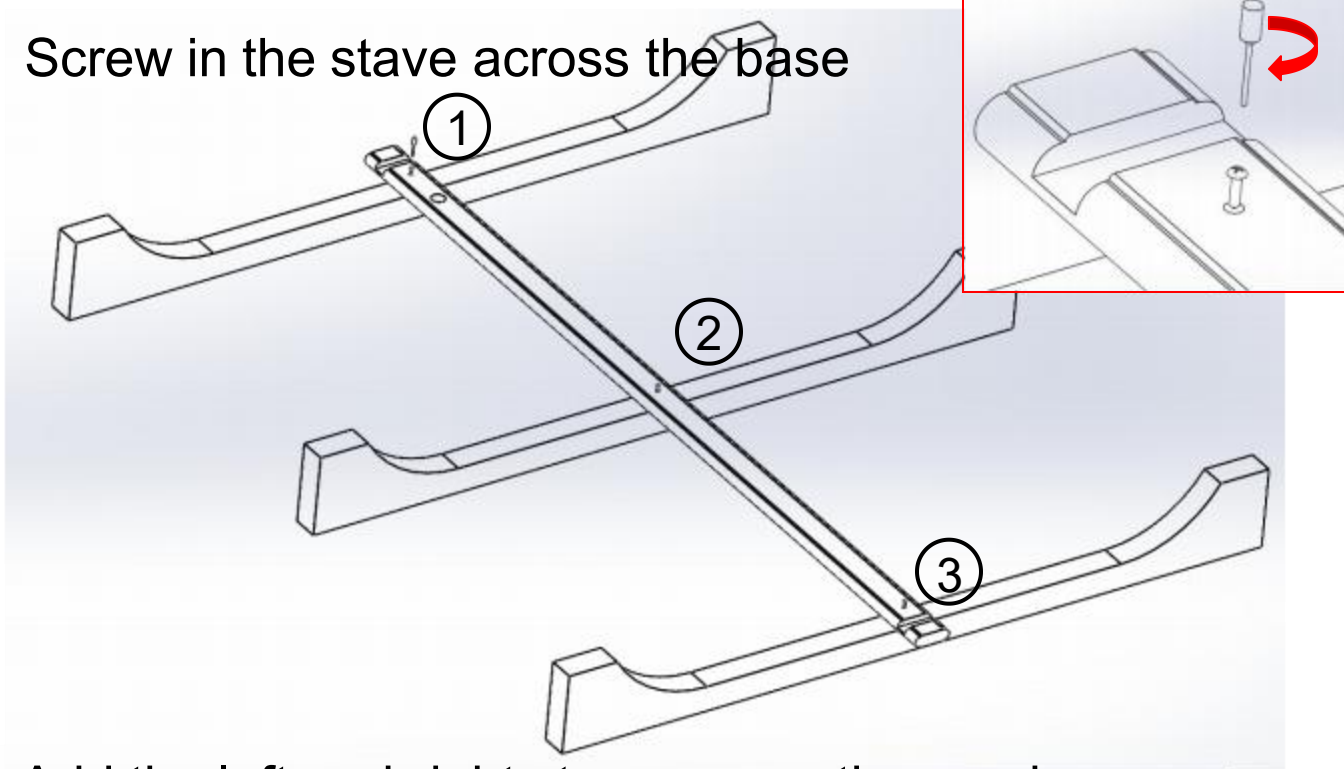


6. Add the left and right stave as per the numbers

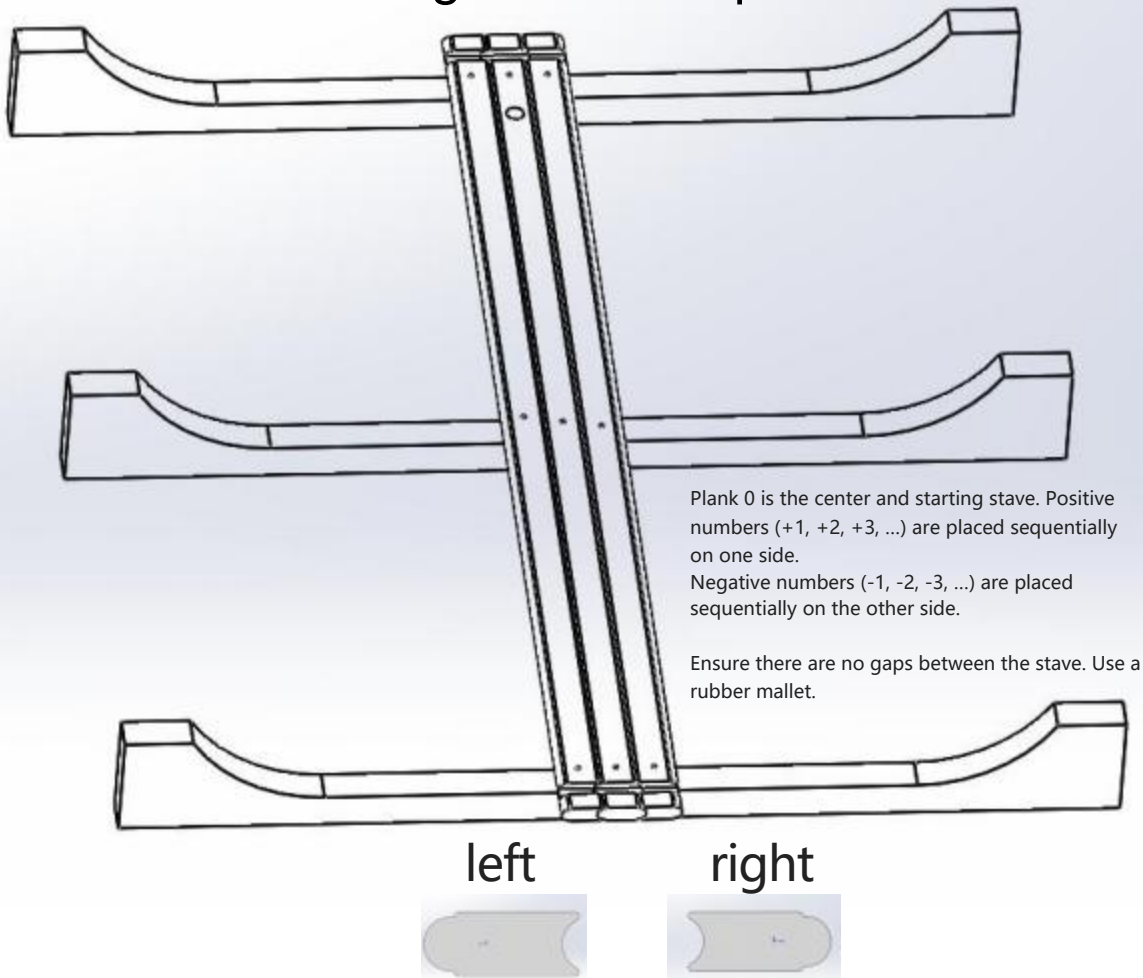


Cross section view


7. Screw the staves - ensure no gaps

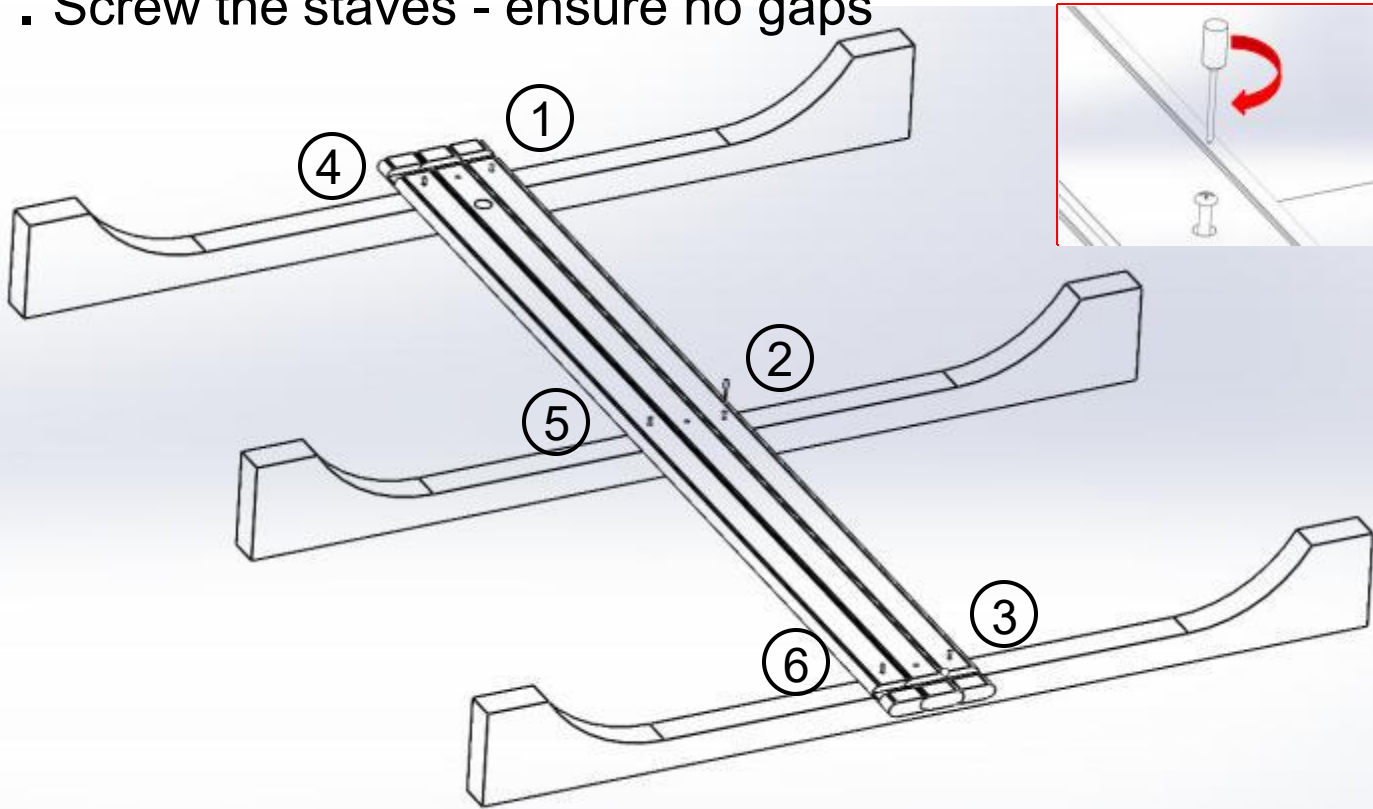

8. Place the wall at the back

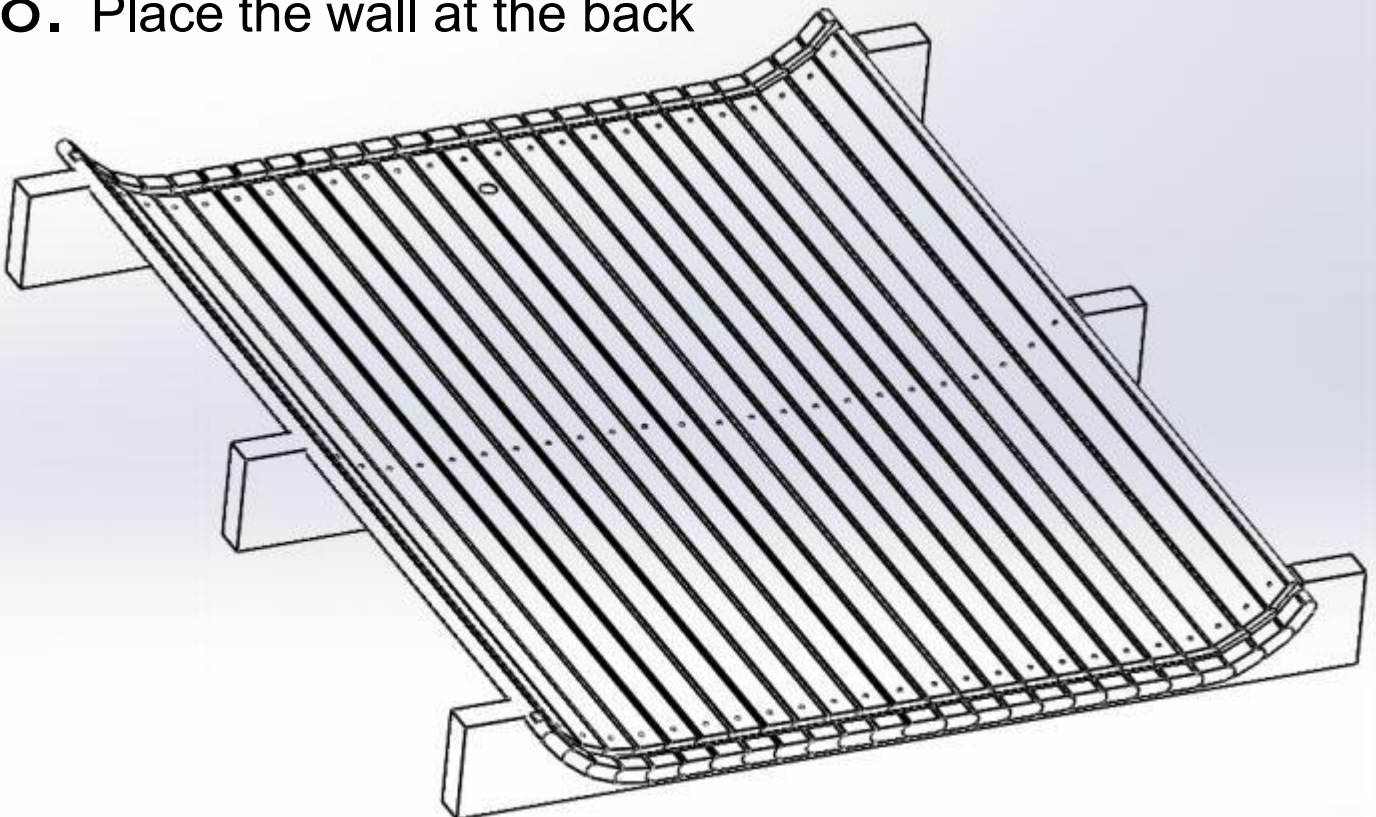


9. Back wall

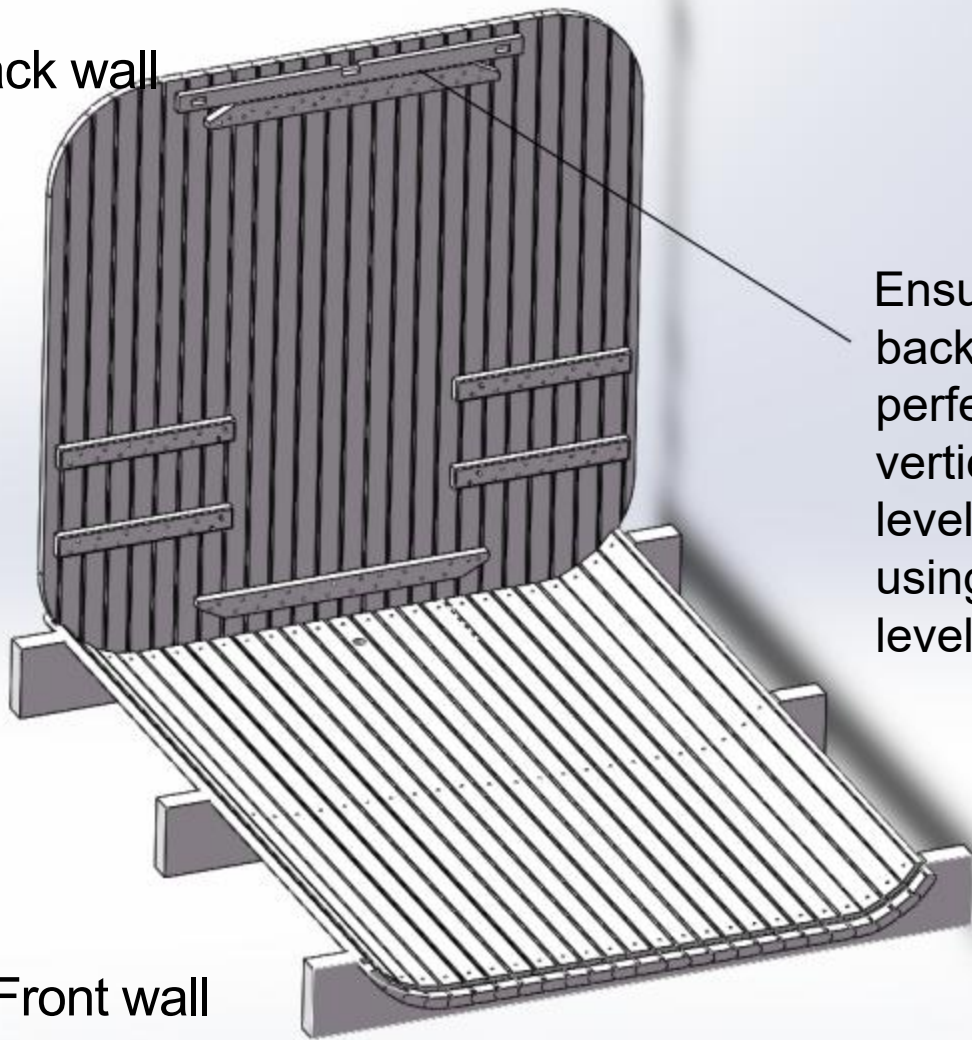


Ensure the back wall is perfectly vertical and level by using a spirit level.

10. Front wall


Make sure it is even with a spirit level

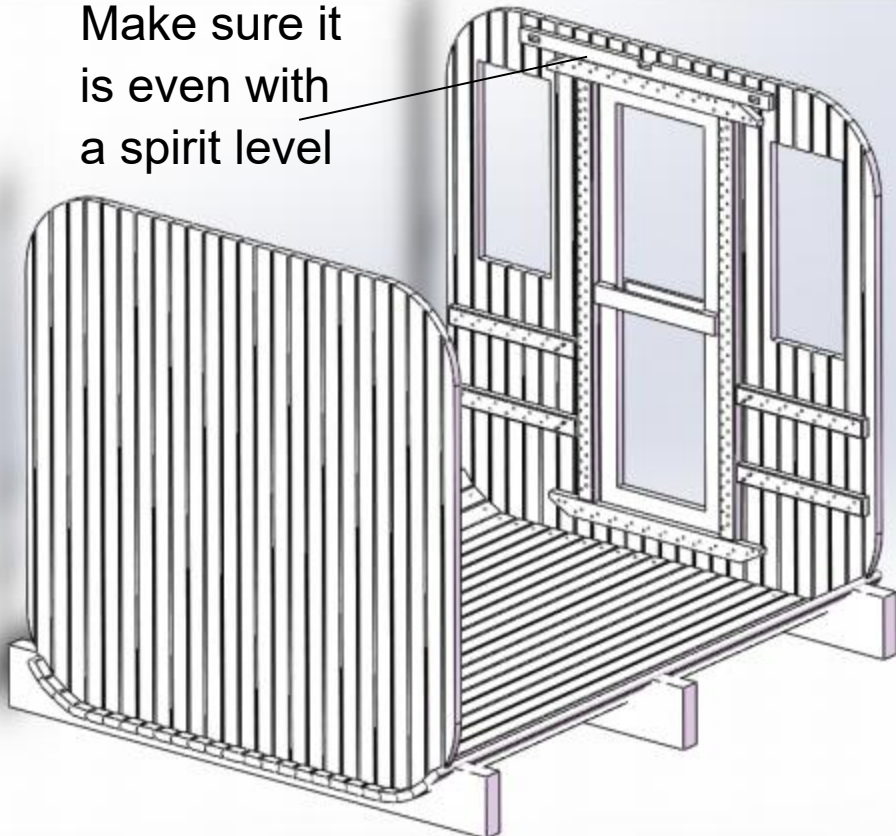

11.

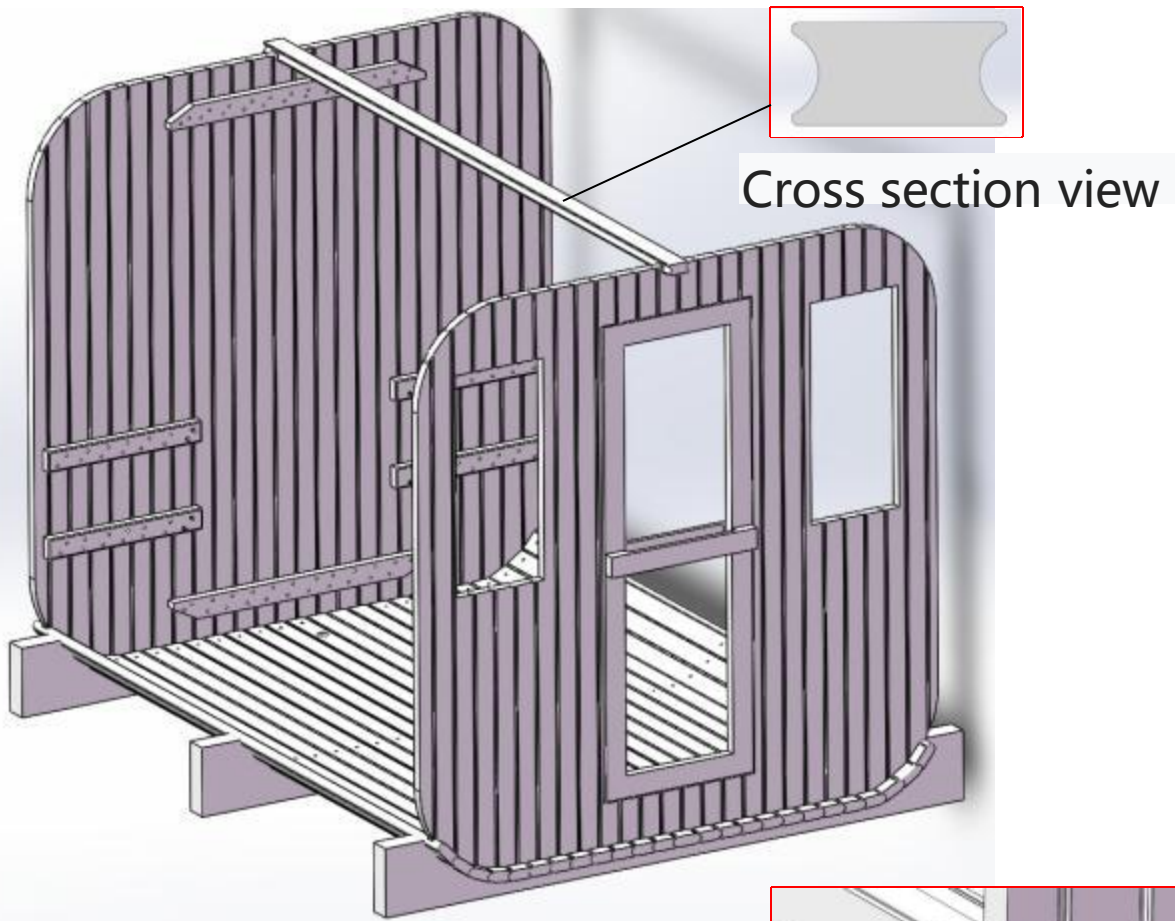


12. Nail each stave securely (with the correct numbers), ensuring there are no gaps between them. Use a rubber mallet to help align the staves as needed. Do not nail the top stave yet. Once all staves are in place on both sides, then proceed to nail the top row

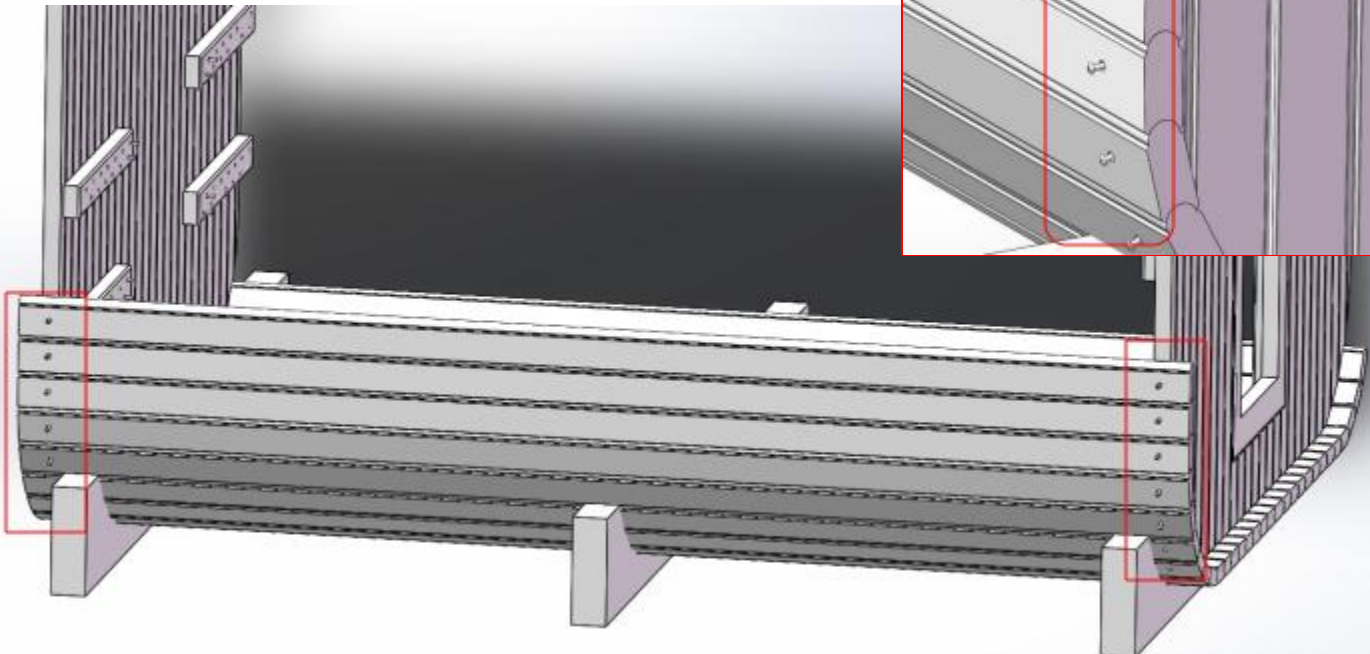

13.


Once one side is fully assembled, begin building the opposite side, starting from the base and working your way upward.

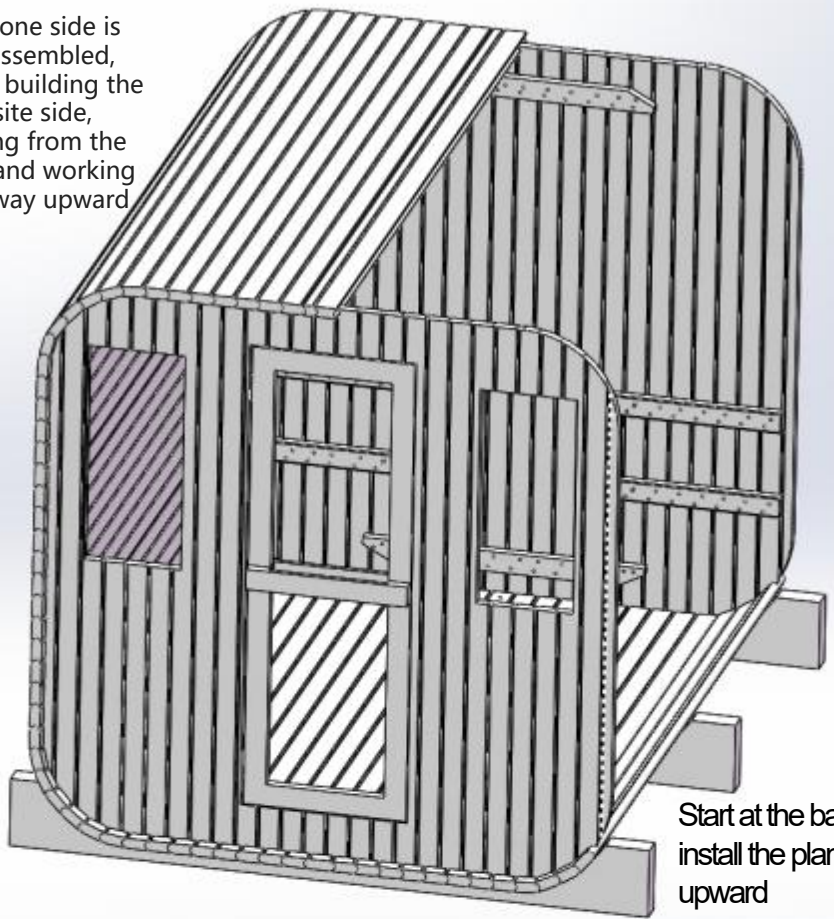


Start at the base and install the planks upward

14.


Once all the staves are in place, fit the belts around the structure. Position the belts close to the cradles to ensure proper support and alignment.

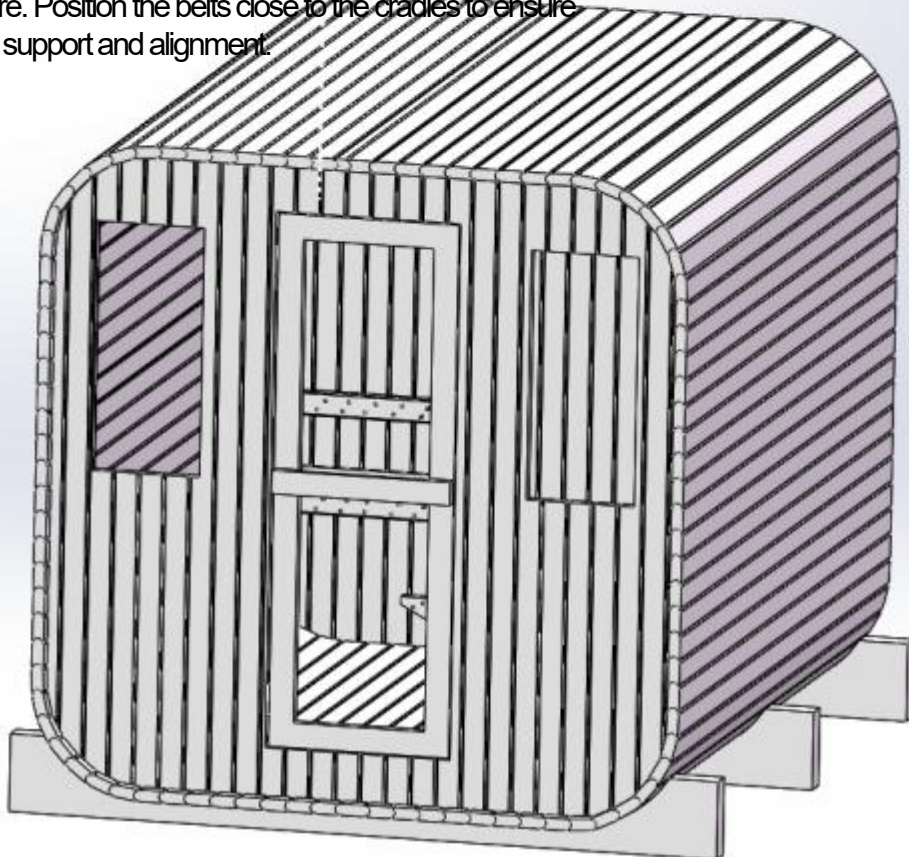



Step 15: Tighten the belts — Do not overtighten; tighten just enough to hold all components securely in place. Use a rubber mallet to ensure no staves pop out during the process. Once the belts are properly secured, proceed to nail all staves as required.

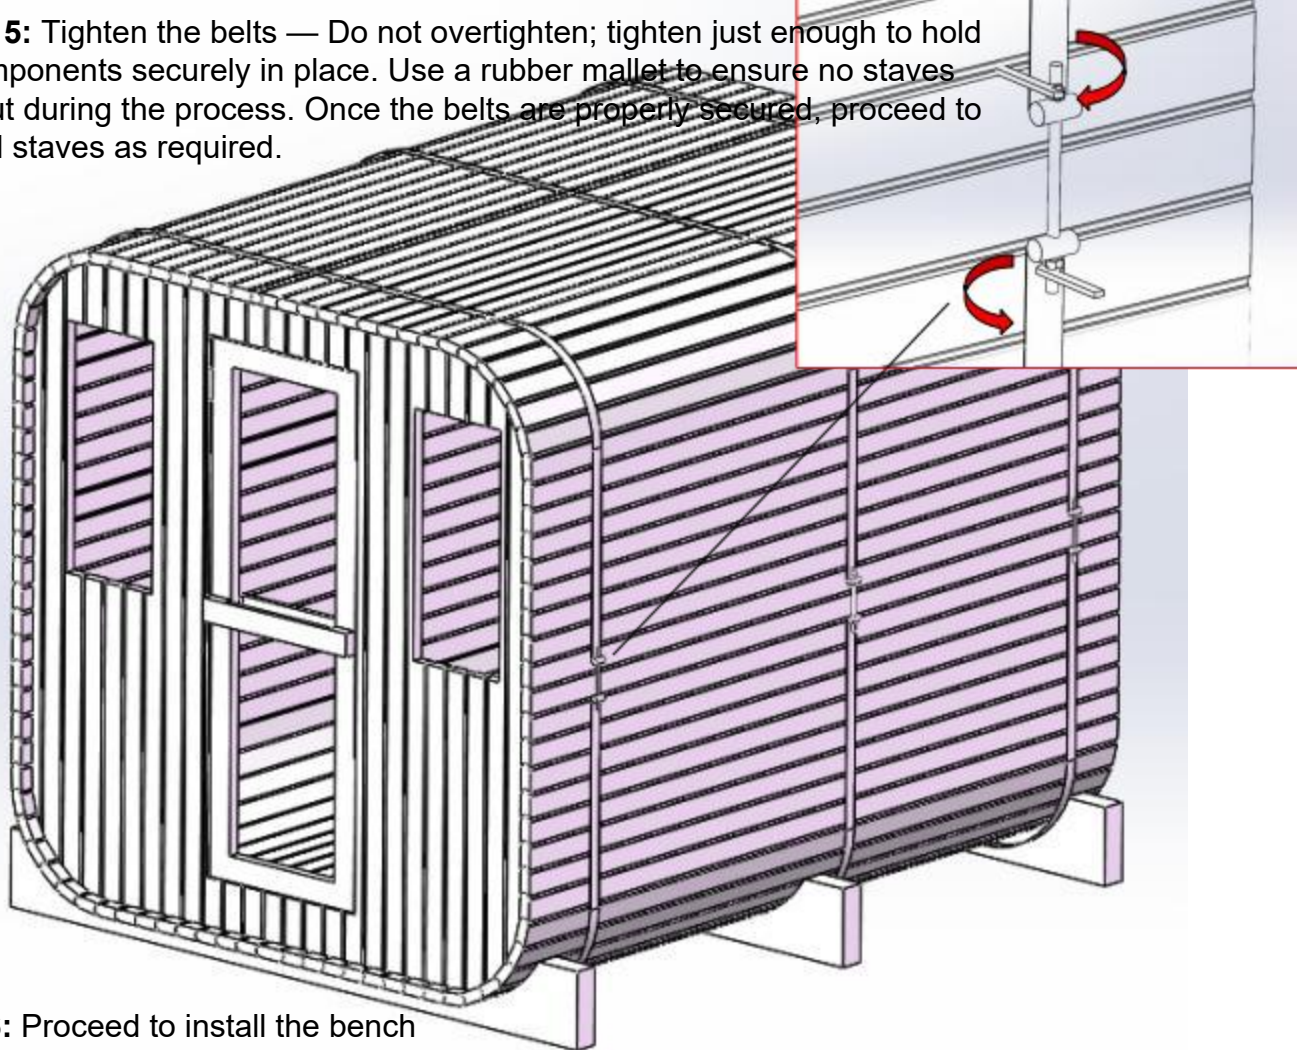



Step 16: Proceed to install the bench

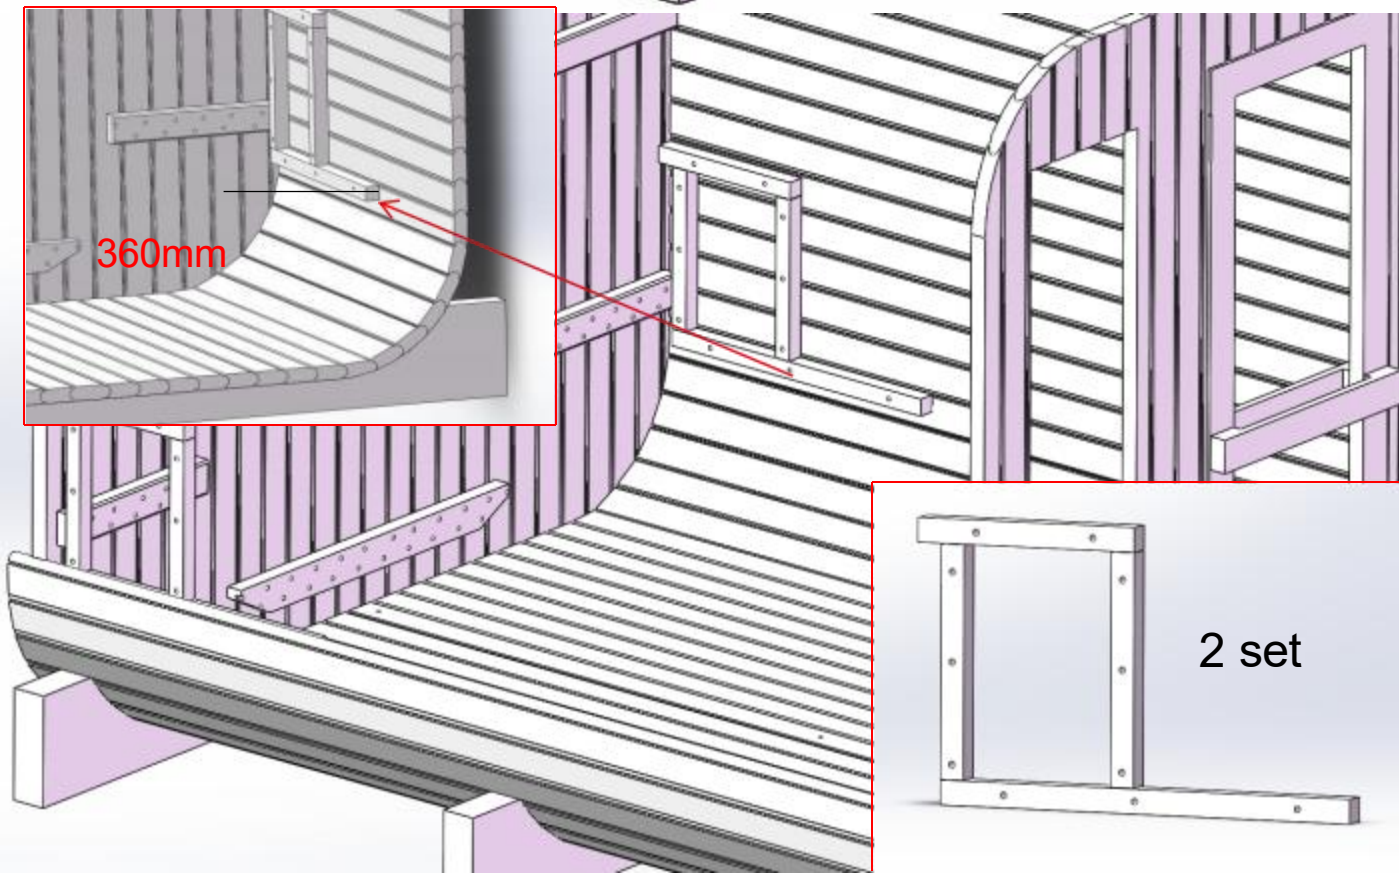

17. Screw the bench and backrest

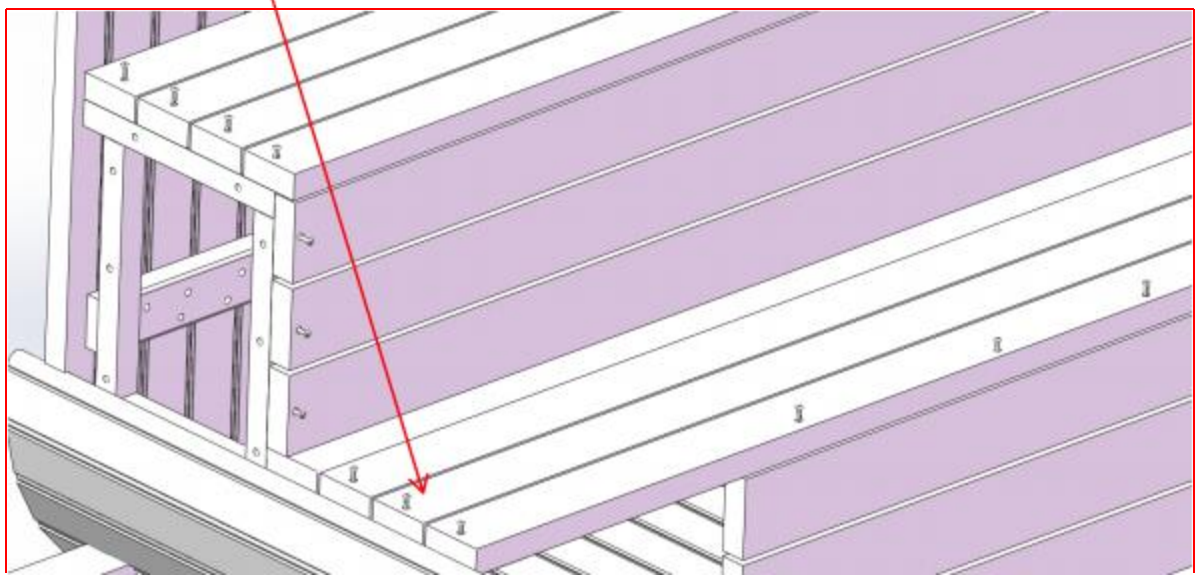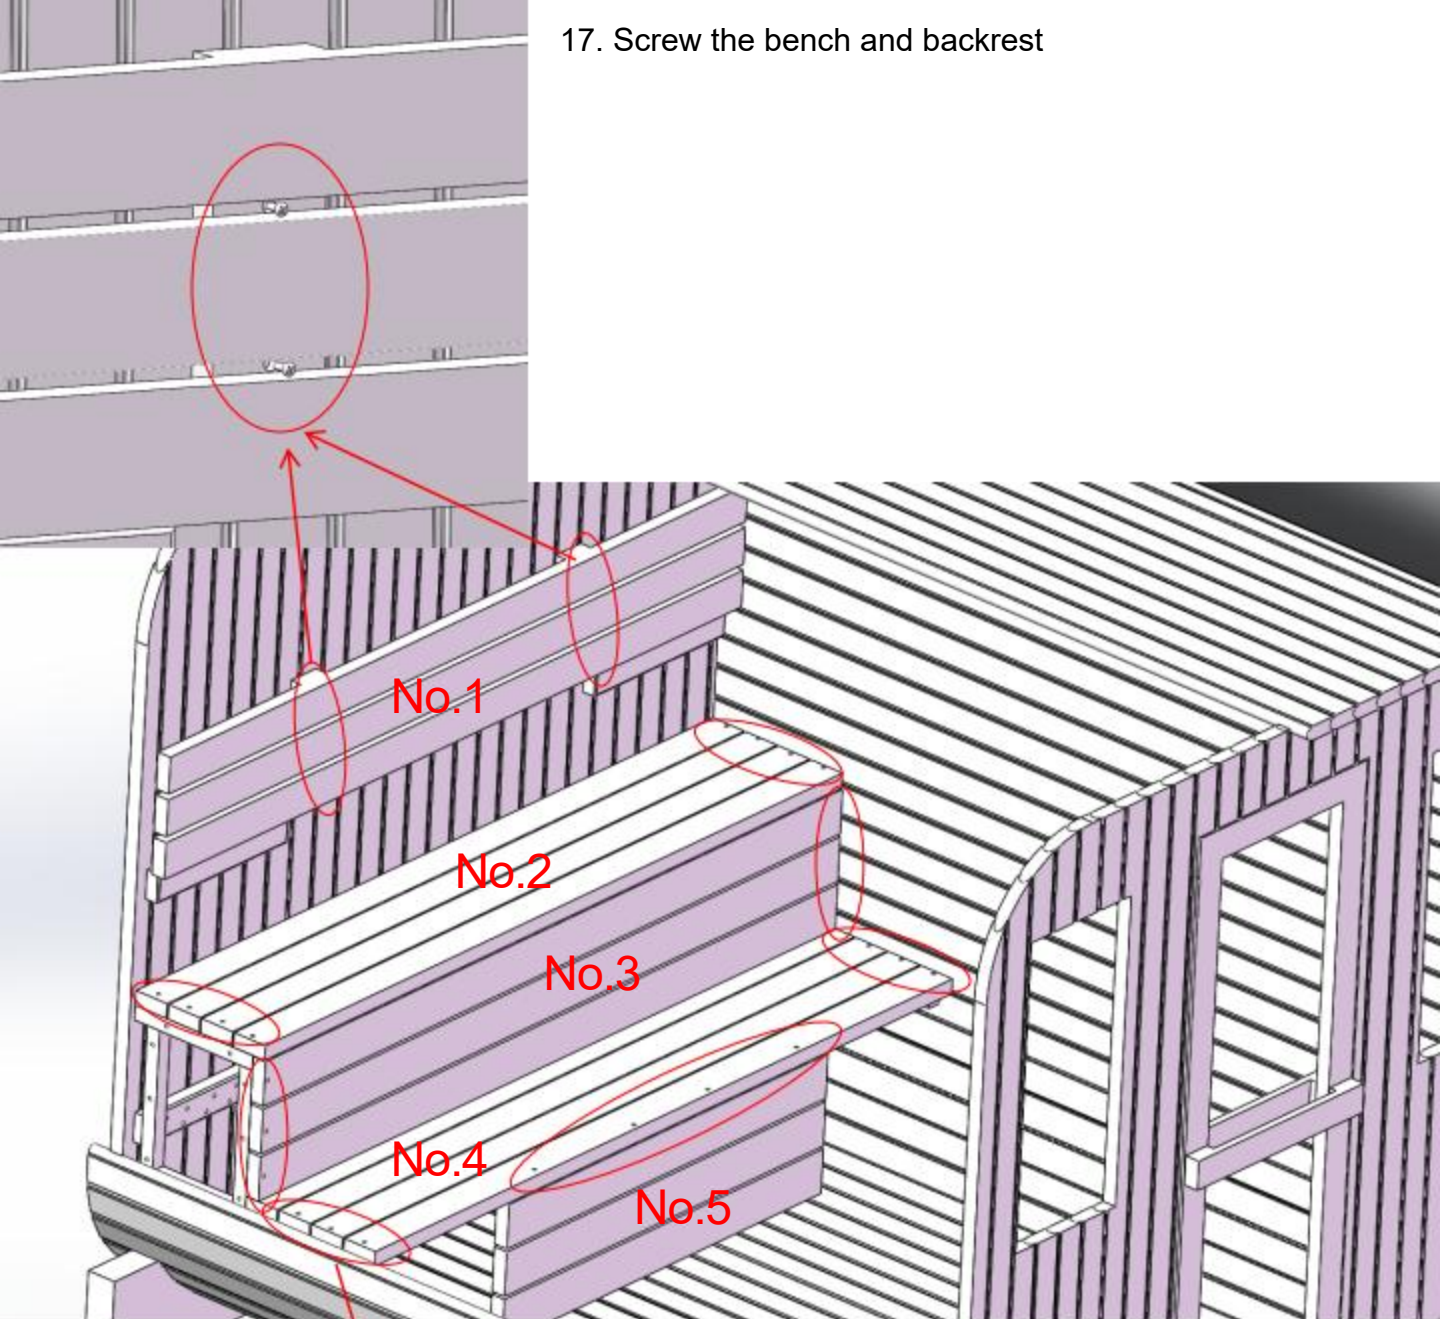

18. floor matt

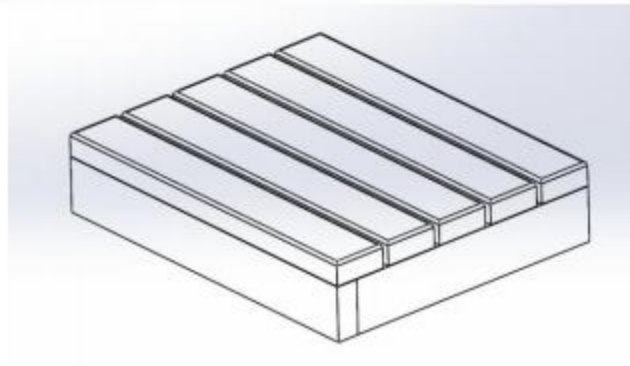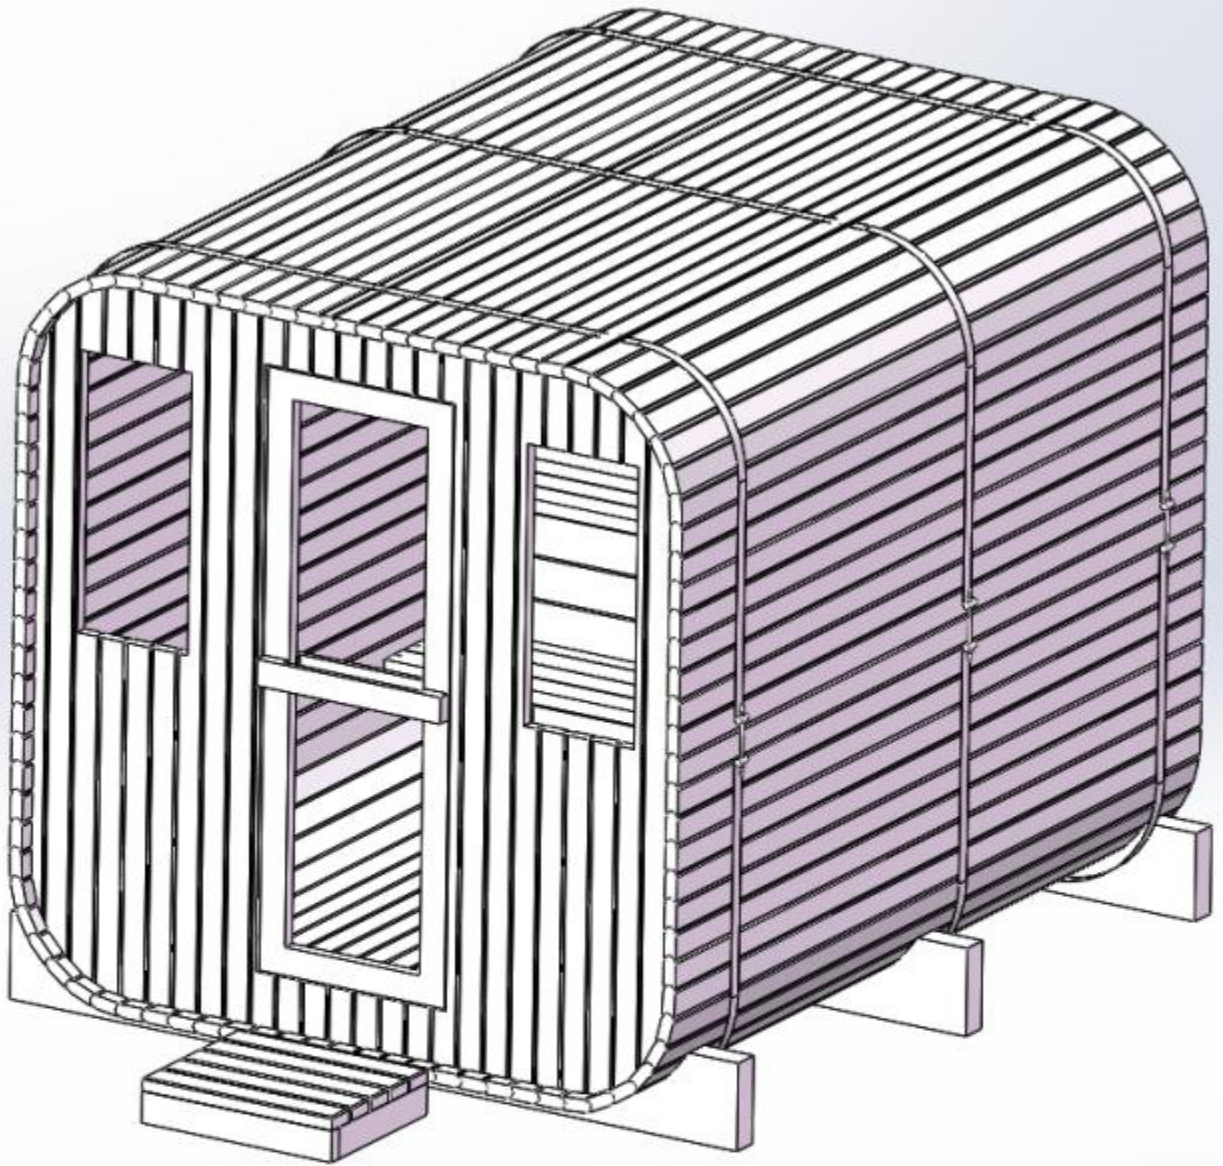

1 set