
Assembly Instructions

33" Lazy Susan Corner Cabinet

1.

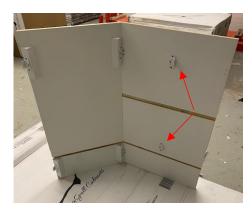

Attach right back/side panel to back panel. Ensure this is the panel with clips attached.

2.



Repeat process with the left side/back panel.

3.



Attach the left side panel.

Skip ahead to step 11, if you do not want to use

4.



Flip lazy susan tray upside down and line up the center of the turntable hardware with the predrilled hole on the tray.

5.



the lazy susan component in your cabinet.

Partially pre-drill holes at each of the 4 holes in the turntable hardware.

6.



Using the measurements provided at the end of these instructions, mark the two points (A & B) on the shelf.



Using a hole saw (1 ¾"-2"), cut a hole at point B.
Ensure you cut the hole at Point B.

8.



Line up the center of the turntable hardware with the remaining point. Attach the hardware to the shelf using 4 black wafer head screws provided.

9.



Flip the tray upside down. Then flip the shelf upside down. Using the hole you cut previously, line up the holes in the hardware with the predrilled holes in the tray. Partially attach the screw, rotate the hardware and repeat. Once all four are partially screwed in, go back and fully fasten the screws.

10.



The turntable is now attached to the shelf.

Repeat this process for the remaining turntable and shelf.

11.



Set the frame into the notch on the bottom shelf.
Using the groves on the side panels, slide the bottom shelf into place. Ensure the shelf is securely in the grove.

12.



Drop the top shelf into place, ensuring it rests into the groves in the side panels.






Put the right side panel into place, ensuring both shelves are resting in the groves.

14.



Attach the second face frame piece ensuring the side panel fits fully into the groove.

15.

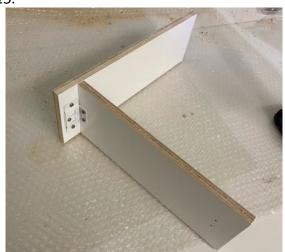

Attach the two toe-kick pieces together as shown.

16.



Tilt cabinet onto its back and attach the toe kick. You can also use this position to get easier access to hard to reach areas.

17.



Attach hinges and magnet pieces to the doors, then connect doors together.

18.



Mount hinges to face frame. (hinges can be mounted to either side of the frame.) Then attach doors to the hinges.



