




www.offboard.com
Inserts for the 15 Inch Shield

Insert Instructions for the Center Plug-in

The 15 inch shield is already set for a one inch mooring line. If that is what you are using, the shield is ready to be used. If your mooring lines are less than one inch, use a plug-in to reduce the size of the center hole to ensure a tight fit.

The following are instructions to adjust its size.

This package holds a set of four plug-ins for a 15 inch shield. There is one of each for 1/2, 5/8, 3/4, and 7/8 inch mooring line. Select the one that matches the size of your mooring lines. Keep the unused plug-ins in this box for possible future use.

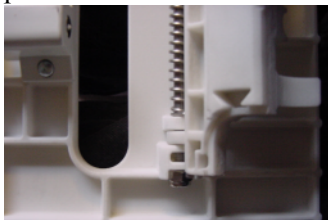

After selecting the right size, open the spring door and insert the plug-in in the end of the door. It is designed so that it goes in only one way.

The fit is intended to be snug. Do this on both shields.


Due to various sizes of ropes and their age, it might be necessary to select the next smaller or larger size plug-in.



Make sure that the plug-in is fully seated in the door as shown in this picture. It should snap into place.



Close the door and the shield is ready for use.

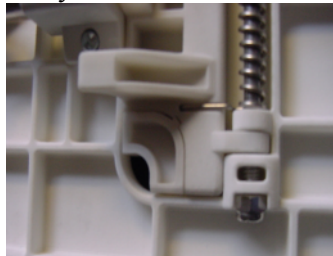

The Plug-in in this example is for the 1/2 inch mooring line.