

FRAMELESS GLASS BRACKET INSTALLATION



U-CHANNEL BRACKET



SPACER




1 1/2" SCREW



FRAMELESS GLASS BRACKET W/ PLASTIC INSERT




TOP CAP W/ PREDRILLED HOLES FOR FRAMELESS GLASS BRACKET

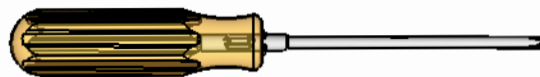


TOOL NEEDED TO INSTALL BRACKET

PHILLIPS SCREWDRIVER W/ MAGNETIC HEAD

NO DRILLS

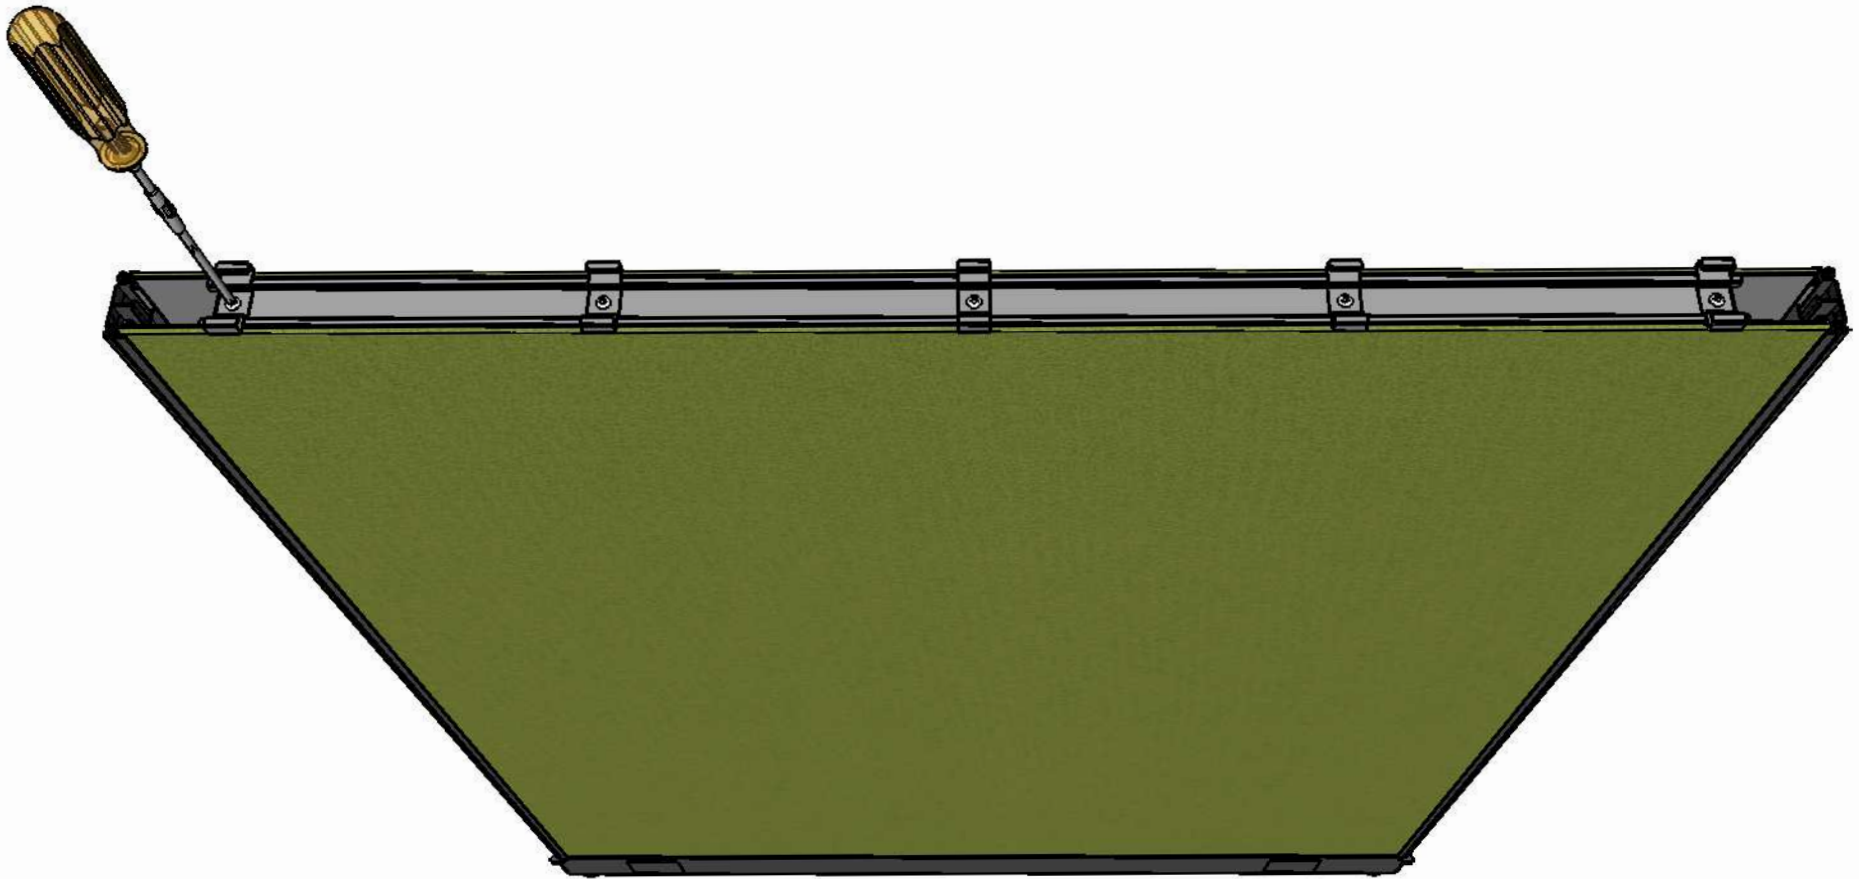

1. Remove top cap from panel
2. Remove top cap clips from panel

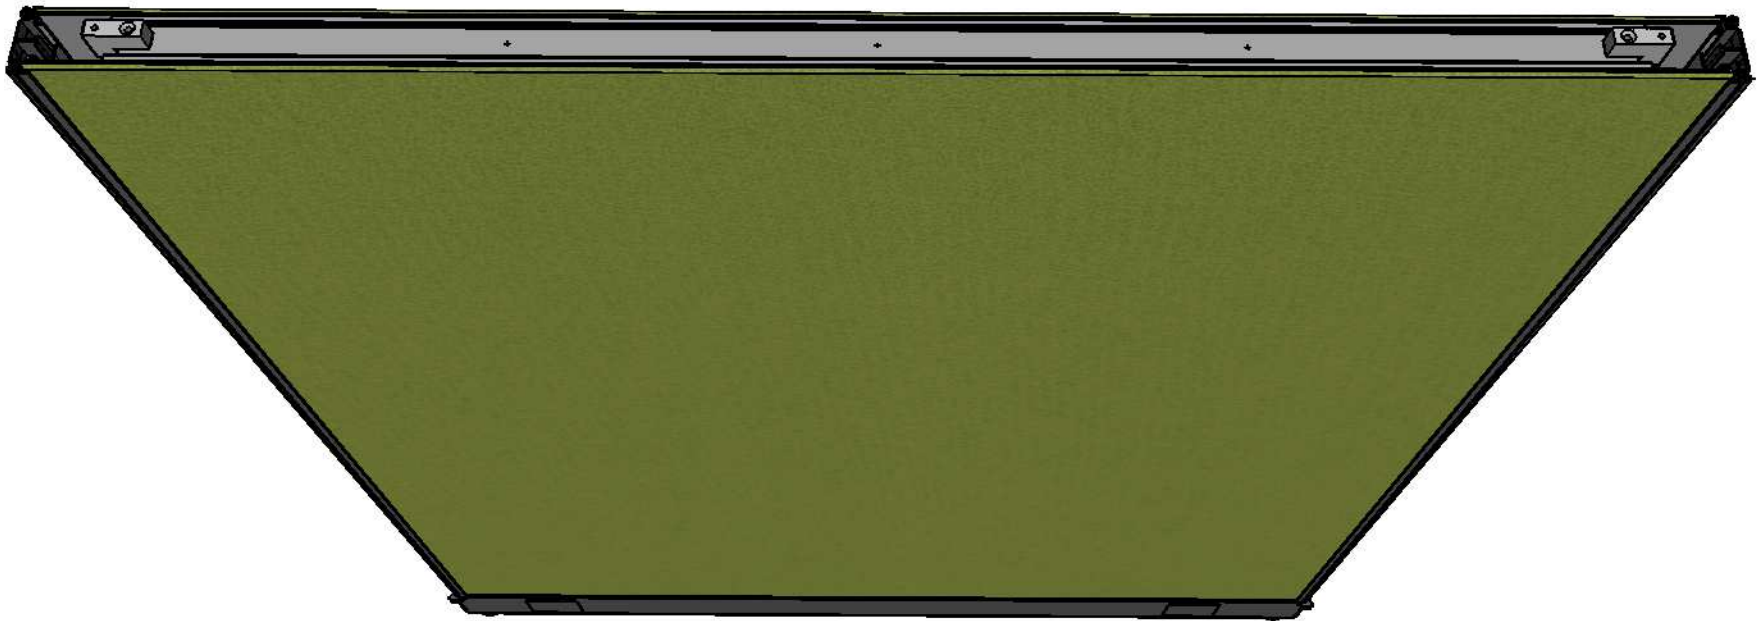


3. Slide U-channel bracket over the end of each side so the hole matches up with the top cap clip hole




4. Hand tighten screws that RSI provided so it goes through the U-channel bracket, top cap clip hole and into the bottom side of the U-channel bracket


Note: Do not over tighten screws!

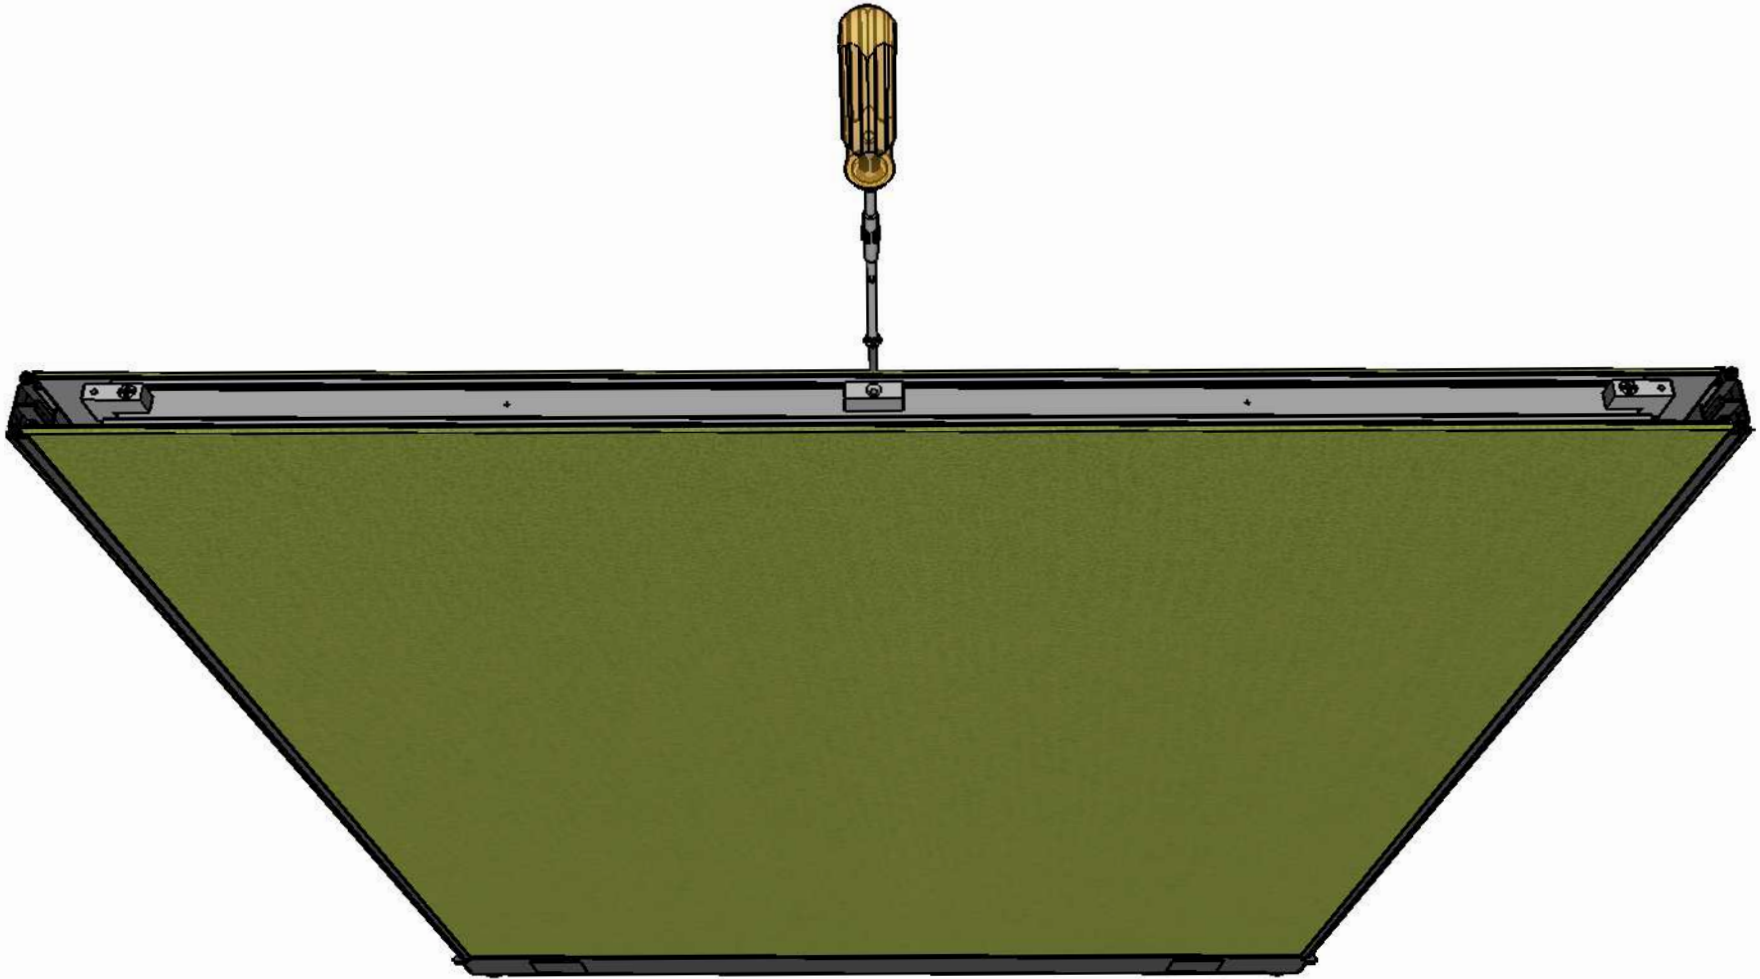


5. Grab spacer bracket and hand tighten it through the bracket and into one of the top cap clip holes

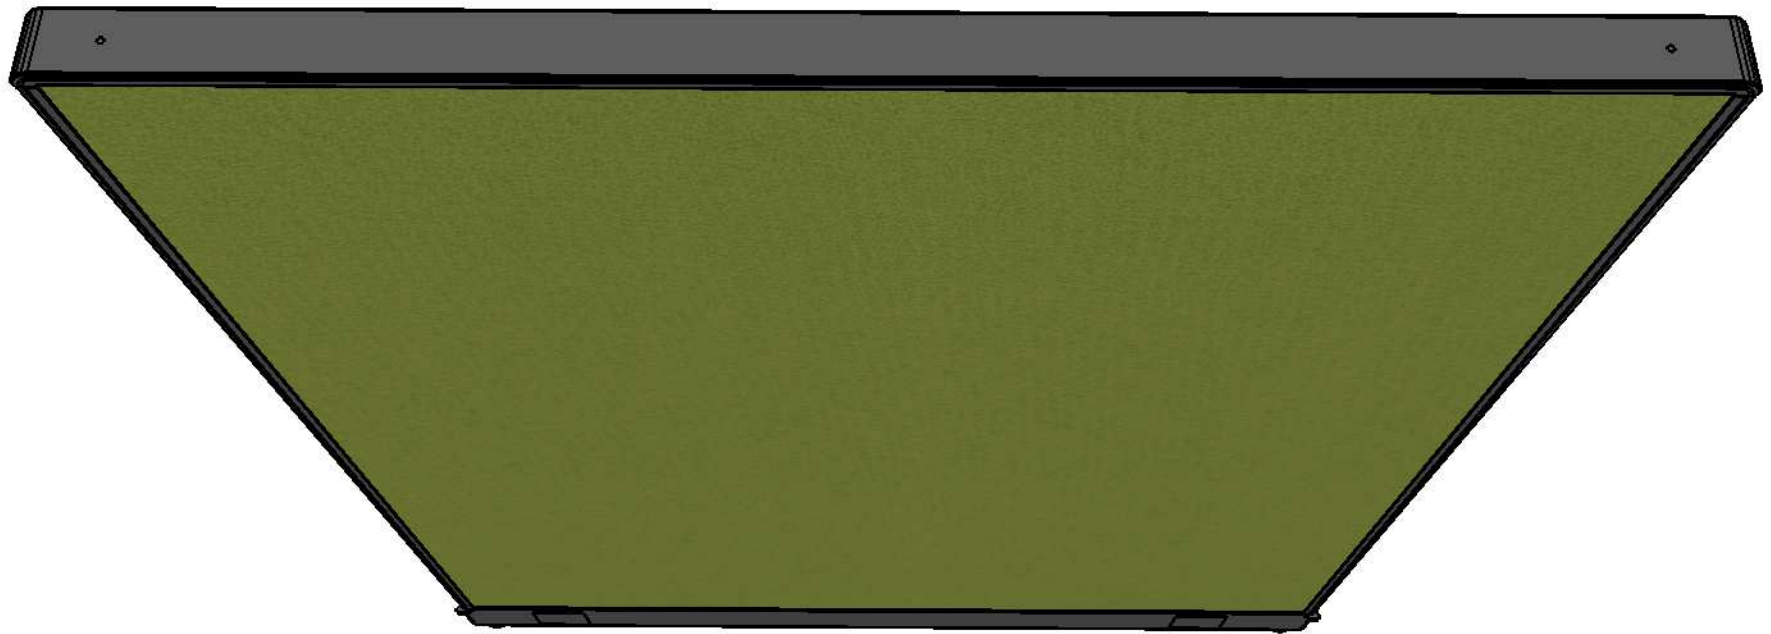


6. Place new top cap on top of the panel with pre-drilled holes

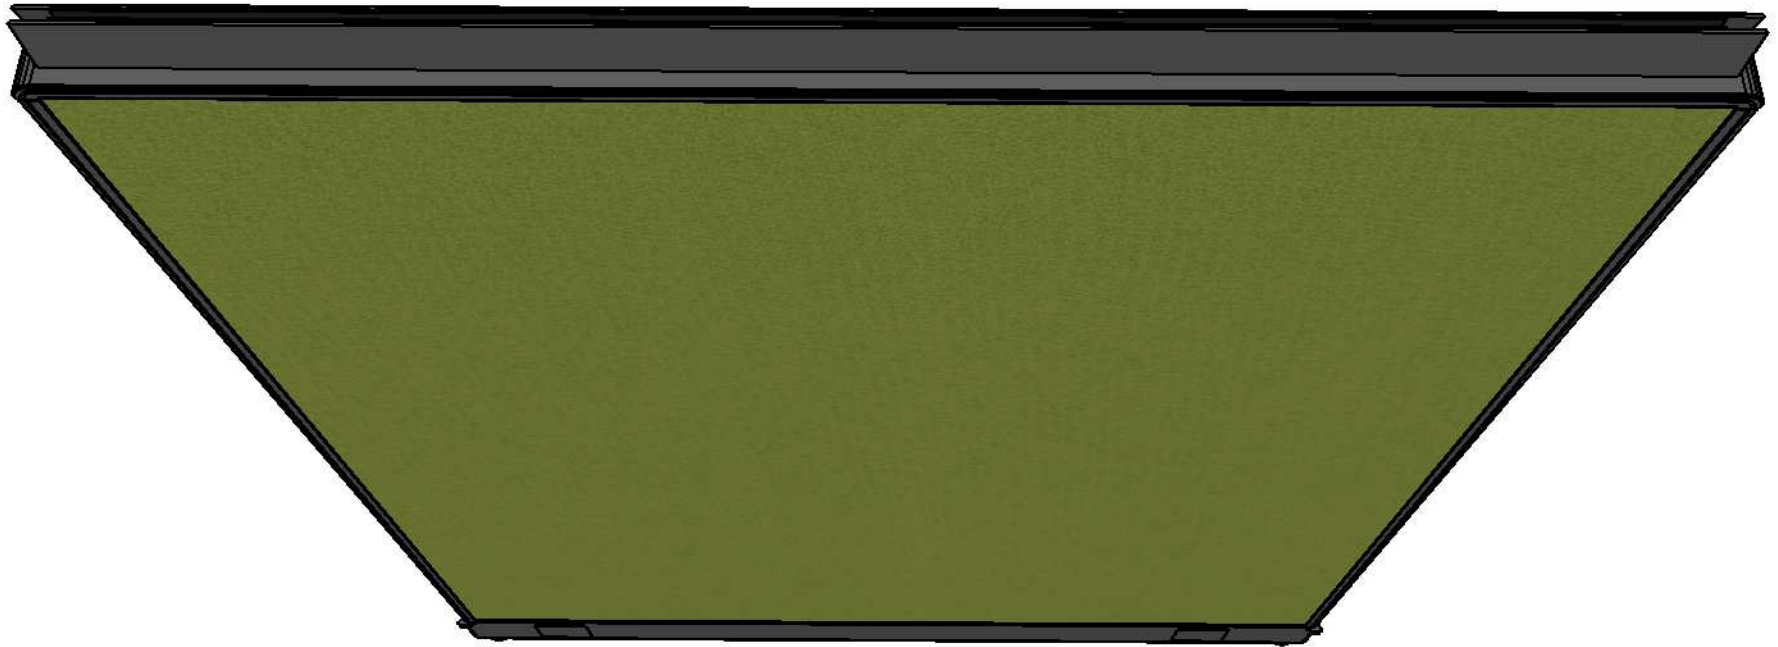


7. Place frameless glass bracket on top of the top cap

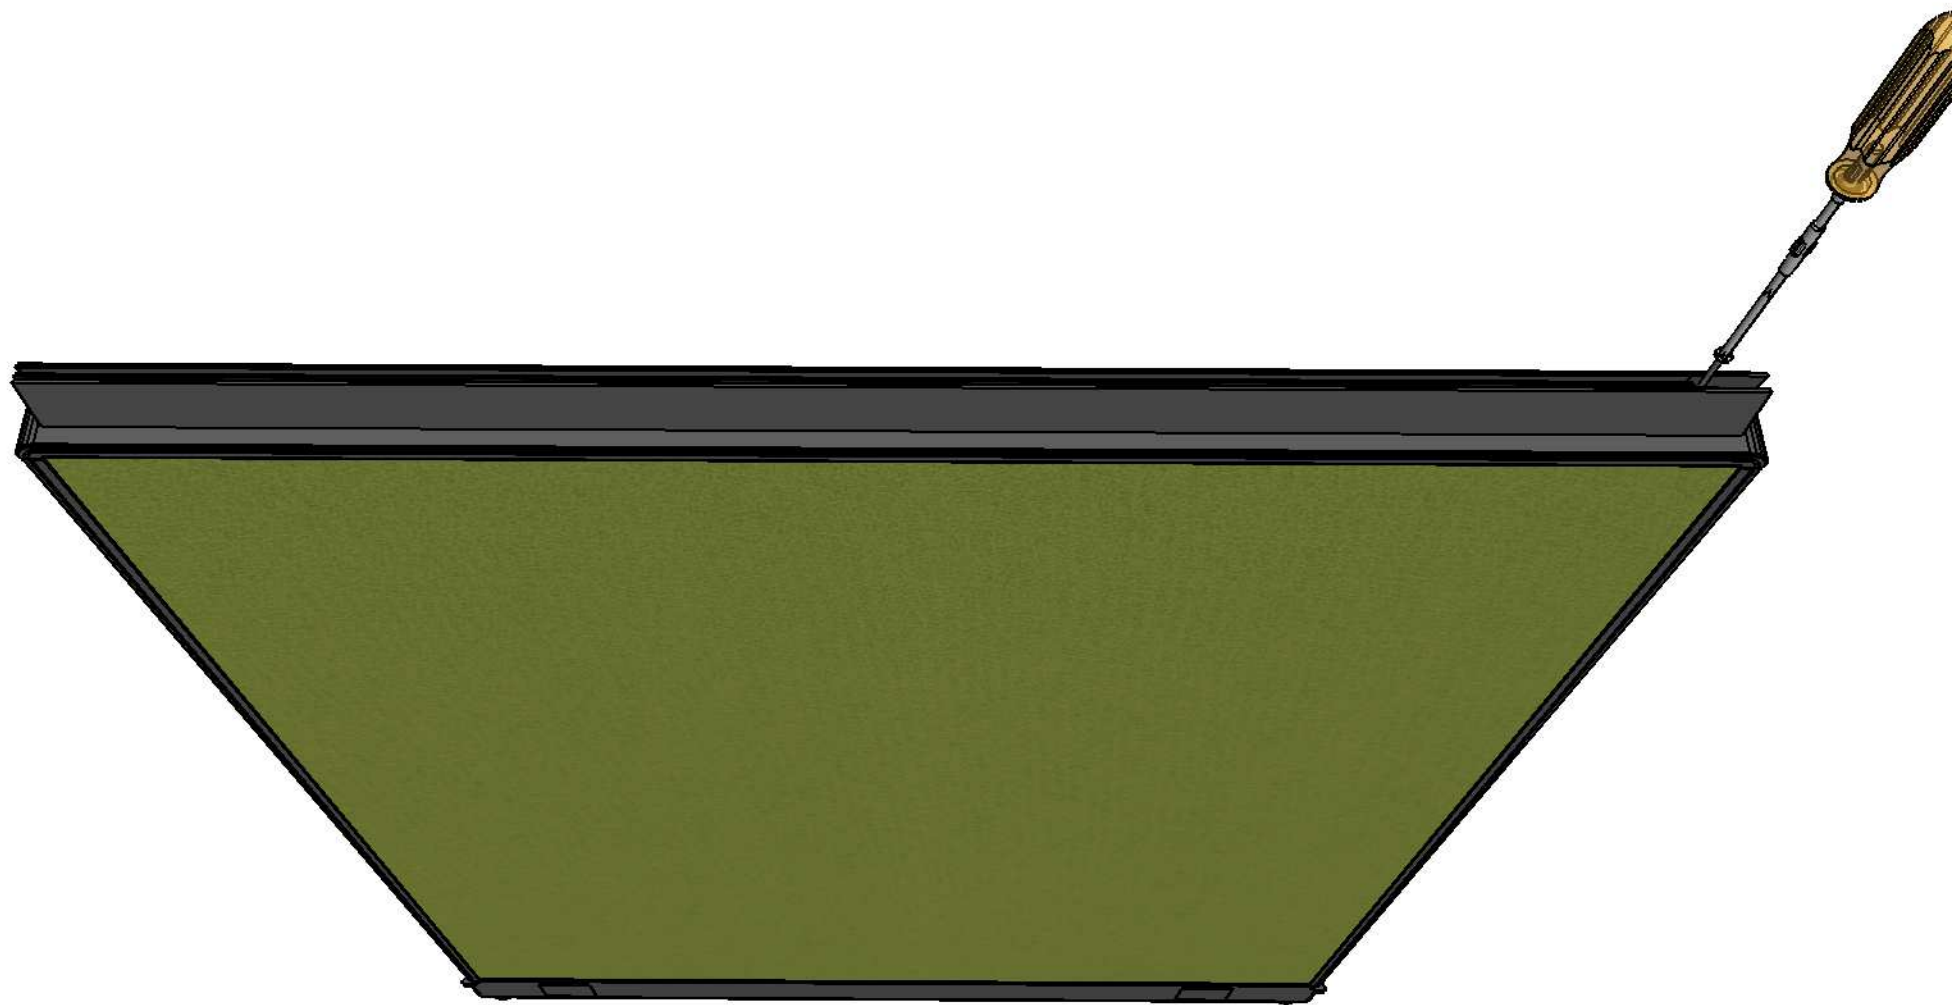

8. Move plastic insert to the side and match up the hole in the frameless glass bracket with the hole in the top cap. Hand tighten a screw through the frameless glass bracket, top cap hole and into the u-channel bracket that is secured to the panel. Repeat on the other side

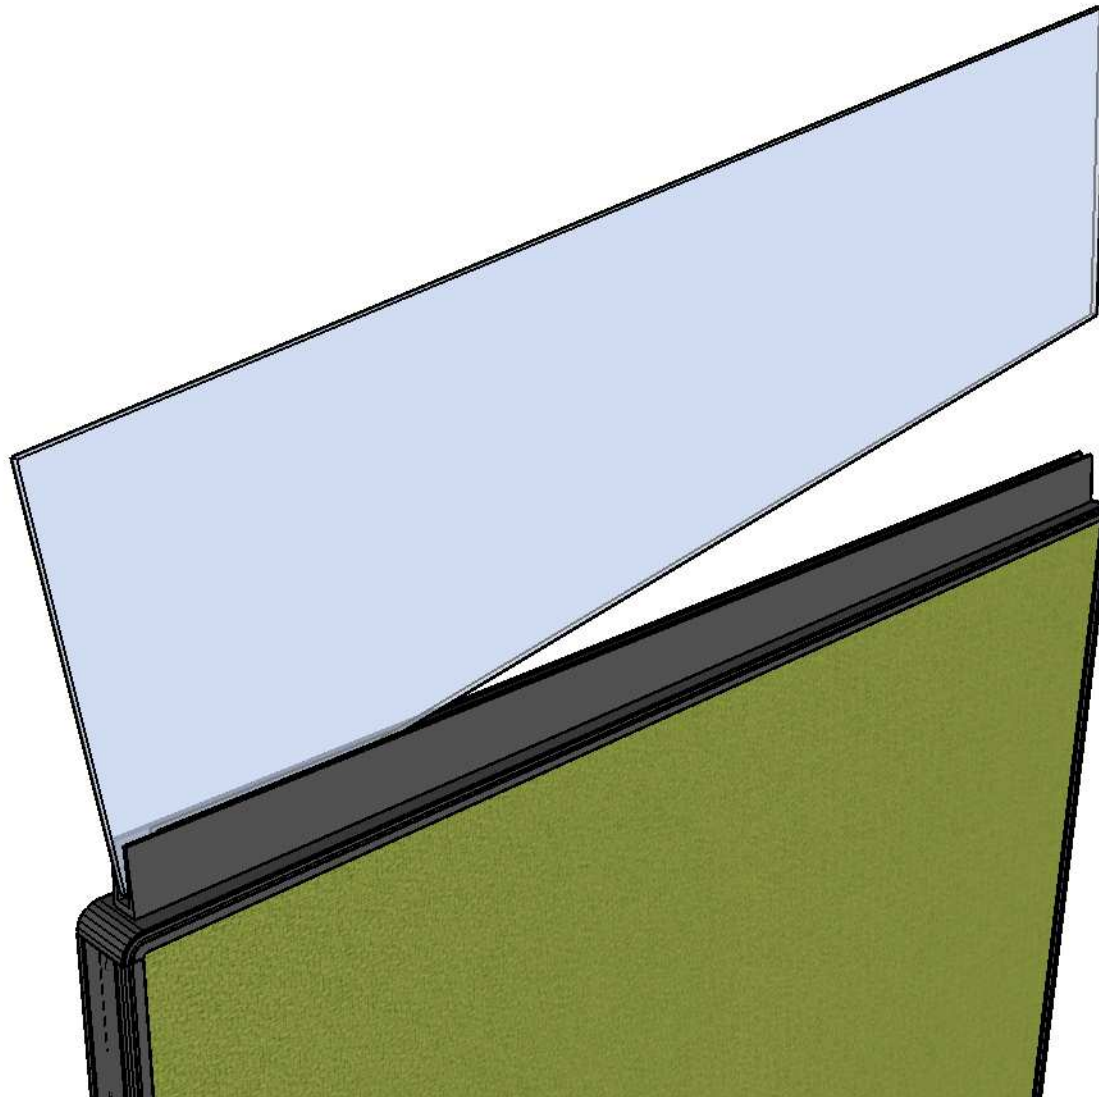

9. Once you have one corner started move to the other side and start pushing the glass into the bracket before seating the glass at the bottom of the plastic insert making sure the ends of the glass are lined up on both ends of the bracket

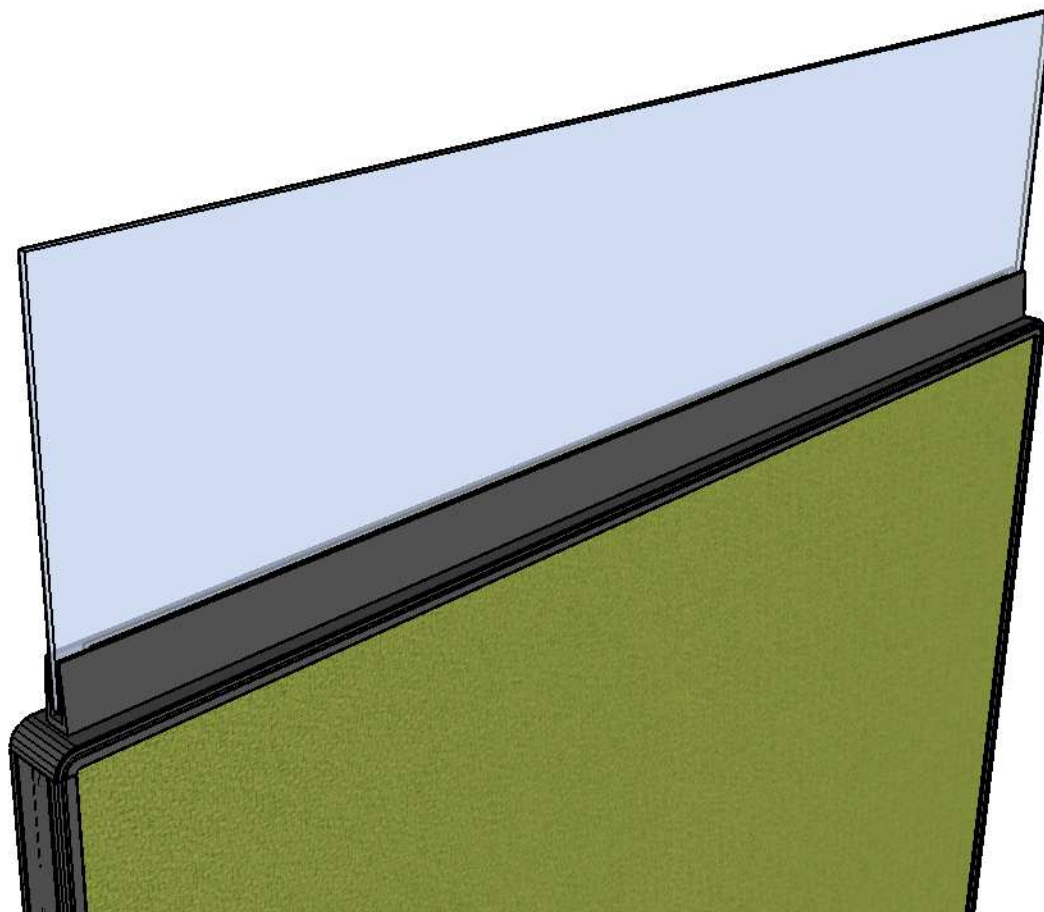

10. Push the glass down into the bracket to it is seated completely at the bottom of the plastic insert and the glass is lined up with both ends of the bracket