

FRUTTO TECHNOLOGY x DAVE W



**HASLAB AFTERLIFE / HASBRO
'84 PROTON PACK SPACER AND
BRACKET SET INSTRUCTIONS**

KIT CONTENTS

SPACERS

1 X Top spacer (Puck)
2 X Side spacers (L/R identical)
1 X Middle spacer
2 X End cylinder spacers (L/R identical)

BRACKETS

1 X Top bracket
2 X Side brackets (L/R identical)
1 X Middle bracket
1 X Bottom bracket

BOLTS

4 X M6x20mm - Side
4 X M6x25mm - Top + Middle
2 X M6x12mm - Bottom
2 X M8x30mm - End cylinders



IMPORTANT NOTICE

Use only the specified bolt lengths. Using incorrect bolts could potentially cause damage to your Proton Pack motherboard or internal components. The Bottom Bracket installs without a spacer – double-check before tightening.

No responsibility will be taken for damage caused by incorrect installation.

INSTALLATION GUIDE

INSTALLATION STEPS

- 1 - Put spacers in place (as per diagram)
- 2 - Put LC-1 Alice Frame in place (resting on spacers)
- 3 - Put brackets over the Alice Frame, on correct spacer (the brackets fit the profile/shape of the spacer, excluding the bottom bracket, which can be identified by being the tallest), aligning screw holes.

**** IMPORTANT BEFORE INSERTING BOLTS, ENSURE THAT PLACEMENT IS STILL CORRECT, SPACERS MAY HAVE MOVED DURING LC-1 PLACEMENT ****

- 4 - Insert correct bolts, tighten.

**** ALL BOLTS SHOULD BE TIGHTENED WITH HAND TOOLS ONLY
- USE OF POWER TOOLS IS NOT RECOMMENDED ****

BOLT PLACEMENT REMINDER

- M6x20mm - Side
- M6x25mm - Top + Middle
- M6x12mm - Bottom
- M8x30mm - End cylinders

If you are unsure, measure first


TOP/PUCK


SIDES

MIDDLE


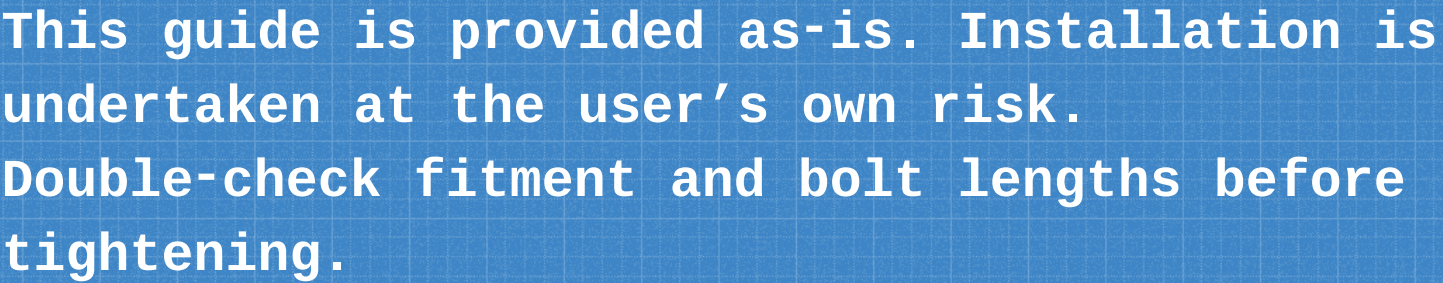
BOTTOM

CYLINDERS

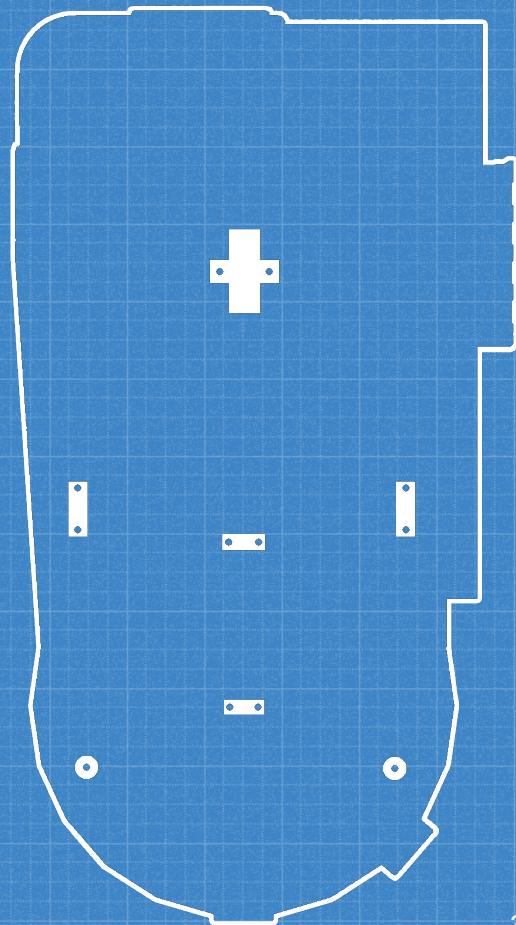



This guide is provided as-is. Installation is undertaken at the user's own risk. Double-check fitment and bolt lengths before tightening.



Heat 'em up!

