

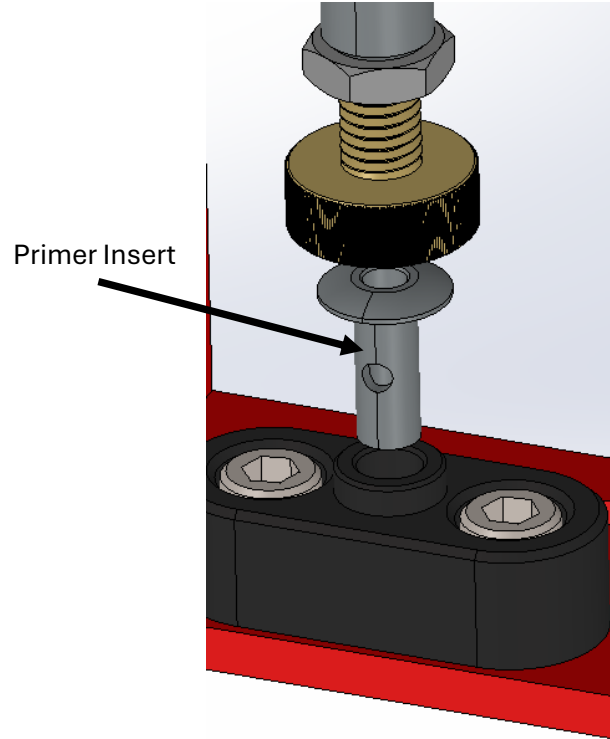


M8 Mission Critical Primer Press

Exclusively designed for the M8 Mission Critical

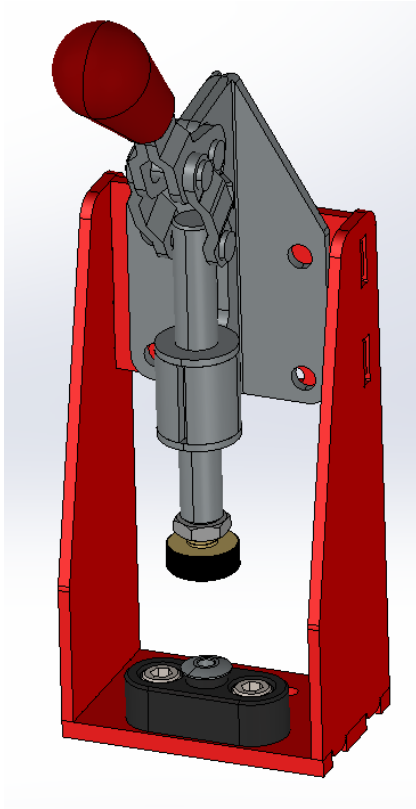

Place the Primer Insert into the die.

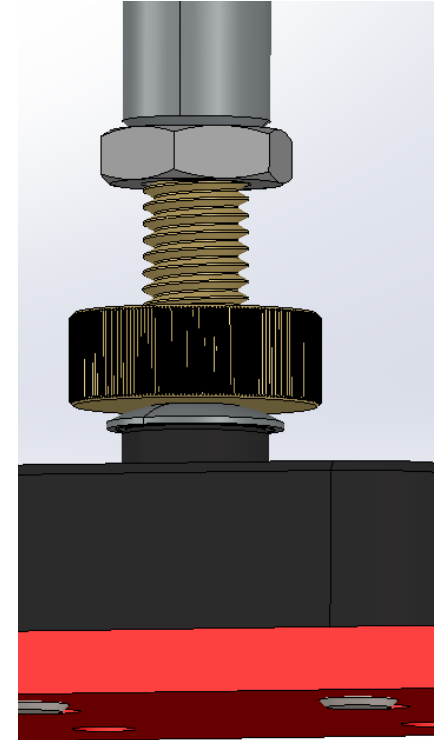


Adjust the punch tip to bottom out on top of the primer insert. The red lever should be all the way down with no further travel

M8 Mission Critical Primer Press


Exclusively designed for the M8 Mission Critical



You may opt out of using Loctite but the primer may pop out during ignition at a high velocity.

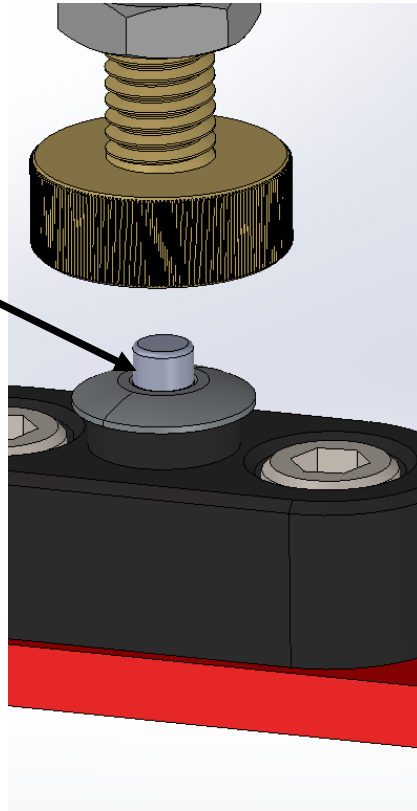

Put red Loctite on the primer
And place on top of the hole
of the Primer Insert. Wipe away
excess Loctite inside the hole
after pressing the primer.

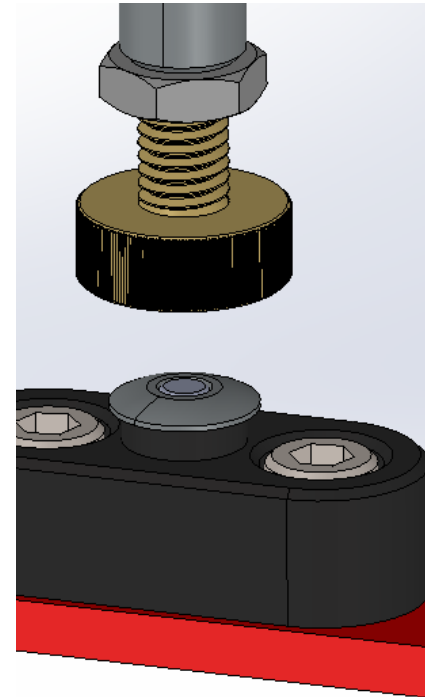

Press the primer into Primer Insert
until the press has no more travel.
This will set the primer to the correct
depth and not put excessive force
on the primer