

# MUD MUNCHER FILM LOADING INSTRUCTIONS

NOTE: DO NOT OVER TIGHTEN SCREWS, IT MAYBE HELPFUL TO KEEP A SMALL DAB OF GREASE ON ALL SCREWS TO HELP REDUCE THE CHANCE OF GALLING.




1. Start with a clean and dry Mud Muncher.
2. Load film before installing on helmet (SPRINT ONLY: use a small clamp to hold new film housing closed after loading film).
3. Remove the top and bottom covers on the motorized film housing.
4. Loosen both of the mud scrapers screws and move to upper most position.
5. With a pair of scissors, cut a 2" long lead in the shape of a "V" on the end of a new roll of film.
6. Separate the upper and lower guide lens and insert the film into the motorized housing slot.
7. Place the roll of film into the clear film housing making sure film is as shown in drawing "B"
8. Carefully slide film from one housing into the other while keeping the film in the guiding slots.
9. Grab the tail of the film as it comes out of the inside slot on the motorized housing.
10. Pull out about 8" of film out the bottom side of the motorized film housing and cut off the "V" shaped tail with a scissors to create a square end.
11. Position the film on the center of the motor spindle with the film square to the axis.
12. Tape in position with good quality masking or duct tape.
13. Install motor into bottom of housing turn bottom in a clockwise motion. Install two screws in bottom cover.
14. Install on helmet shield **starting with new film housing side** quick release pin and clip.
15. Working Velcro together slowly from film housing side to motor housing side.
16. If you have difficulty sliding the Mud Muncher over the second ¼" aluminum pin. Use a rat tail file to slot the hole on the motor side horizontally 1/16" to 1/8" to the right and to the left.
17. Be careful not to twist lens while working across the shield. Install clip in other side.
18. Plug Mud Muncher into power cord and push button to advance film, make sure the film rolls flat and smooth in direction shown in drawing B.
19. Install top cover.
20. Reposition scrapers down till they almost touch the film and then lightly tighten screws.
21. Tip: Put a 2" long strip of electric tape over (2) vertical forward facing screws on scraper to keep mud out of screw heads.



NOW: "YOUR DESIRE TO WIN SHOULD BE PERFECTLY CLEAR"

INSTALL A NEW ROLL OF FILM BEFORE EVERY RACE

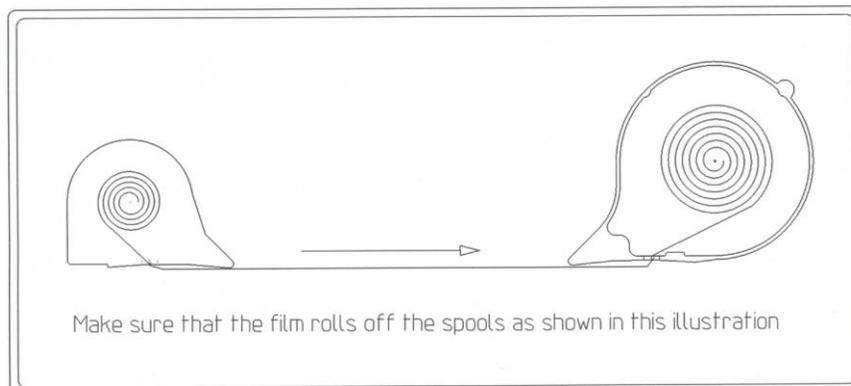

Drawing B