

earlyclocks.uk - Endless Clock Rope Slicing EPOXY METHOD




I've successfully used the following Epoxy method to join the endless rope (linen) ends for 30 hour and lantern clocks. It's important each step is done as outlined. It's important quality 15 minute epoxy is used, the ends are allowed to absorb freshly mixed glue for ~11~12 minutes before joining thickened glue ends and carefully holding the ends lined up and still, until the amply glued joint solidifies. The joint is left to cure at least 2 hours before

carefully removing the cured overflow using a Dremel type coarse sanding drum. Seal the linen fuzz with a small amount if PVA glue.





E. Carefully hold ends together using both hands keep still 15-20 minutes.

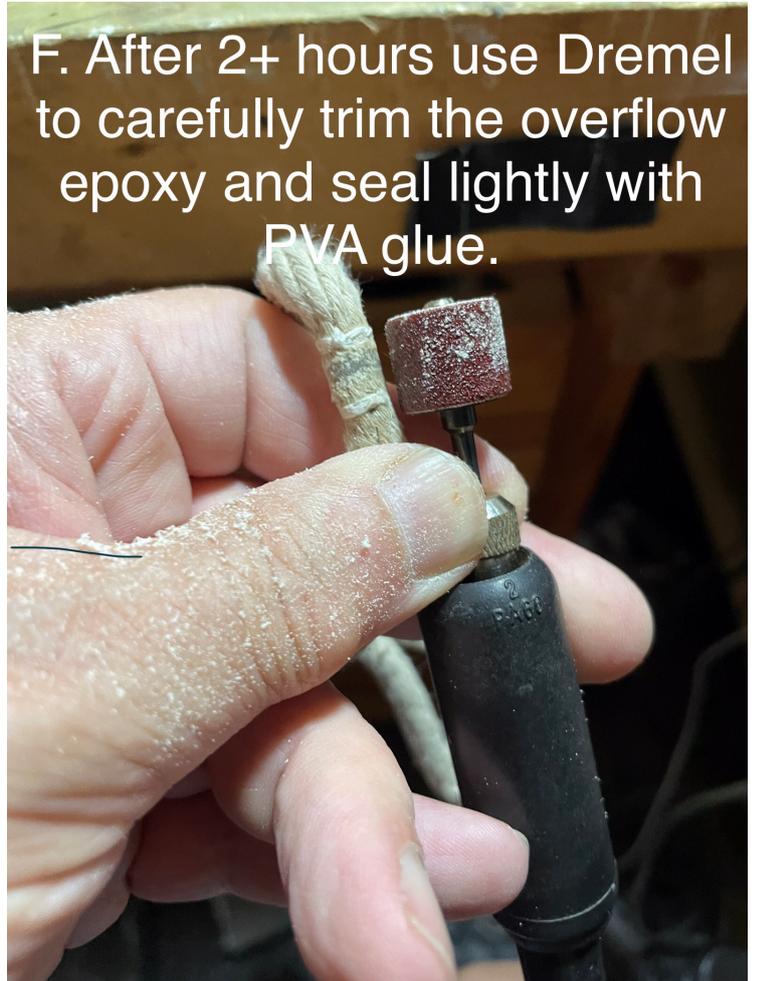

F. After 2+ hours use Dremel to carefully trim the overflow epoxy and seal lightly with PVA glue.



