


## Reflective Checker & Mini Chevron Decal Application Directions

Use glass cleaner and a lint free clothe to remove dirt, oil and residue from the surface you are applying the decals to.

Cut the decals into strips. If you are applying the decals to a helmet you may want to label the back of the strips to indicate which side of the helmet they are going on.

Our Checker Decal Kit is made up of individual 1/2" canted squares. The masking between each square is void of vinyl. During application we suggest using those spaces here and there to stick the strip to the helmet. As long as you do not put pressure on the vinyl squares you should be able to lift and reposition the strip with no trouble.

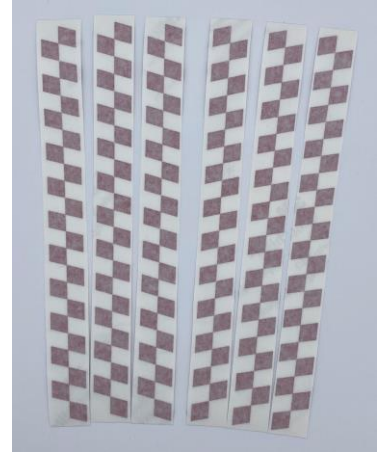

Once you have the strip positioned where you want it, start pressing the checks into the helmet. Allow the masking to bunch from the curvature of your helmet if necessary but not the vinyl. Once the checks are secure rub the vinyl and masking thoroughly to activate the adhesive and remove any trapped air. Doing this now will ensure no bubbles appear later.

When the vinyl has darkened through the masking and the strip is nice and flattened, lift one corner of masking and begin to peel it back and way from the helmet at an angle, leaving the decal behind.

If you are going to continue the same line, around your helmet for instance, matching up the end of the first strip with the beginning of the next will require that you trim the masking very close to the first square in the new strip.



Align, stick, rub and peel. Continue your way through the checkers.



Allow the decals to cure for 24 hours before exposing to water, mud or extreme heat.

Thank You for ordering from Applied Graphics. Please visit us at [reflectivedecals.com](http://reflectivedecals.com) where you will find detailed application instructions under our Instructions tab, new and updated decals as well as limited edition designs.

**Keep the shiny side up!**

