




EXAMPLE OF HOW TO CALCULATE

The diagram to the right shows the pitch of a 6-12 roof slope meaning that for 12" of horizontal measurement (roof run) the vertical measurement (roof rise) is 6".

This measurement is best done on a bare roof because curled up roofing shingles will impair your measurement. If this isn't practical then perform the same measurement on the underside of the roof.

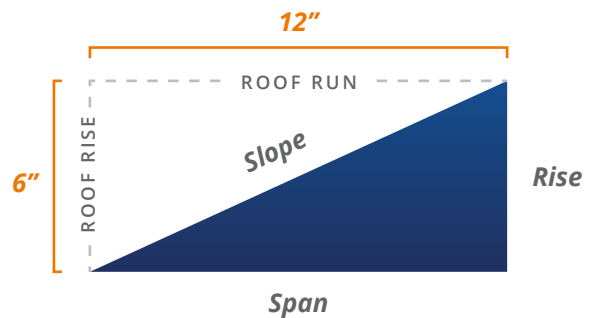

ROOF PITCH = RISE / SPAN