



Window Curtain Custom Made

Tel: (919)987-0332

info@tranquilityoikos.com

INSTRUCTIONS FOR MEASURING WINDOW TREATMENTS


Inside Mount

Measure Width

Measure inside the window frame horizontally in 3 places to the nearest $\frac{3}{8}$ inch: top, middle & bottom. The shortest measurement = your width.

Measure Height

Measure inside the window frame vertically in 3 places to the nearest $\frac{1}{2}$ inch: left, middle & right. The longest measurement = your height.

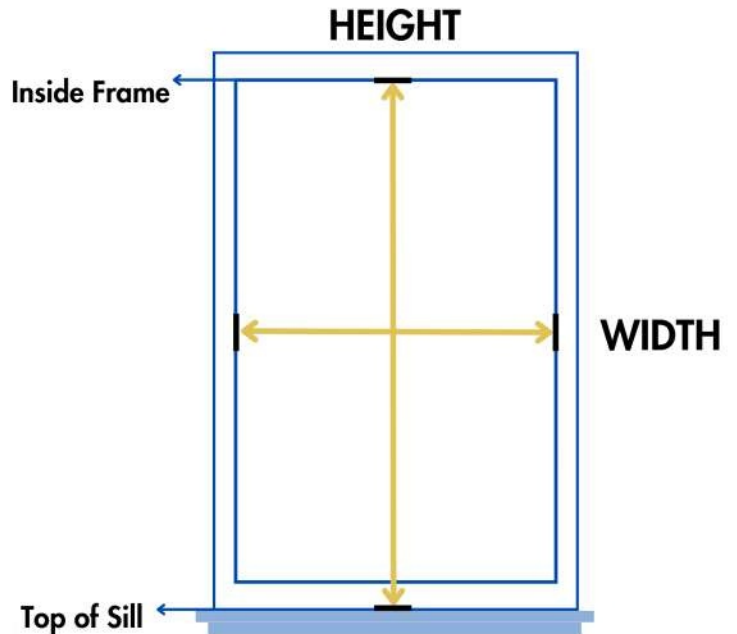


Note: For a standard Inside Mount Roller/Zebra shade, make sure the shortest window frame depth to mount the brackets is at least $\frac{3}{4}$ ".

WINDOW FRAME DEPTH



HEIGHT

Overlap on top & bottom

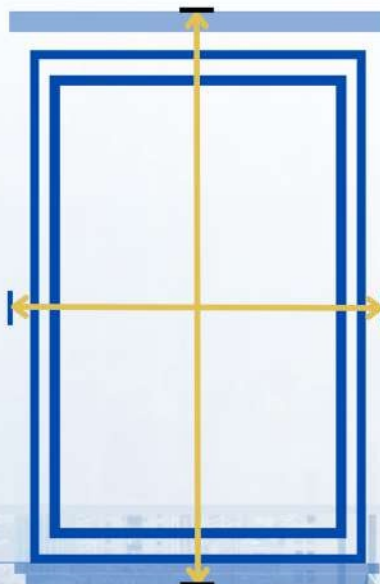

Proposed Headrail Location

WIDTH

Overlap on eachside

Top of Sill

Outside Mount

For increased light control & privacy

Measure Width

Measure horizontally to the nearest $\frac{1}{8}$ inch between the outer-most points where you want your window treatments placed. For optimal light control, it's recommended to overlap each side of the window frame by at least an additional $\frac{3}{4}$ inch.

Measure Height

Measure vertically to the nearest $\frac{1}{8}$ inch from the top of where you want the window treatment to be installed (headrail location) to the top of the window sill, or measure to point of desired length if there is no sill.

HELPFUL TIPS

For Inside Mount, take all measurements to the nearest $\frac{1}{8}$ inch. DO NOT take any deductions. The factory will make the necessary adjustments to ensure your blind or shade operates smoothly.

For Outside Mount, window treatments will be made to your exact measurements.