


Ink Pad Palace™ Drawer

Assembly Instructions

1. Start with brown side of drawer piece facing up.
2. Fold up both side sections A and B.
3. Fold end flaps on same end of A and B inward.
4. Fold long drawer end piece (C or D) up and over A & B flaps and tuck edge notches of C or D into openings on inside crease.
5. Repeat steps 3-4 for other side of drawer.

Finished drawer should look like the drawing below.

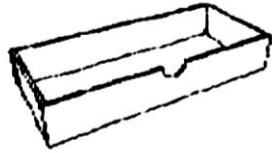

Finished drawer

