


SMART WATCH REPLACEMENT

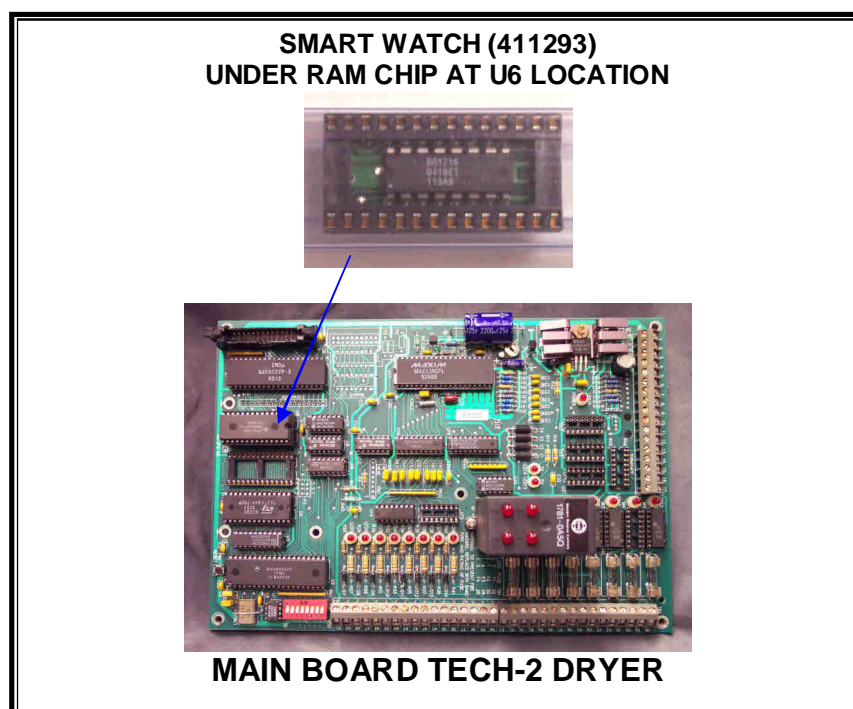

TECH-2 DRYERS ONLY!

IMPORTANT INSTRUCTIONS FOR THE INSTALLATION OF THE SMART WATCH CHIP ON THE THORESON McCosh TD TECH-2 DESICCANT DRYERS.

1. DISCONNECT THE HIGH VOLTAGE FROM THE DRYER.
2. REMOVE THE STACKED CHIPS EXISTING SMART WATCH AND RAM CHIP FROM LOCATION U6
THE SMART WATCH CHIP IS THE BOTTOM CHIP (NOTE THE NOTCH ON THE CHIPS).
3. INSTALL THE NEW SMART WATCH CHIP IN THE BOTTOM MAKING SURE THE NOTCH IS FACING THE SAME WAY AS THE OLD SMART WATCH CHIP.
4. POWER UP THE HIGH VOLTAGE AND FOLLOW THE INSTRUCTIONS BELOW.
 - A. SET THE PROCESS TEMPERATURE TO THE PROPER SET POINT.
 - B. PRESS THE TIME/AUTO START SET POINT BAR/PRESS MON. AND SET ALL START AND STOP TIMES TO 00:00 OR RESET YOUR PREVIOUS AUTO OVERPRINTS ON OFF TIMERS. BE SURE TO SET ALL 7 DAYS.
 - C. RESET THE CLOCK ON THE UNIT (TIME OF THE DAY).
 - D. RESET THE DEW POINT SHIFT CONTROL
 - E. RESET AUTO PROCESS TEMP SET POINTS IF USED.