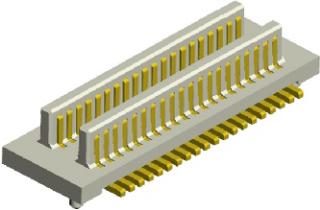
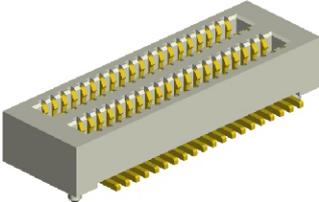
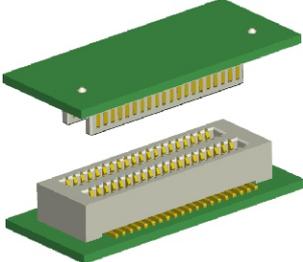
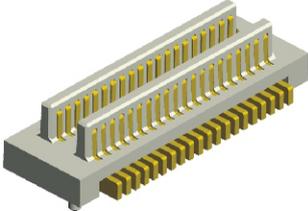
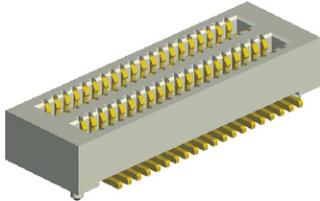
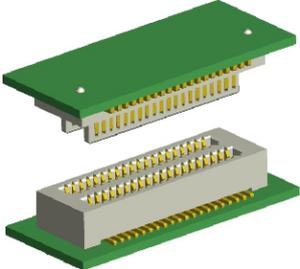
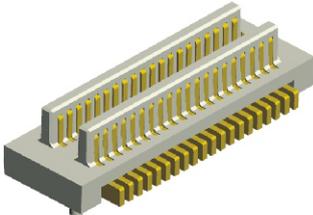
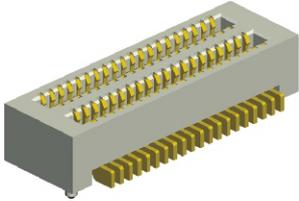
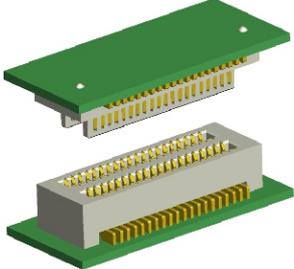
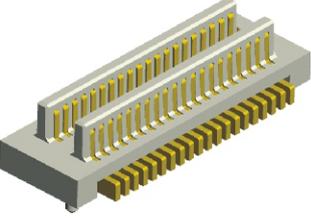
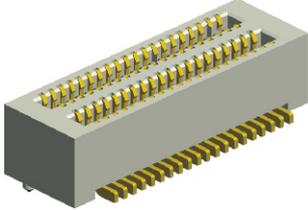
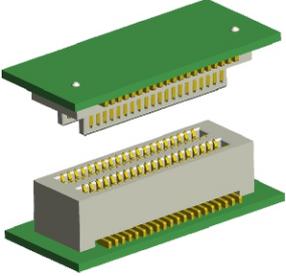
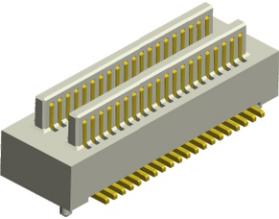
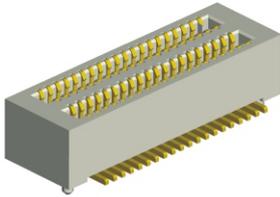
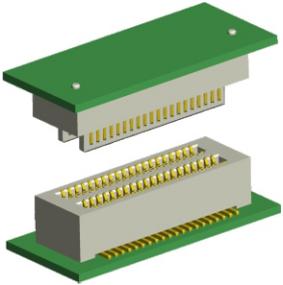
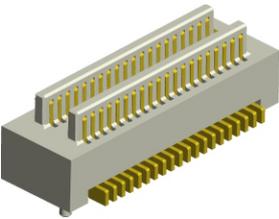
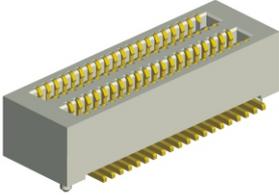
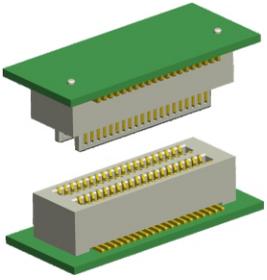


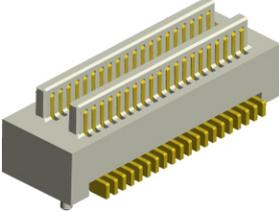
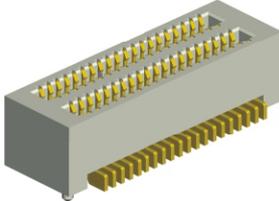
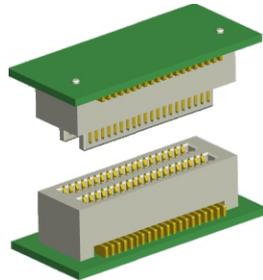
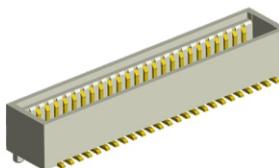
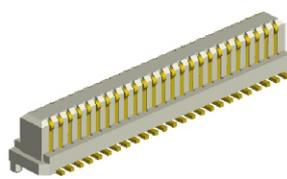
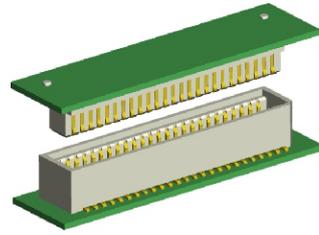
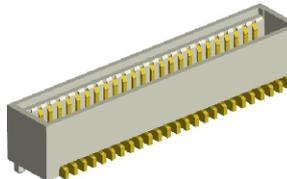
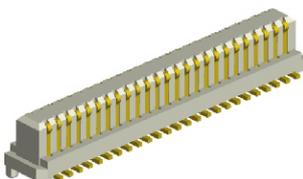
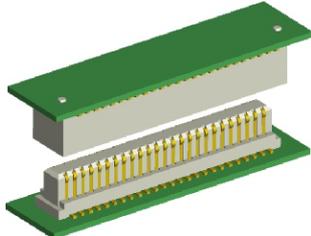
Cobb Technology

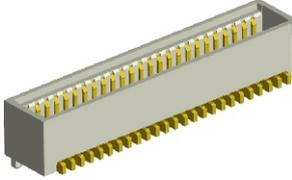
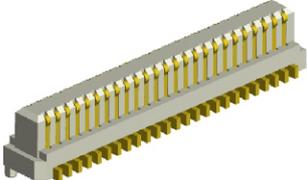
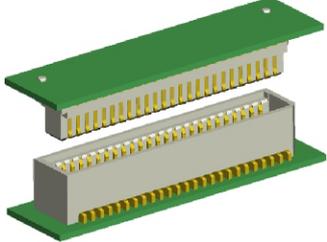
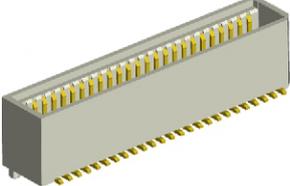
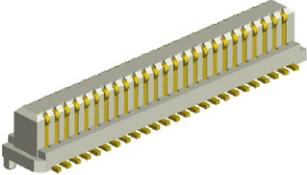
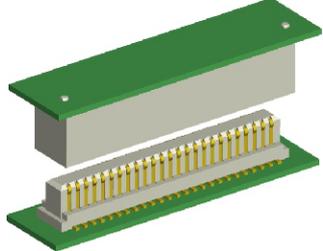
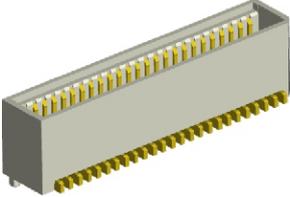
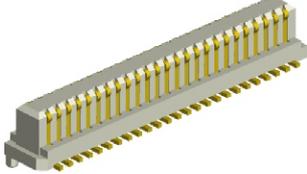
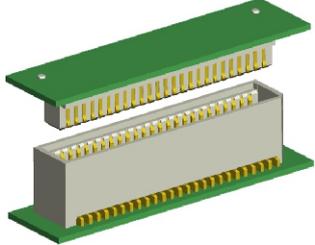


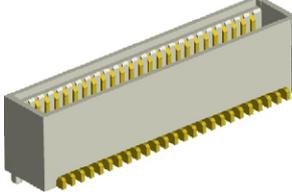
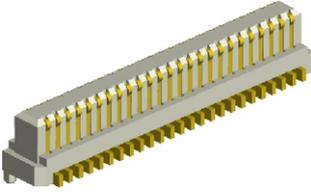
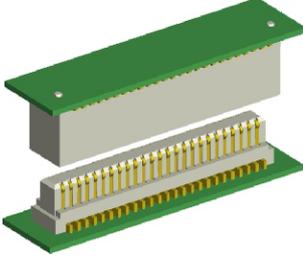
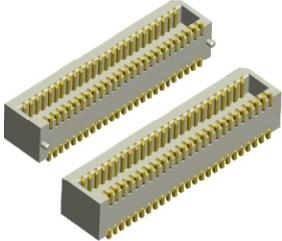
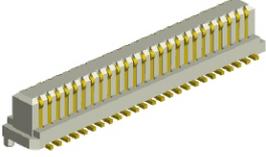
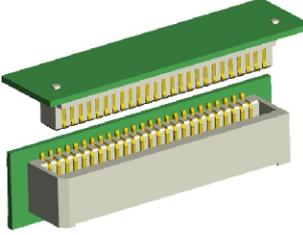
0.50 & 0.80 mm Board to Board Connectors

<p>CTN2000P-XXG-240-020 0.5mm Board to Board Height = 2.40mm</p>	<p>CTN2001S-XXG-220-020 0.5mm Board to Board Height = 2.20mm</p>	<p>The mating height of CTN2000P-XXG-240-020 & CTN2001S-XXG-220-020 is 3.0mm</p>
		
<p>CTN2000P-XXG-290-020 0.5mm Board to Board Height = 2.90mm</p>	<p>CTN2001S-XXG-220-020 0.5mm Board to Board Height = 2.20mm</p>	<p>The mating height of CTN2000PXXG-290-020 & CTN2001S-XXG-220-020 is 3.50mm</p>
		
<p>CTN2000P-XXG-290-020 0.5mm Board to Board Height = 2.90mm</p>	<p>CTN2001S-XXG-270-020 0.5mm Board to Board Height = 2.70mm</p>	<p>The mating height of 2000P- CTN2000P-XXG-290-020 & CTN2001S-XXG-270-020 is 4.00mm</p>
		

<p>CTN2000P-XXG-290-020 0.5mm Board to Board Height = 2.90mm</p>	<p>CTN20001S-XXG-320-020 0.5mm Board to Board Height = 3.20mm</p>	<p>The mating height of CTN2000P-XXG-290-020 & CTN20001S-XXG-320-020 is 4.50mm</p>
		
<p>CTN20000P-XXG-390-020 0.5mm Board to Board Height = 3.90mm</p>	<p>CTN2001S-XXG-300-020 0.5mm Board to Board Height.= 3.00mm</p>	<p>The mating height of CTN20000P-XXG-390-020 & CTN2001S-XXG-300-020 is 5.00mm</p>
		
<p>CTN2000P-XXG-440-020 0.5mm Board to Board Height = 4.40mm</p>	<p>CTN2001S-XXG-300-020 0.5mm Board to Board Height = 3.00mm</p>	<p>The mating height of CTN2000P-XXG-440-020 & CTN2001S-XXG-300-020 is 5.50mm</p>
		

<p>CTN2000P-XXG-440-020 0.5mm Board to Board Height is 4.00mm</p>	<p>CTN2001S-XXG-350-020 0.5mm Board to Board Height is 3.50mm</p>	<p>The mating height of CTN2000P-XXG-440-020 & CTN2001S-XXG-350-020 is 6.00mm</p>
		
<p>CTN2011-XXG-365-CT 0.8mm Board to Board Height is 3.65mm</p>	<p>CTN2010-XXG-355-CT 0.8mm Board to Board Height is 3.55mm</p>	<p>The mating height of CTN2011-XXG-365-CT & CTN2010-XXG-355-CT is 4.50mm</p>
		
<p>CTN2011-XXG-415-CT 0.8mm Board to Board Height is 4.15mm</p>	<p>CTN2010-XXG-355-CT 0.8mm Board to Board Height is 3.55mm</p>	<p>The mating height of CTN2011-XXG-415-CT & CTN2010-XXG-355-CT is 5.00mm</p>
		

<p>CTN2011-XXG-415-CT 0.8mm Board to Board</p>	<p>CTN2010-XXG-405-CT 0.8mm Board to Board</p>	<p>The mating height of CTN2011-XXG-415-CT & CTN2010-XXG-405-CT is 5.50mm</p>
		
<p>CTN2011-XXG-515-CT 0.8mm Board to Board</p>	<p>CTN2010-XXG-355-CT 0.8mm Board to Board</p>	<p>The mating height of CTN2011-XXG-515-CT & CTN2010-XXG-355-CT is 6.00mm</p>
		
<p>CTN2011-XXG-565-CT 0.8mm Board to Board</p>	<p>CTN2010-XXG-355-CT 0.8mm Board to Board</p>	<p>The mating height of CTN2011-XXG-565-CT & CTN2010-XXG-355-CT is 6.50mm</p>
		

<p>CTN2011-XXG-565-CT 0.8mm Board to Board</p>	<p>CTN2010-XXG-405-CT 0.8mm Board to Board</p>	<p>The mating height of CTN2011-XXG-565-CT & CTN2010-XXG-405-CT is 7.00mm</p>
		
<p>CTN2011R-XXG-470-PC 0.8mm Board to Board</p>	<p>CTN2010-XXG-355-CT 0.8mm Board to Board</p>	<p>The mating height of CTN2011R-XXG-470-PC & CTN2010-XXG-355-CT is 5.65mm</p>
		
<p>CTN2011R-XXG-470-PC 0.8mm Board to Board</p>	<p>CTN2010-XXG-405-CT 0.8mm Board to Board</p>	<p>The mating height of CTN2011R-XXG-470-PC & CTN2010-XXG-405-CT is 6.15mm</p>
