


BMS-AnchorPad

A LocDown.Com Security Company
520 West Central Avenue Ste. A | Brea, CA 92821
Tel: 800.872.9562 | Fax: 714.990.5405 | www.locdown.com | www.anchorPad.com
iPad Lock Enclosure Installation Instructions

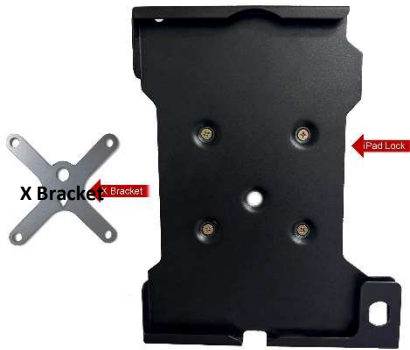

Step 1




Mount the iPad Holder using the X bracket to the wall by drilling the 3" inch screw into a wood stud and 2" inch screws into the drywall or wall surface.

Step 2



Slide iPad into the enclosure.

Step 3

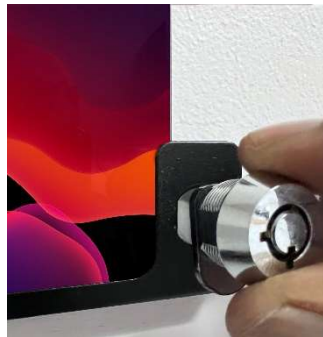

Insert the cam-lock into the opened slot with the cam facing down and press firmly.

Step 4



Insert key into keyway and turn counterclockwise (To the left).

Hardware Included

(4) 2-inch Wood Screws

(1) 3-inch Wood Screw



Not to Scale

(1) iPad Mount

(1) Cam-Lock & Keys



For Technical Support Call
1-800-872-9562 Extension 105
Hours of operation: 8:00 AM to 5:00 PM Pacific Time
Email: Dedrick@locdown.com