



67-70 Impala/Caprice Steering Linkage v1.b

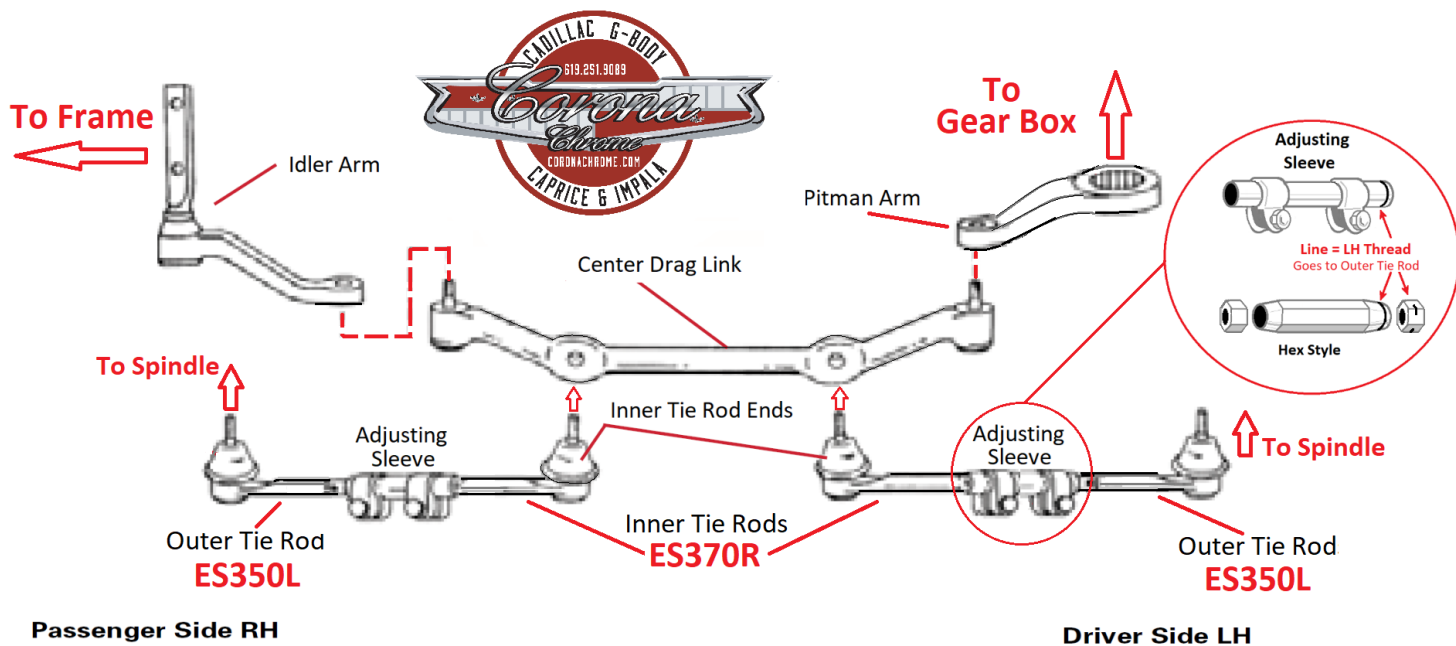

CORONACHROME.com 619-251-9089   @coronachrome

67-70 Impala/Caprice Steering Linkage v1.b

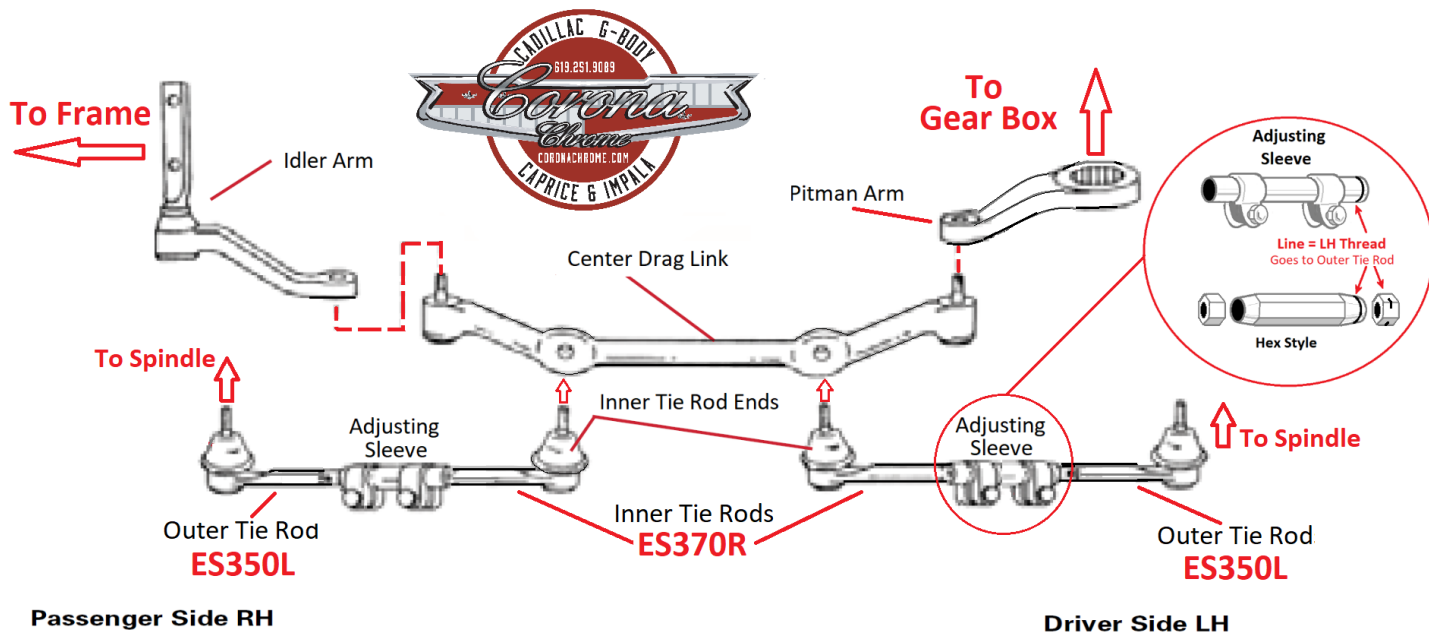

CORONACHROME.com 619-251-9089   @coronachrome

A-Arm Dust Shield Installation Instructions

v.1b




- Dust shields are cut to original manufacturer specification.
- For custom applications (hydraulics, air bags, etc...) trim as needed.

- 1 A Arm Dust Shield
- 2 Lower Frame Seal
 - a Lower half of seal should fit along side of frame.
- 3 Staple
- 4 Wire Harness Straps

Instructions

Staples - Use 5/64" Drill Bit and drill holes approximately 1/2" apart for each staple.

Wire Harness Straps - Use original holes or drill using 1/4" drill bit.

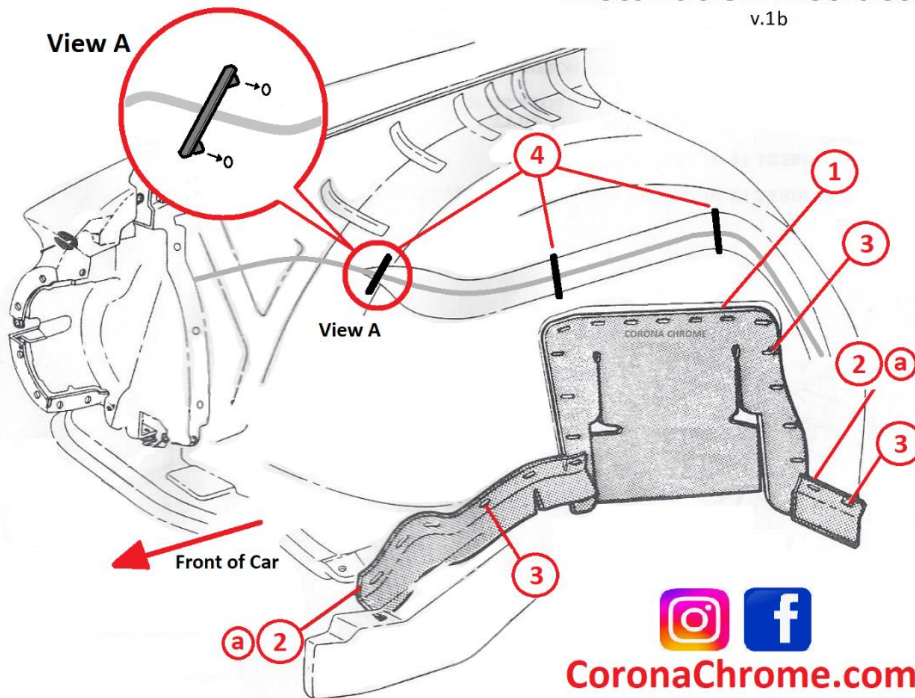

CoronaChrome.com

A-Arm Dust Shield Installation Instructions

v.1b




- Dust shields are cut to original manufacturer specification.
- For custom applications (hydraulics, air bags, etc...) trim as needed.

- 1 A Arm Dust Shield
- 2 Lower Frame Seal
 - a Lower half of seal should fit along side of frame.
- 3 Staple
- 4 Wire Harness Straps

Instructions

Staples - Use 5/64" Drill Bit and drill holes approximately 1/2" apart for each staple.

Wire Harness Straps - Use original holes or drill using 1/4" drill bit.

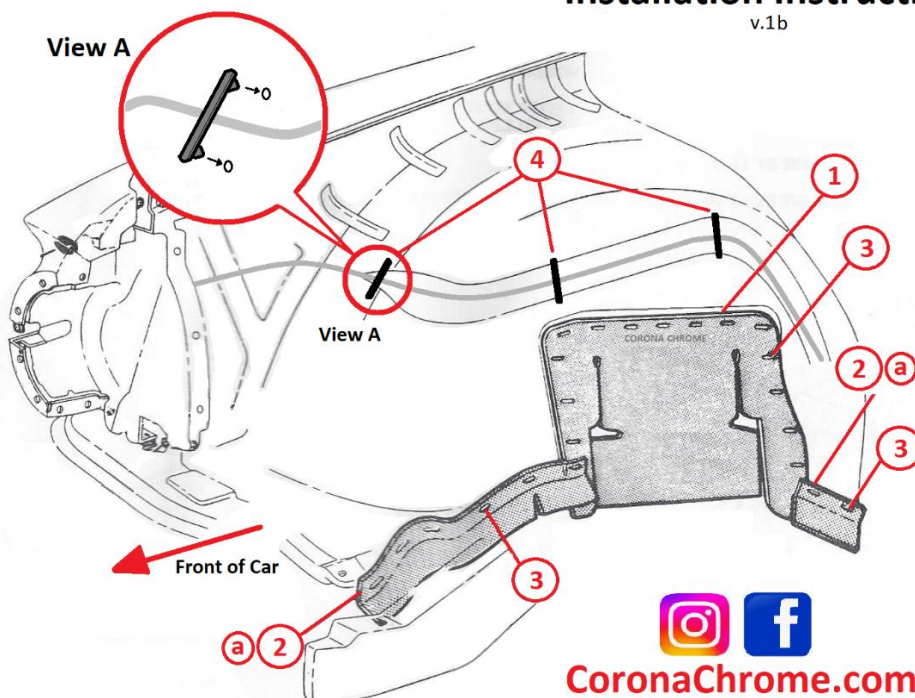

CoronaChrome.com