



## 65-66 Impala/Caprice Steering Linkage v1.b

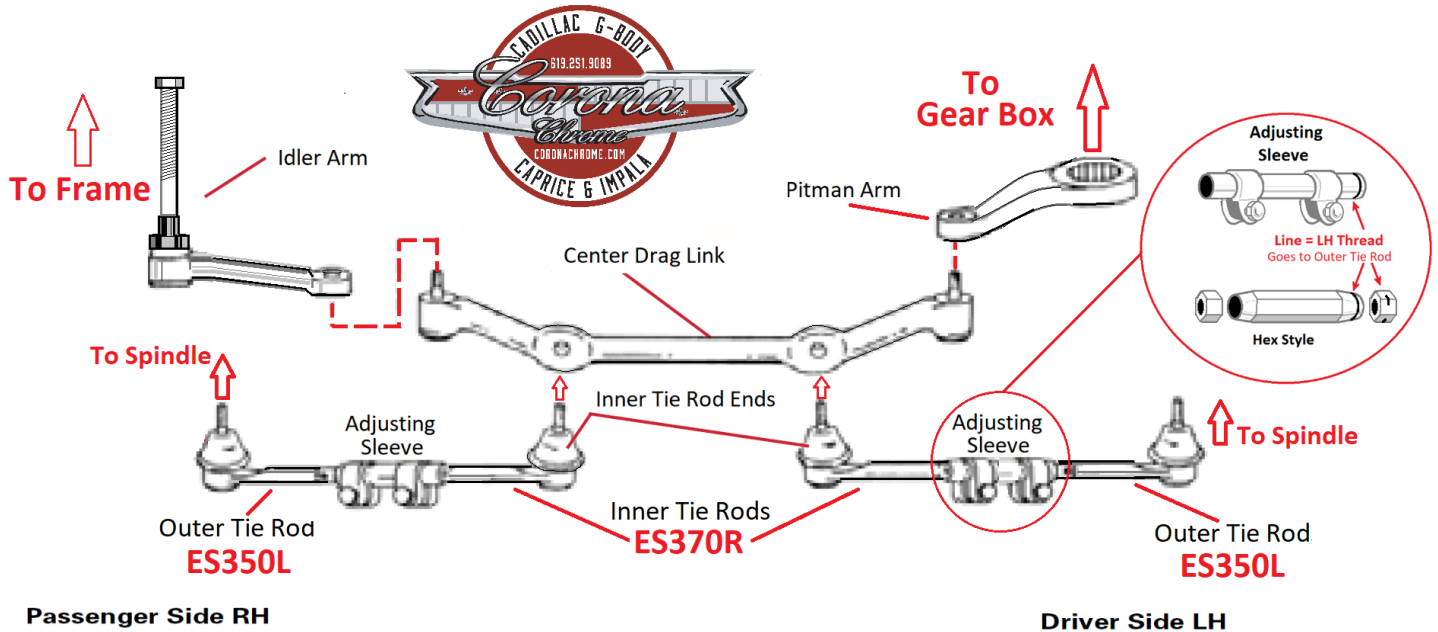

CORONACHROME.com 619-251-9089   @coronachrome

## 65-66 Impala/Caprice Steering Linkage v1.b

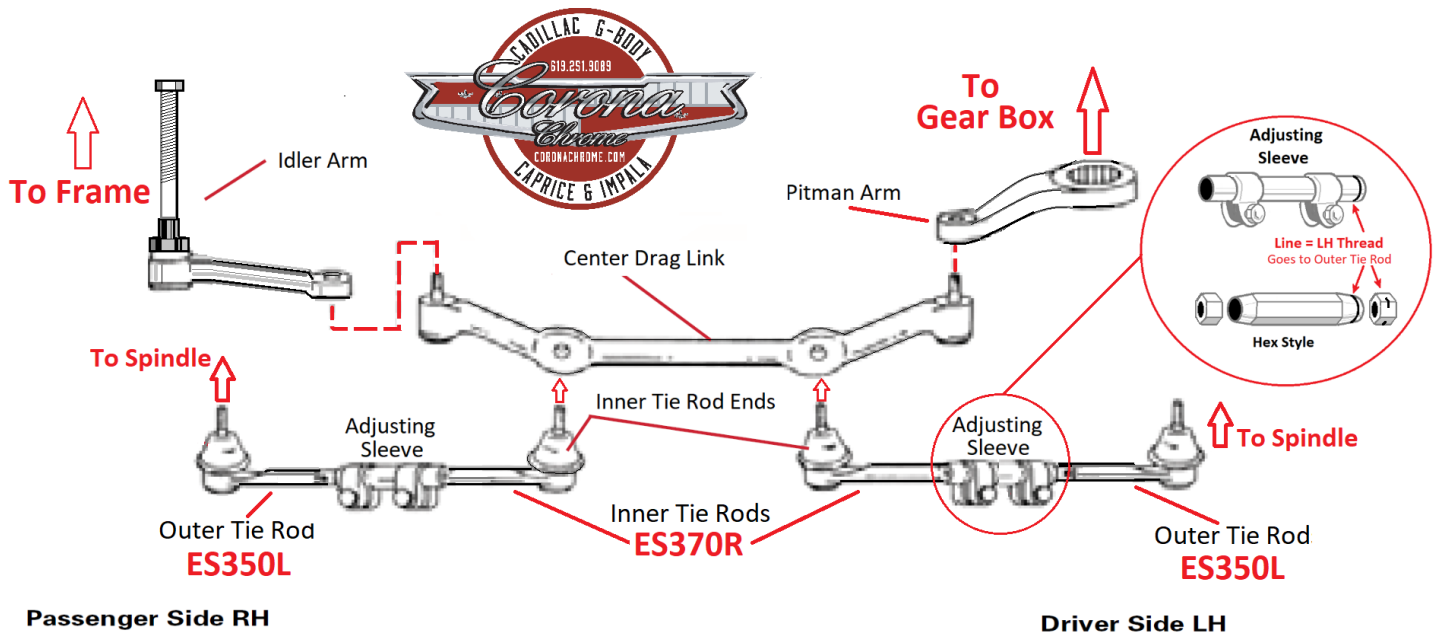


CORONACHROME.com 619-251-9089   @coronachrome

## A-Arm Dust Shield Installation Instructions

v.1b



- Dust shields are cut to original manufacturer specification.
- For custom applications (hydraulics, air bags, etc...) trim as needed.

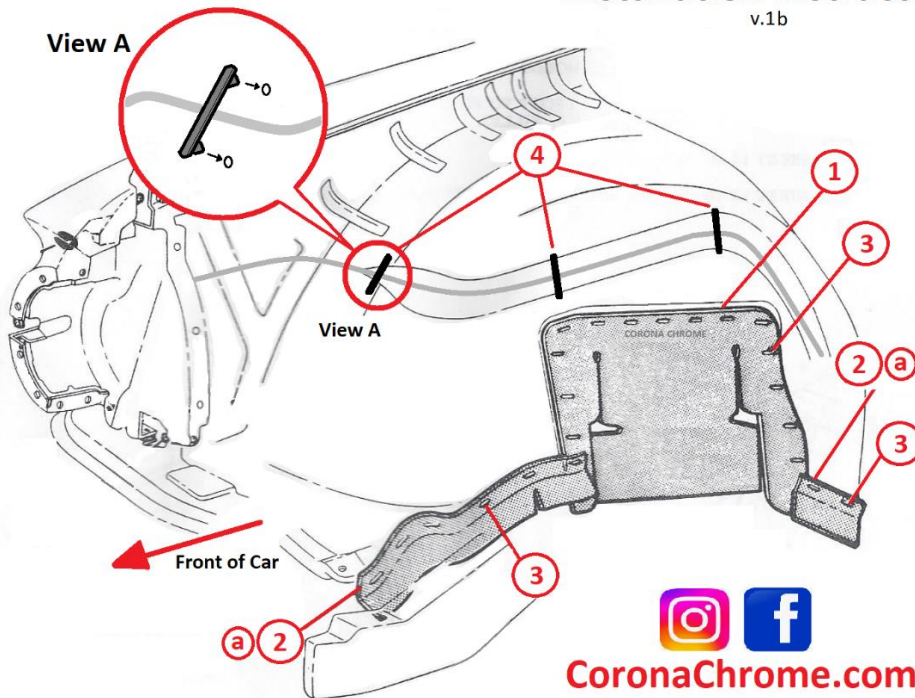

CoronaChrome.com

- 1 A Arm Dust Shield
- 2 Lower Frame Seal
  - a Lower half of seal should fit along side of frame.
- 3 Staple
- 4 Wire Harness Straps

### Instructions

**Staples** - Use 5/64" Drill Bit and drill holes approximately 1/2" apart for each staple.


**Wire Harness Straps** - Use original holes or drill using 1/4" drill bit.

## A-Arm Dust Shield Installation Instructions

v.1b



- Dust shields are cut to original manufacturer specification.
- For custom applications (hydraulics, air bags, etc...) trim as needed.

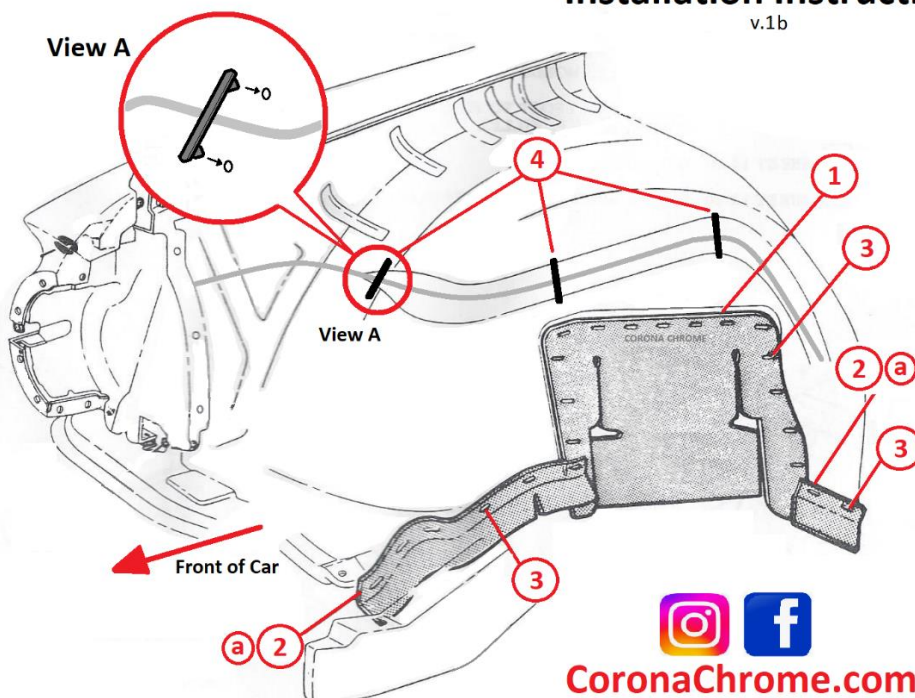

CoronaChrome.com

- 1 A Arm Dust Shield
- 2 Lower Frame Seal
  - a Lower half of seal should fit along side of frame.
- 3 Staple
- 4 Wire Harness Straps

### Instructions

**Staples** - Use 5/64" Drill Bit and drill holes approximately 1/2" apart for each staple.

**Wire Harness Straps** - Use original holes or drill using 1/4" drill bit.