

*\*Professional Installation Recommended\**

# Cat Security™

by Cap City Muffler



## Toyota Prius Generation 2 2004 - 2009

Thank you for your purchase. With the installation of this Cat Security™ plate, we hope that you will help prevent any further catalytic converter theft. The included hardware kit will help further secure your catalytic converter and deter thieves.

### Package Contents:

- (8) Rivets
- (6) Security Screws
- (2) Self Tapping Screws
- (1) Aluminum Security Plate
- (3) Window Stickers

**\*Professional Installation Recommended\***

## Toyota Prius Cat Security™ Install Instructions (Gen 2)

Step 1: Locate and remove the front plastic splash shield 10mm nuts shown in red. The Cat Security™ plate is mounted on the front 3 factory studs and the OEM splash guard is installed over the plate. This allows for the plate to be centered and aligned with the frame rails on each side. These nuts are kept loose until all other fasteners are installed. These (3) 10mm nuts should be tightened last.




Step 2: The provided self-tapping screws to hold the plate in place while drilling the rivet holes. Place one security screw in any of the red outlined areas. These areas will house the security screws once the other holes for the rivets have been drilled.



**\*Professional Installation Recommended\***

**\*Cat Daddy Pro Tip\*:** We highly recommend using a clearance adjustment tool when installing the shield. A wood 2x4 or equivalent should be placed between the cat and the shield prior to installing any permanent hardware. This will ensure the shield does not rattle.

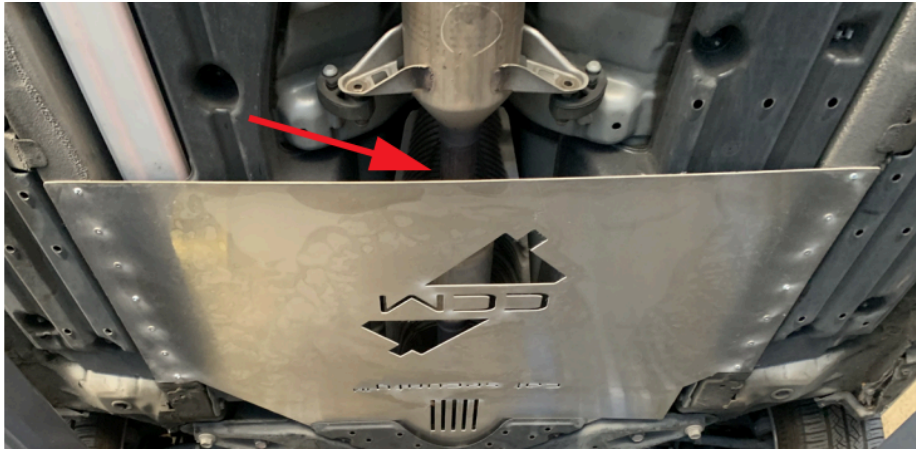


**Step 3:** Alternating sides, drill out the remaining holes. You can use the self tapping screws or a 3/16" drill bit. Once drilled, alternate sides again and install the rivets highlighted in the red areas.



**\*Professional Installation Recommended\***

Step 4: Install the security screws in the center and outer holes of the shield.

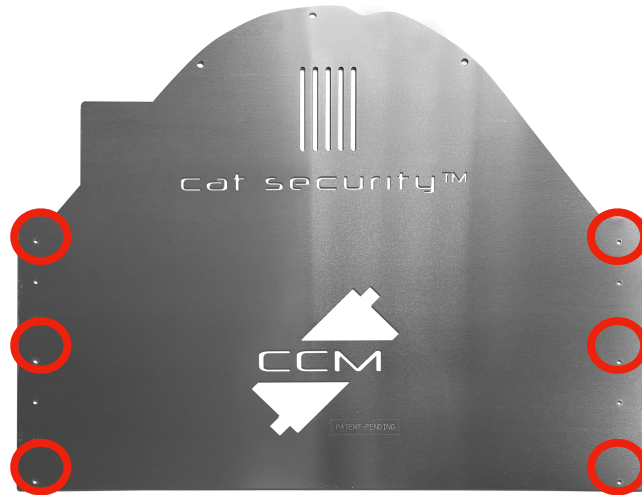

Step 5: Replace the front splash shield and tighten down the (3) 10mm nuts. Remove the clearance tool from between the cat and shield.



Last Step: Install the (3) "Protected by Cat Security" stickers on the two rear side and back windows.