




Frunk installation guide

The Frunk is suitable for KTM 950/990 Adventure only compatible with the Z Adventure quick release glove box system. And those that are running a rally style air filter systems e.g Triple Clamp Moto/Muller Motorsport / Rottweiler.

To install

- 1—Remove glove box via the quick release system
- 2—Remove air filter system entirely, giving room to work – not forgetting to put rags in the carb/throttle inlet bodies just in case.
- 3—If you have the original V1 Glovebox Quick Release Bracket – you will need to use the included Z Ruler to mark the hole positions on the two mounting tabs to drill them. If you have the V2 version, the holes will already be there and you can skip to step 8.
- 4—It is possible to drill the bracket ‘on the bike’ as pictured but please note it is cleaner to do it off the bike so that swarf isn’t spread across the engine. We recommend to do it off the bike unless you have access to a good workshop vacuum and put paper down in place to catch any swarf from drilling.
- 5—Place the Z rule across the bracket as shown below. This can be held in place with some tape whilst you mark the hole centres with a spring action centre punch or similar tool.

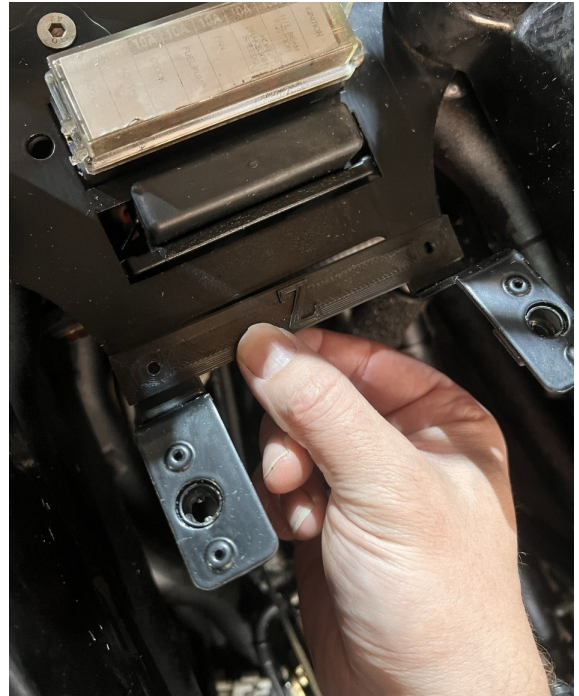

- 6—Mark the hole centres.
- 7—Use a 4mm HSS drill bit to drill out the holes. It is possible to use up to 8mm to give you some ‘wobble room’ or if the hole wasn’t drilled quite in the right place. Use caution and common sense if over sizing the hole.
- 8—Place the Frunk under the bracket and use the included thumb screws to mount the frunk to the bracket. You can leave the Z ruler in place or remove. Your choice.
- 9—Push down on the box to ensure that the screws have travelled far enough through, and no excess thread is remaining. Tighten down if required.
- 10—Clean up Swarf, don’t forget to remove rags from intakes and you are finished well almost



Re-install air filter and glove box – don't forget to remove rags from intakes and you are finished!

To access, you will need to remove the glove box – which is just 2 simple Dzus 1/4 turn fasteners from the quick release system –

So we recommend storing spare air Filters, oil filters, sparkplugs, a few tools the choice is yours. Make sure all are packed in waterproof bags and are stored securely. The Frunk will carry a kg in spares infact the more weight the better as it minimises the vibrations and the effect that has that may cause the knurled thumb screws to back out, We recommend using a light coating of blue Loctite on the threads

For quick access spares etc – use the Z Adventure Mid Trunk!

Don't forget to share your photos on the KTM 950/990 Facebook groups with what you've put in there not forgetting to tag @Z Adventure! What will you store in yours?

