



Radioflyer Innovations
Bi-Xenon ACA Headlights
Modification

DIY Kit Conversion Instructions


1. Remove the factory projector by removing the 4 silver Phillips head screws on the backside of the housing. (A gentle tap on the projector to break it loose may be required)



2. Break off the knob marked by the arrow and use a small strip of electrical (or other type of waterproof tape) folded over to block off the cutouts on the bottom part of the housing.



3. Install the pre-cut weather seal around the circular edge of the housing (lining up the cutouts in the weather seal with the bolt-holes as shown)

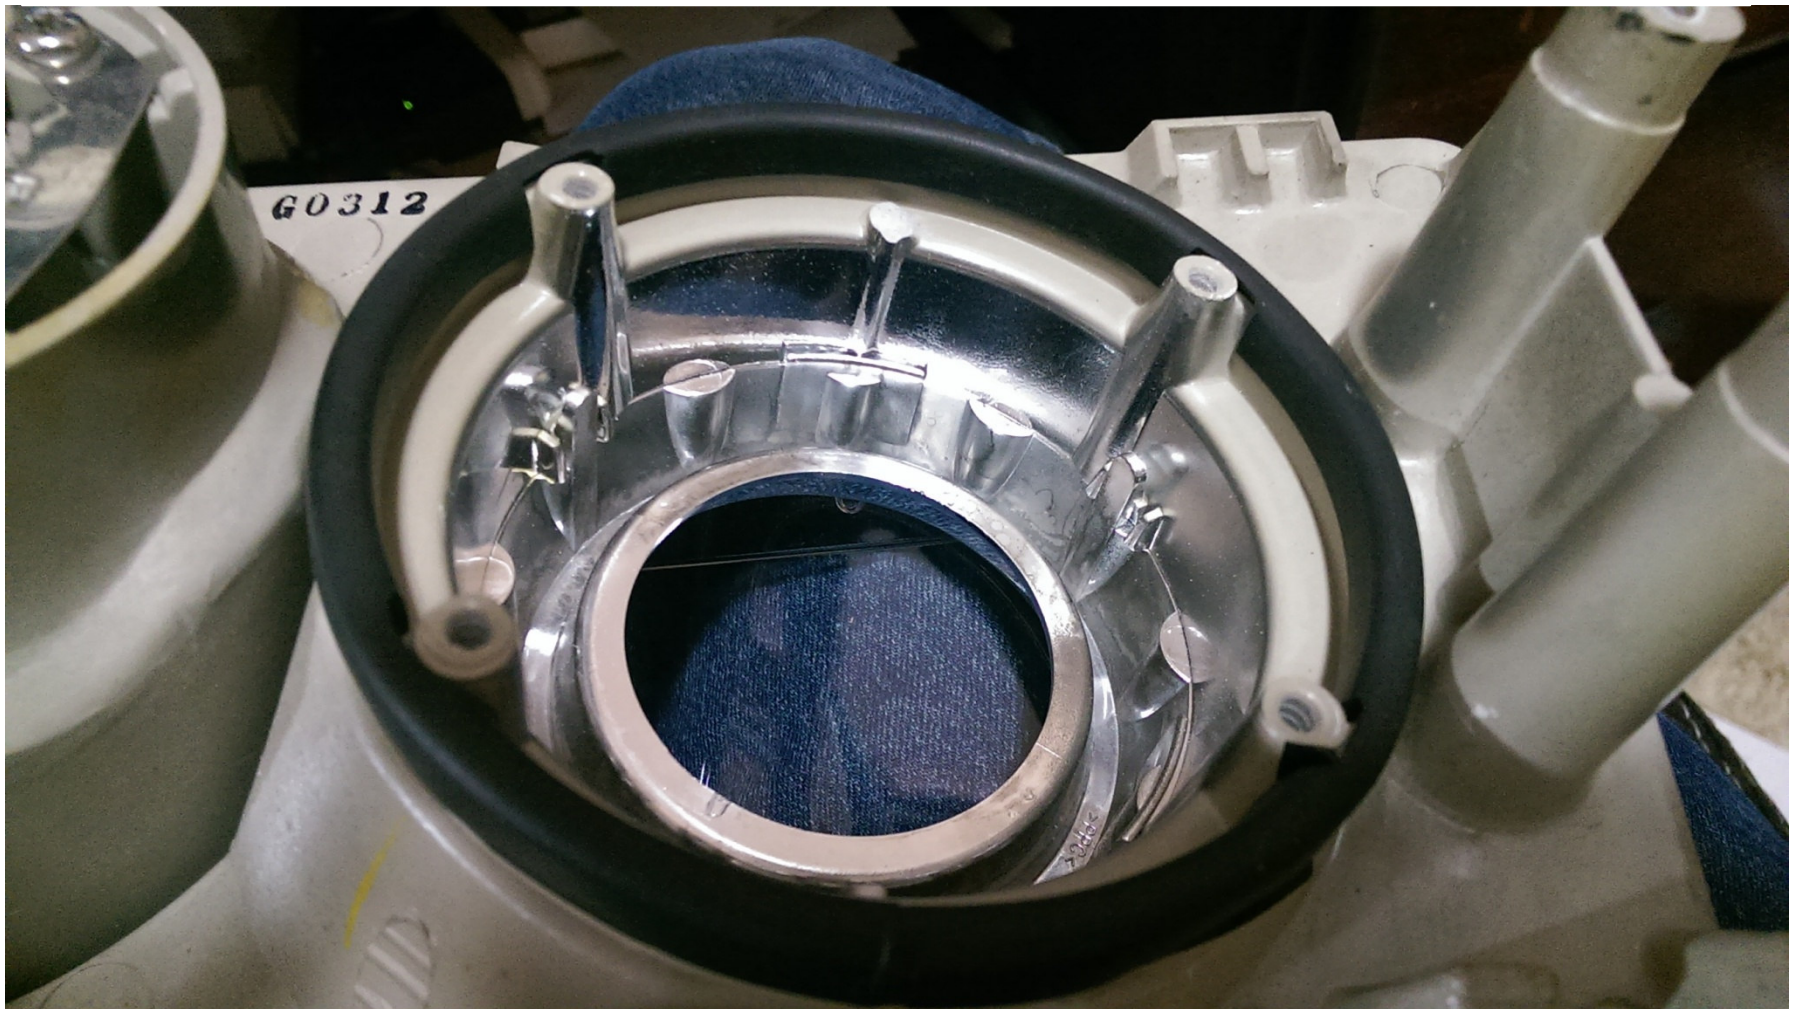

4. Insert the factory projector mounting screws into the mounting holes of the new projector assembly. Insert the provided spacers on the end of the screws as shown.



5. Install the new projector on the factory housing making sure the spacers remain on the screws and the bottom of the projector has wires coming out of the seal. Hand-tighten the screws gently.

