


HUB System – 2 Brake Light System Install Diagram

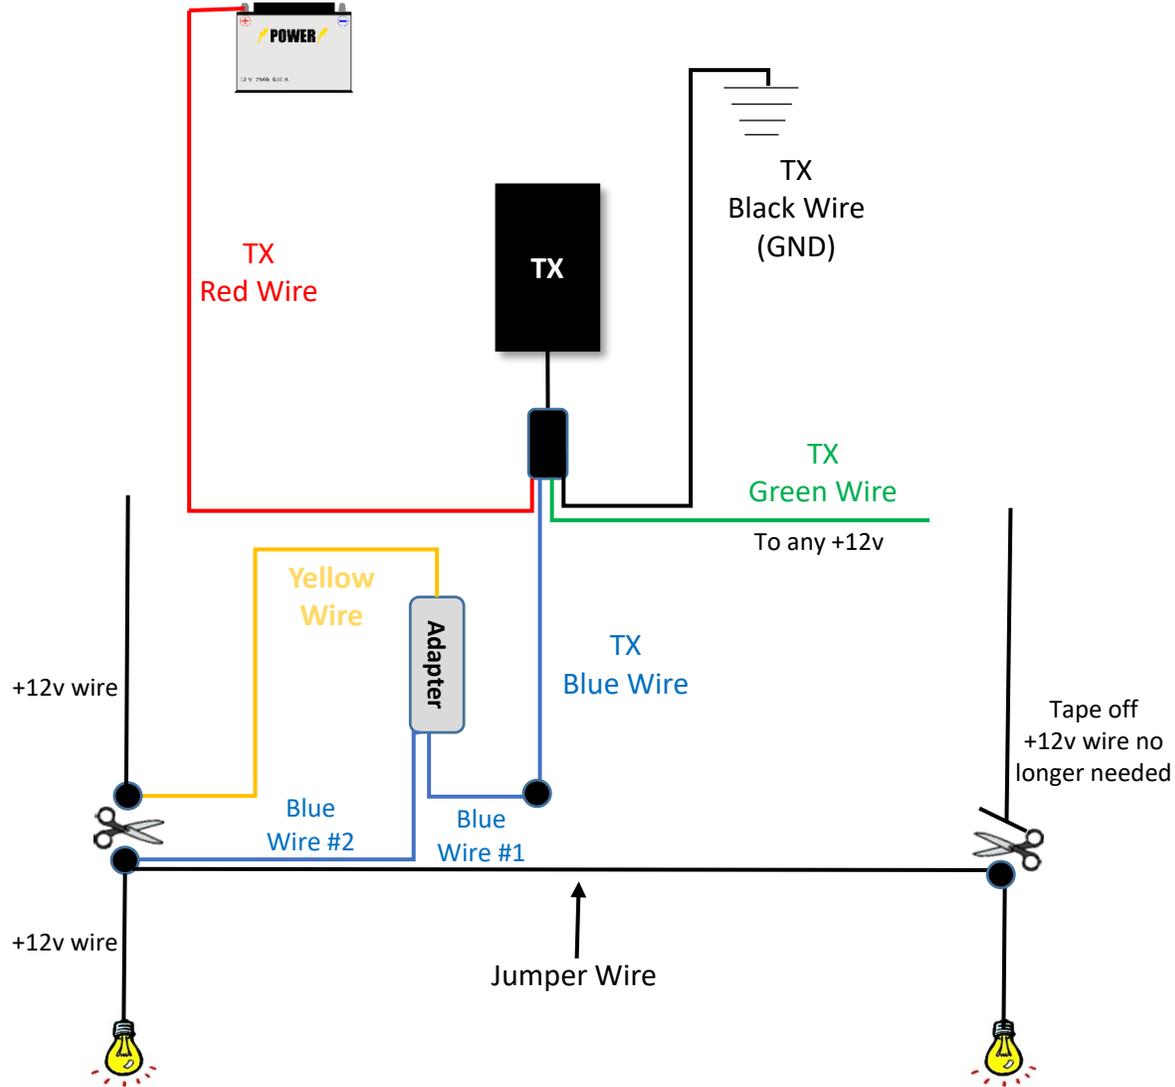

Install Instructions

These steps are for a two brake light set up system (i.e., Goldwing). The only wire change in this arrangement is the TX **Blue** wires. All other TX wire connections remain the same as in the normal install instructions.

Note: As a reminder, make sure the power is off. Make sure that you review and understand the diagram before you begin.

1. Attach TX **Blue** wire to either one of the Adapter **Blue** wires.
2. Test then cut the +12v brake wire (+12v is only on when brake is applied)
3. Attach the second adapter **Blue** wire to the +12v brake wire closest to the brake line. Note: this is where you add the jumper wire (not supplied). Connect one end of the jumper here at this time.
4. Attach the **Yellow** wire from the adapter to the other end of the cut +12v brake wire (see diagram).
5. Cut the other +12v brake wire (see diagram).
6. Attach the other end of the jumper wire to this brake wire (see diagram) closest to brake light.
7. Tape off the other end of the +12v brake wire and you are done.