

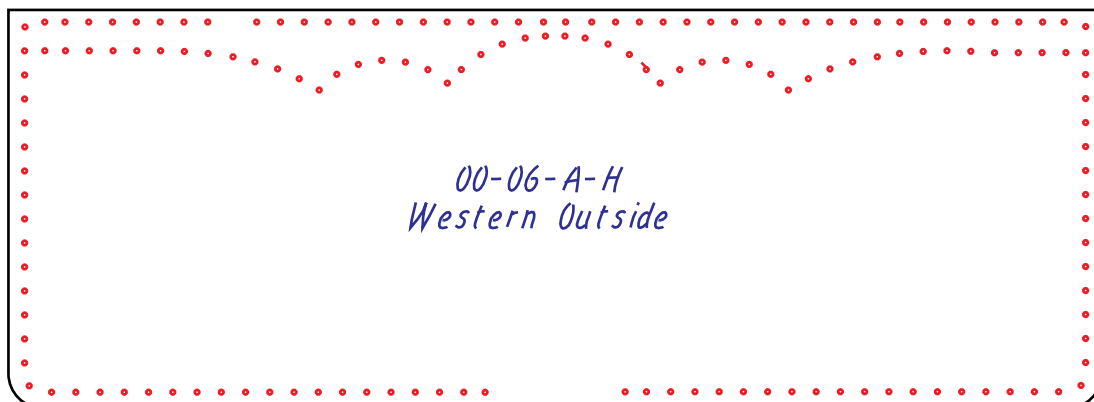
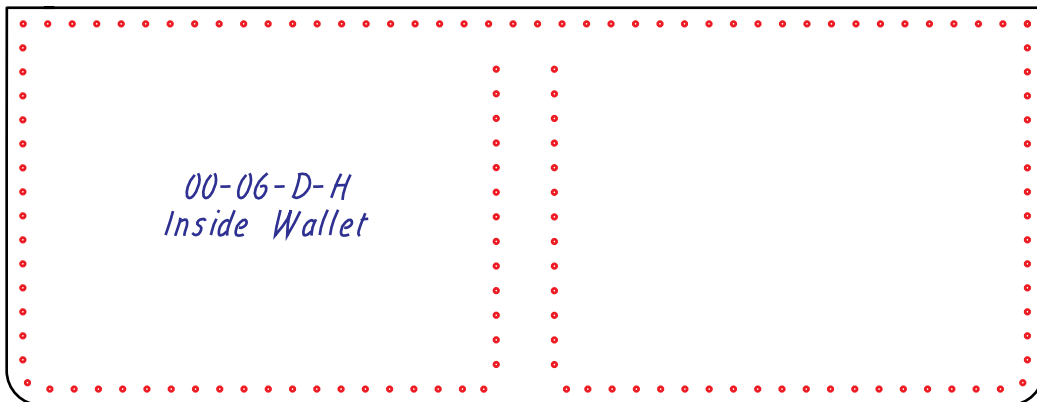
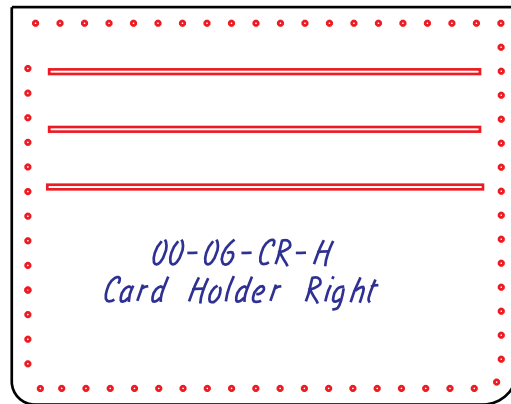


# Bifold with Western Doubler Instruction


## 00-06-H

- 1) Kit-00-06-H KIT
- 2) Die Cut 00-06-H DIE
- 3) Pattern/Template 00-06-H TEMPLATE
- 4) Laser Pattern 00-06-H- LASER

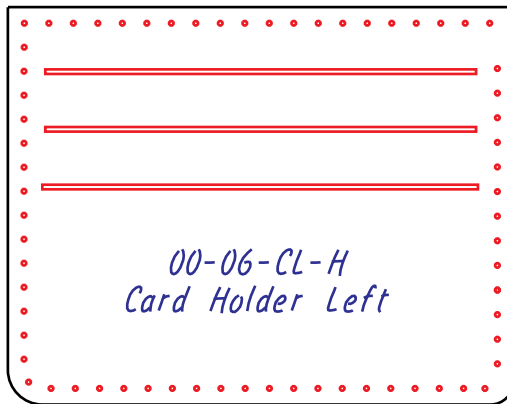

# Step 1


1) Place the left and right card holders on inside piece top grain and sew as indicated

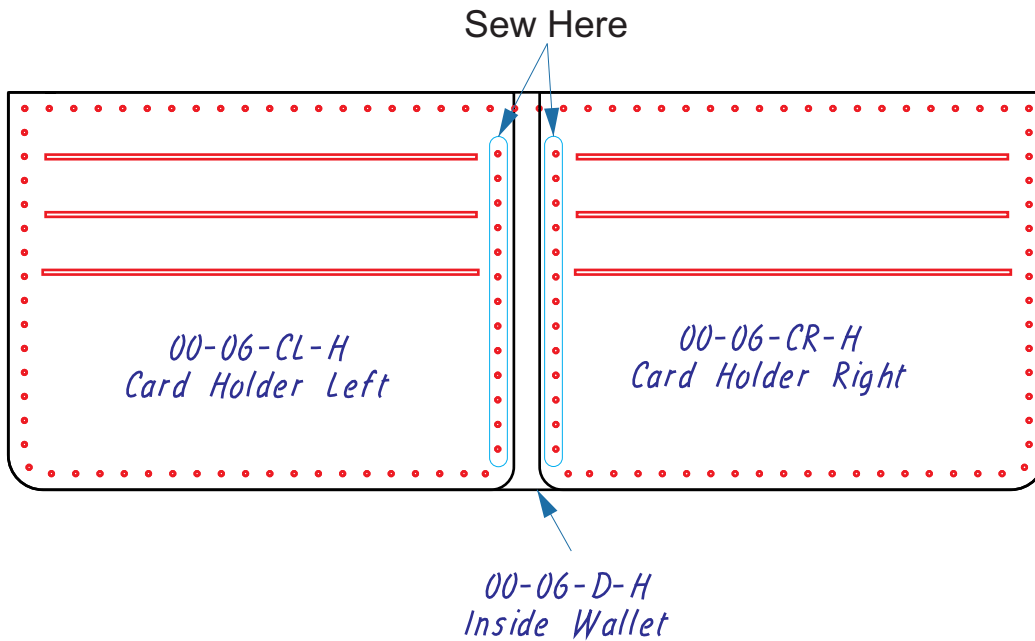

# Step 2


Sew the top row

Once this is completed you might take time to burnish the top edge. Or maybe not for the rustic look

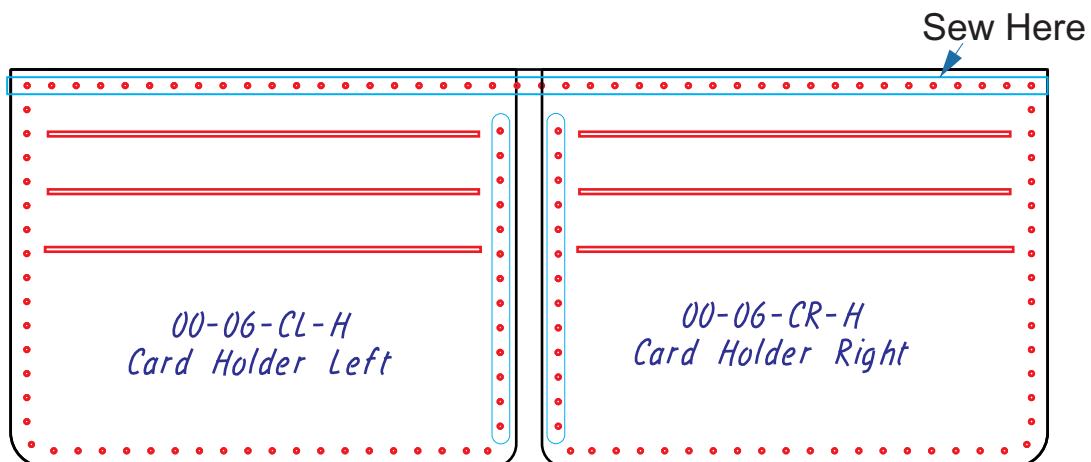

# Step 3

- 1) Sew western doubler to outside piece
- 2) Once this is completed you might take time to burnish the top edge. Or maybe not for the rustic look

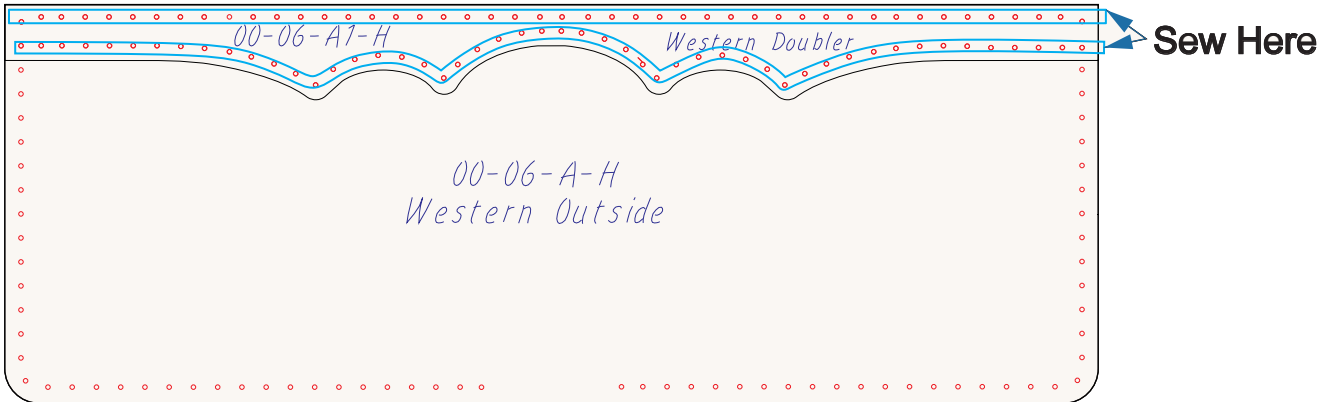

# Step 4

- 1) Sew outside to inside, Flesh side to flesh side
- 2) Repeat the same for the Right side
- 3) Once this is completed you might take time to burnish the top edge. Or maybe not for the rustic look

