
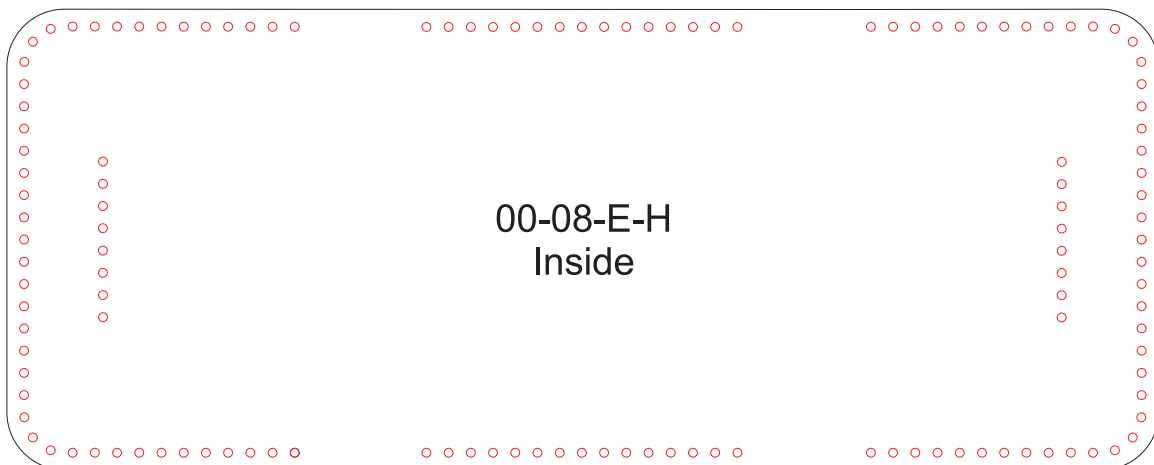
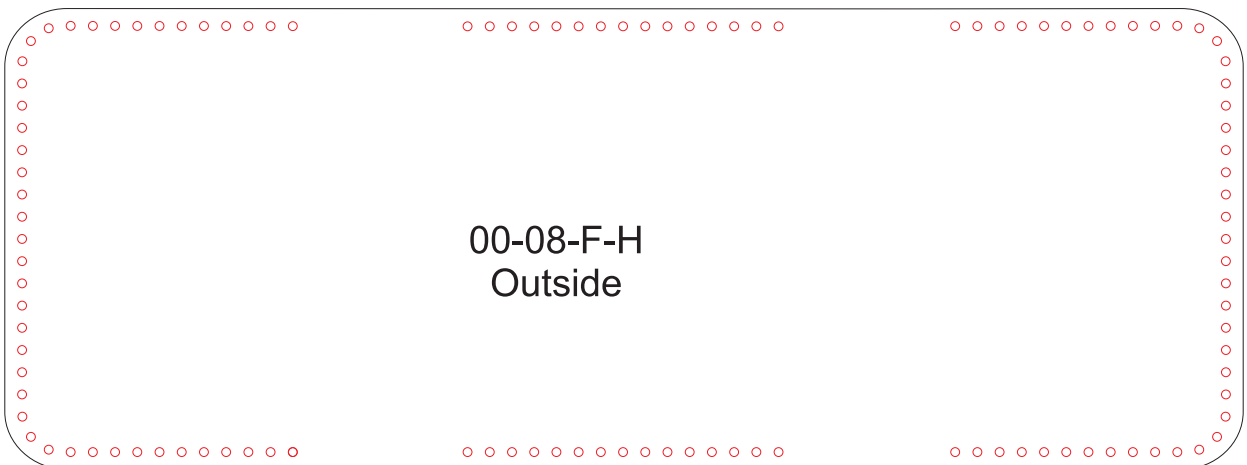
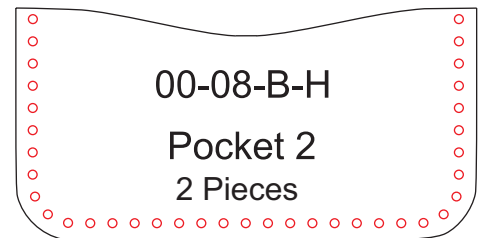
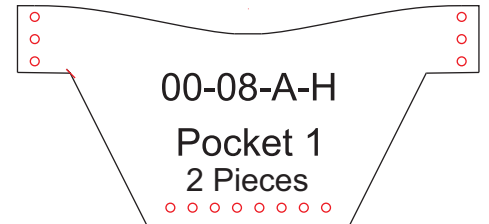
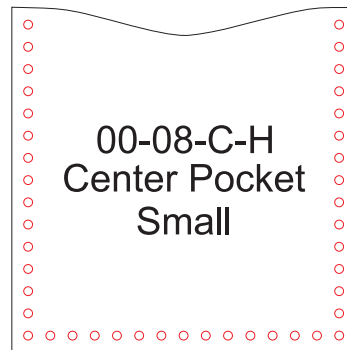



Traditional Tri-fold Wallet 00-08-H

- 1)00-08-H KIT
- 2)00-08-H DIECUT
- 3)00-08-H TEMPLATE
- 4)00-08-H LASER

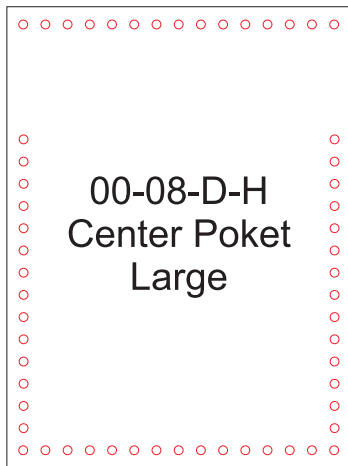


Step 1

1) Place small center pocket on large center pocket top grain up and sew as indicated.

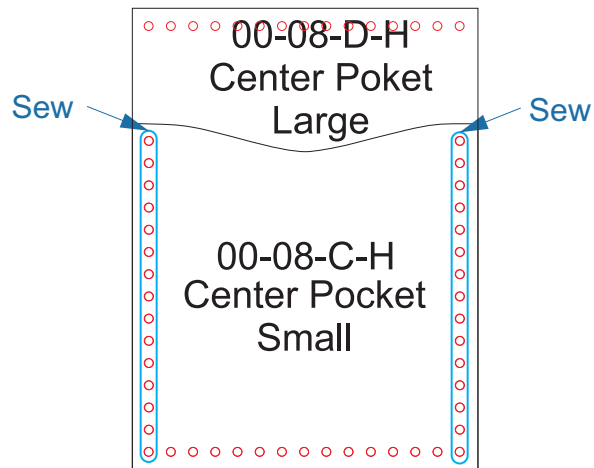


Step 2

1) Sew Pocket 1 pieces to inner piece top grain up. Sew right and left.

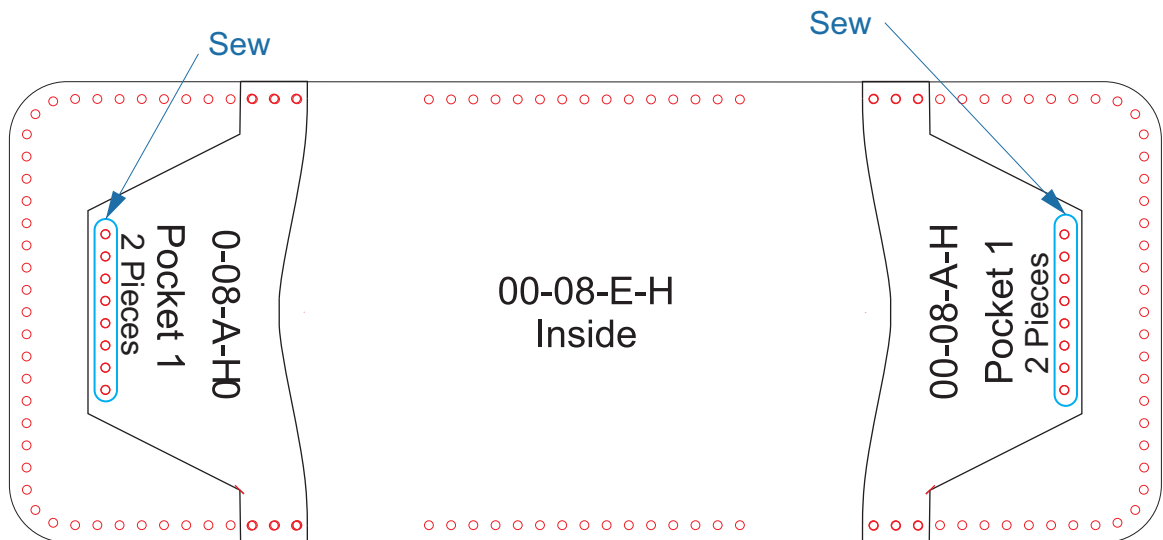

Step 3

1) Sew center pocket assembly to in as shown

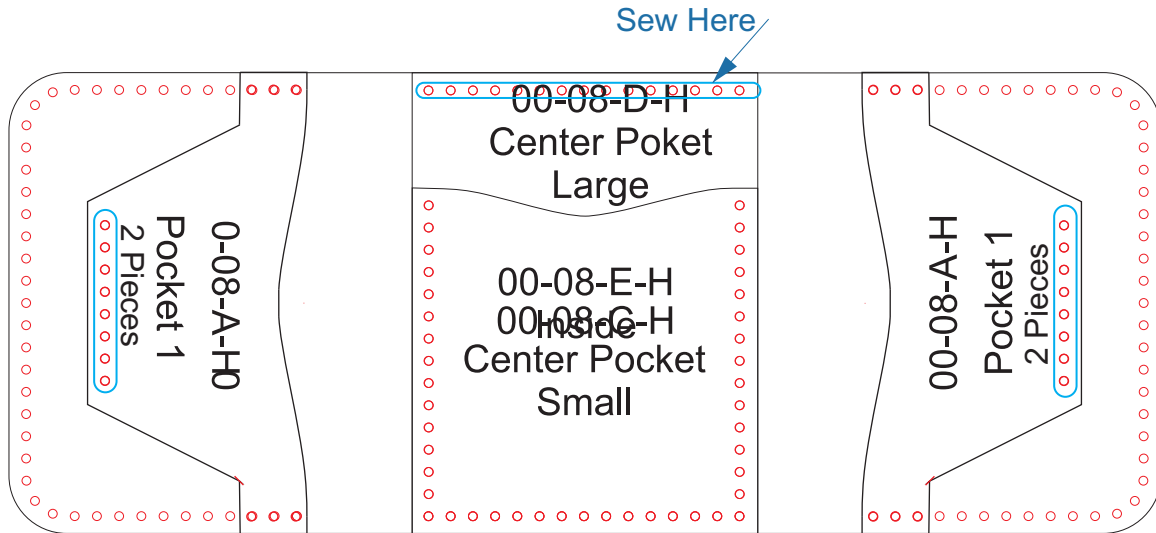

Step 4

- 1) Place pocket 2 as pictured, and continue to sew to outer where pictured
- 2) Sew Bottom of inner pocket assembly to outer

