


Adjustable Anti-idle plate
Installation instructions
August 2025

Please read entire
instructions before beginning
installation

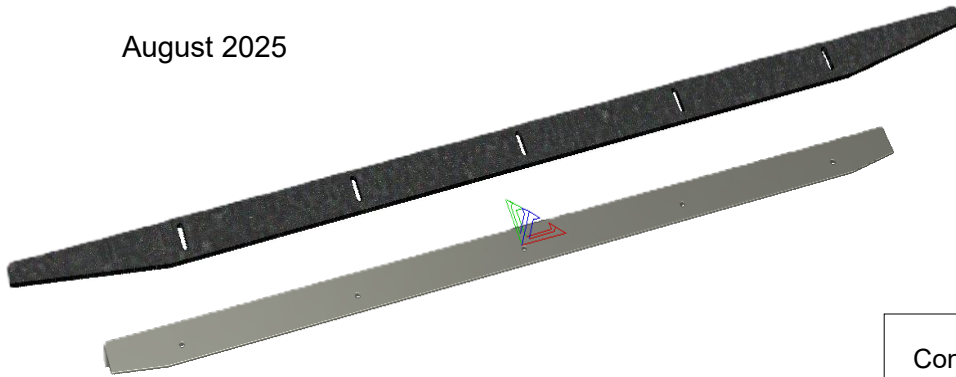

Contents

- [1] Adjustable Anti-idle Plate
- [1] Mounting Bracket
- [5] 1/4-20X1" Hex Bolts and Hardware
- [6] Structural anchoring Screws



Installation

Loosely attach Anti-idle plate to mounting bracket using supplied bolts and hardware. Temporary relocation of front roller will assist in installation of part.

Anti-idle plate is 1 inch narrower than kickback pit width. There should be approximately 1/2" on each side for adjustability when fastening to tail plank.

Using an impact driver or other suitable tool. Use the proper torx-head bit (T-25 or T-30) to start fastening mount bracket in position on tail plank. Using a level is not necessarily needed but if you feel it needs to be level then you can proceed to level on your behalf.

Once the mounting bracket is securely fastened to the tail plank. The Anti-idle plate can be adjusted forward or backward and then tightened in position.

Note* Some older wood tail Planks may be harder to fasten too. Drilling pilot holes first will ensure less hardware failure upon installing of product.

Recommended height per USBC specification is 4 3/4" from top of Pin deck to pit front roller. Please make sure there is minimal interference of measurements as suggested.

