




## Woodward Engineering Developments Ltd


### Triumph Stag Front Towing Eye Installation

**WARNING:** This towing eye is NOT to be used for long distance towing or heavy recovery. It is designed to aid pulling a Stag onto a trailer/recovery vehicle ONLY.

#### Installation:

Offer up the towing eye to the front cross-member as shown in the figures below.

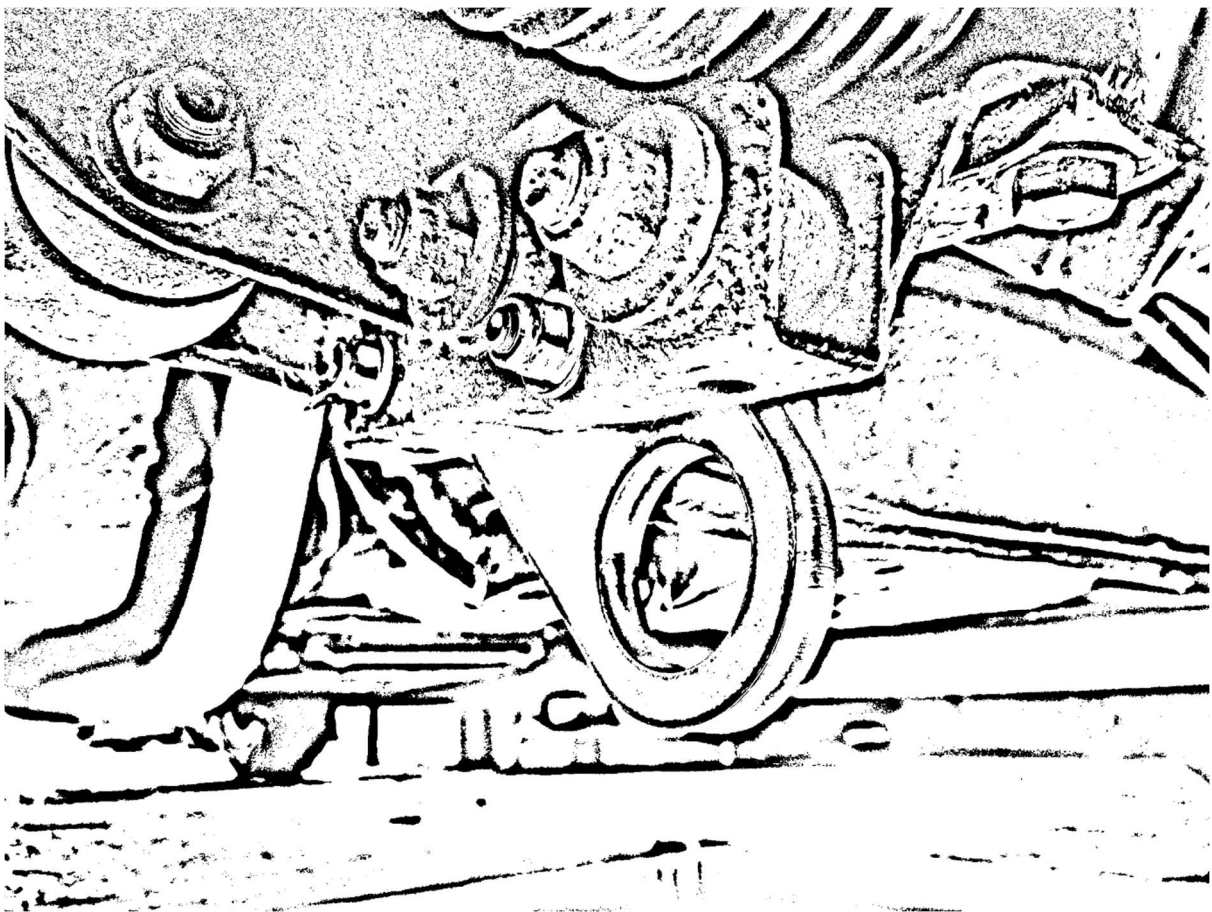

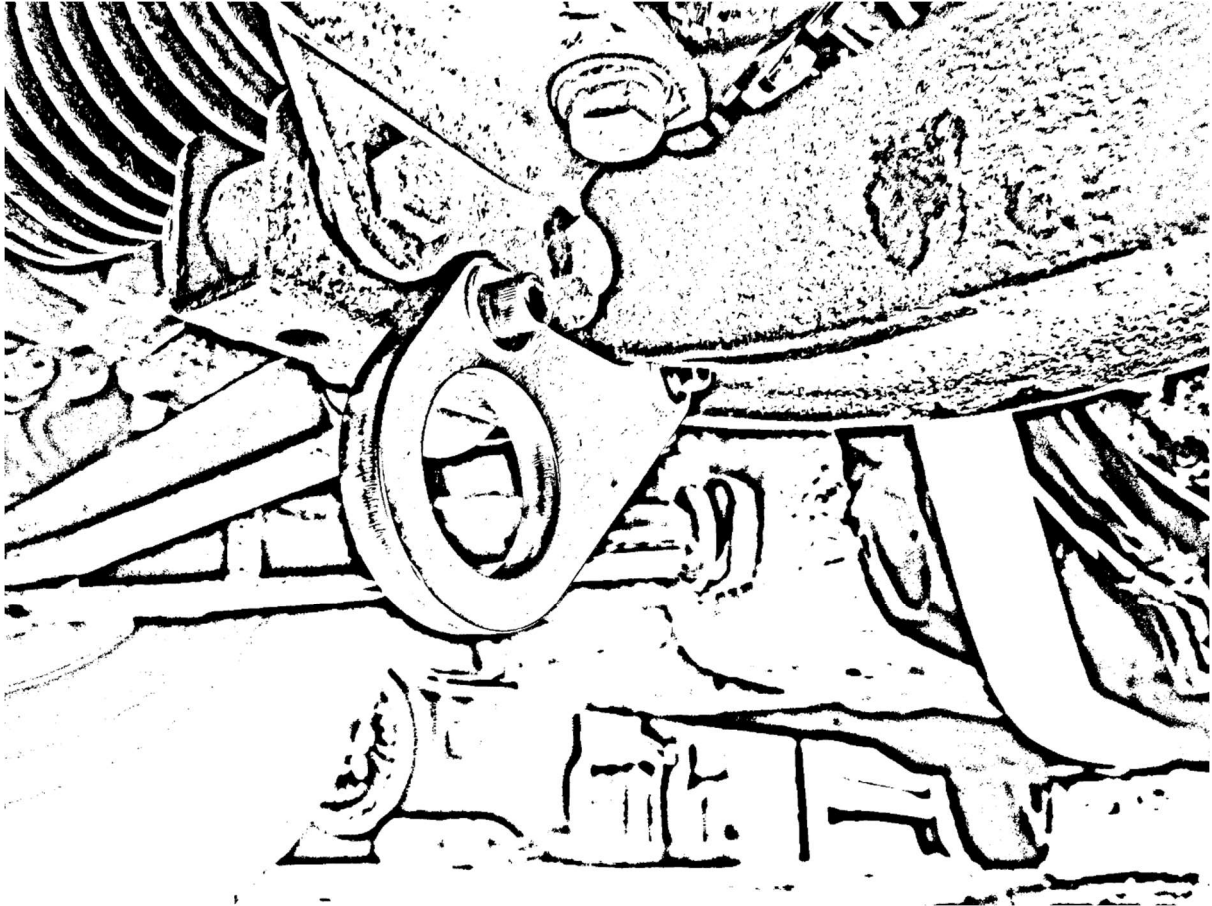

Using 1 washer under the head of each of the 5/16 x 2” UNF bolts, insert both bolts through the cross-member and then through the towing eye.

Add a second washer once the bolts have been inserted through both the cross-member and towing eye, and secure using the nyloc nuts.

Nyloc nuts should always be replaced and never re-used.

Recommended torque is 23 ft. Lbs (30 Nm).

Woodward Engineering Developments Limited makes no warranty, representation, or guarantee regarding the information contained herein or the suitability of its products and/or services for any particular purpose, nor does Woodward Engineering Developments Limited assume any liability whatsoever arising out of the application or use of any product and/or service. The products and services sold hereunder and any other products and/or services sold by Woodward Engineering Developments Limited has been subject to limited testing and should not be used in conjunction with critical equipment or applications. Any performance specifications are believed to be reliable but are not verified, and responsibility remains with the purchaser to conduct validation testing to satisfy the purchaser's requirements. Products and/or services sold by Woodward Engineering Developments Limited are not suitable for road use and have not passed any regulatory testing for such use.