


Order #:   
Total Qty: 1


**IDI  
SLATWALL PANEL**

| Part # | Qty |
|--------|-----|
|        | 1   |
|        |     |
|        |     |
|        |     |

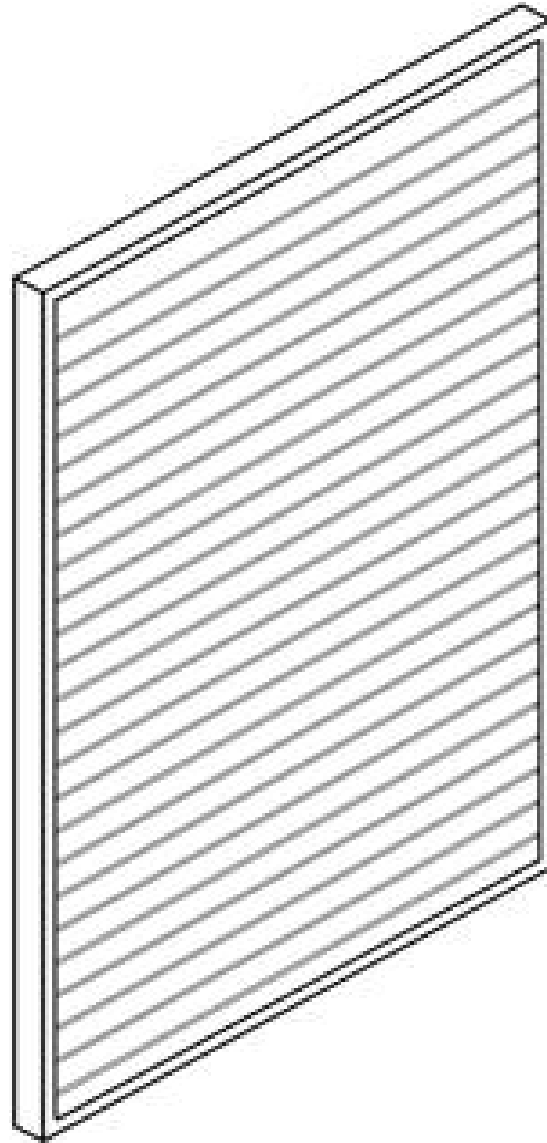


Order #: 0  
 Total Qty: 1

## IDI SLATWALL PANEL

| Key | Description         |   | No. of Parts | No. of Units | Total No. of Parts |
|-----|---------------------|---|--------------|--------------|--------------------|
| 1   | Z-Clip for mounting |  | 1            | 1            | 1                  |

Hardware Parts Packed By: \_\_\_\_\_

Date Packed: \_\_\_\_\_

| Key | Description           |   | No. of Parts | No. of Units | Total No. of Parts |
|-----|-----------------------|---|--------------|--------------|--------------------|
| A   | Fully Assembled Panel |  | 1            | 1            | 1                  |

Wood Parts Packed By: \_\_\_\_\_

Date Packed: \_\_\_\_\_

Order #: 0  
 Paladin Caseworks Inc  
 www.paladincaseworks.com  
 info@paladincaseworks.com



Rev.: 3.15.16


Total Qty: 1

## IDI SLATWALL PANEL

\*\*\* Please read and review all instructions prior to starting assembly \*\*\*


- Step One:** Unpack slatwall panel.
- Step Two:** Determine the type of material you will be mounting this panel on. Concrete, cinderblock, sheet rock, wood veneer or other. You will need to purchase the appropriate type of hardware for the material you have.
- Step Three:** Simply use the hardware you purchased following instructions on the packet to hang the part of the cleat that was shipped loose. Once mounted to your mounting surface (wall, end of shelving, column etc...) simply hang slatwall matching the two cleats
- Step Four:** Slatwall accessories are sold separately and not included

**WOOD FRENCH CLEAT  
for wall mounting**

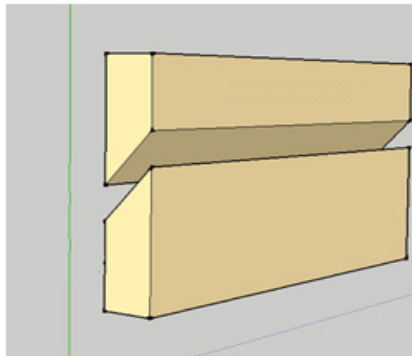

**Comes attached to  
back of panel**

**Must be mounted on  
wall by owner**

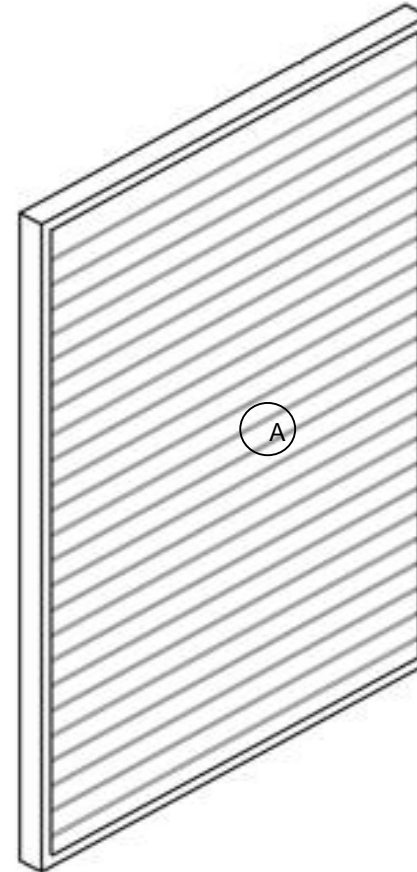

## IDI SLATWALL PANEL

Paladin Caseworks Inc  
www.paladincaseworks.com  
info@paladincaseworks.com



Rev.: 3.15.16

## Furniture Care Recommendations from the nation's leading furniture manufacturers

- 1.) Dust frequently.
- 2.) Use a quality furniture polish approximately once a month to lessen your chance of expensive refinishing jobs.
- 3.) Clean up spills immediately. Use a blotting action rather than a wiping action.
- 4.) For cleaning use a soft, lint-free absorbent cloth.
- 5.) Avoid placing furniture in direct sun light.
- 6.) Avoid extremes in room humidity. Too high or too low humidity can cause wood to warp or glue lines to fail.
- 7.) Avoid extreme changes in temperature. Arrange furniture away from radiators, registers and air-conditioning units.
- 8.) Rotate accessories on furniture so they do not sit in the same place all the time.
- 9.) Do not place plastic or rubber objects on a wood finish-their ingredients react with those of the finish.
- 10.) Use pads, cloth or felt to protect the furniture surface from plastic, rubber, hot dishes, beverages, bookends, flowerpots and vases.
- 11.) Lift objects-do not drag them across the furniture surface.
- 12.) Never use silicone or petroleum distillate polishes.

