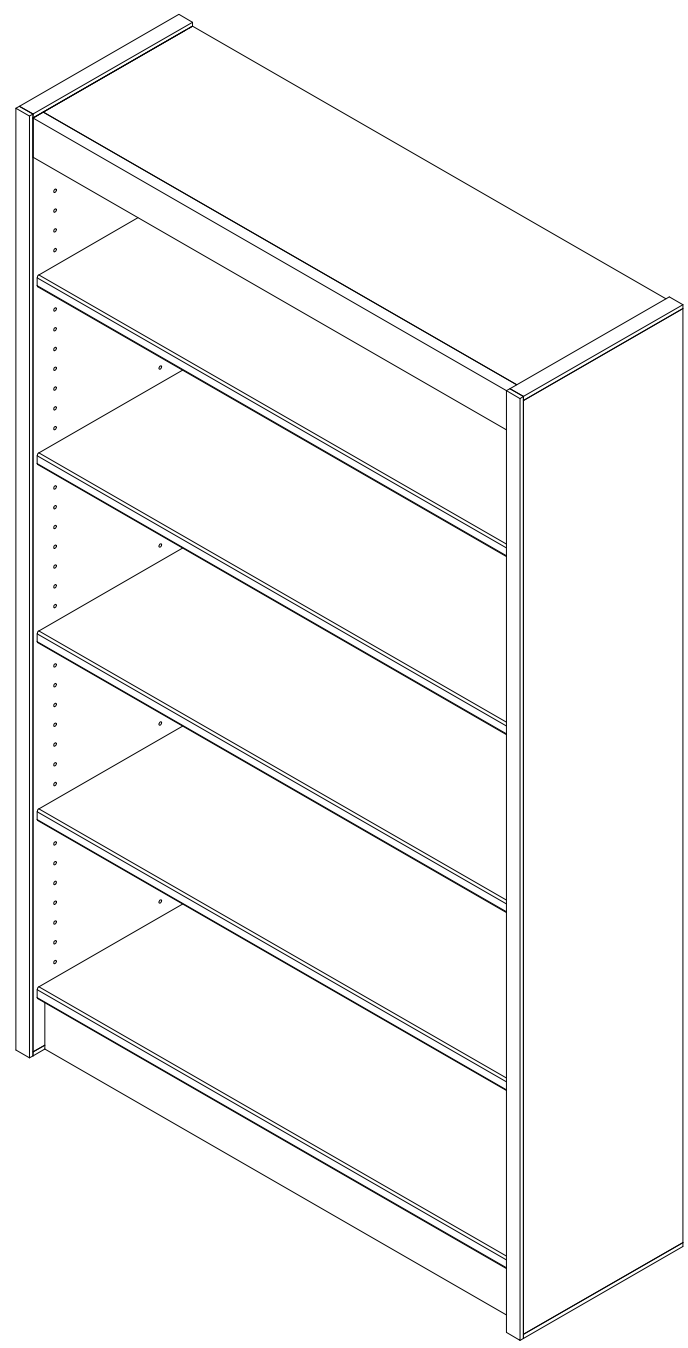


42, 48 , AND 60 STARTER ASSEMBLY INTRUCTIONS AND PACKING LIST

(Also for 40, 46 and 58H End of Range Shelving)







ORDER NO:	
17800	
DEALER	
PROJECT	
SIZE	SCALE
A	
DRAWN	DATE
DG	5/20/2013
DWG NO CSHF6012S.iam	REV
SHEET 1 OF 3	

2



1

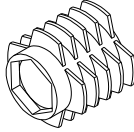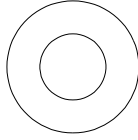HARDWARE LIST IDI1300

ITEM	QTY	DESCRIPTION	
1	8	INSERT 5/16-18 FACTORY INSTALLED	
2	20	SHELF PIN	
3	8	5/16-18 x 1 3/4 HEX HEAD UNC	
4	8	5/16 FLAT WASHER	

B

B



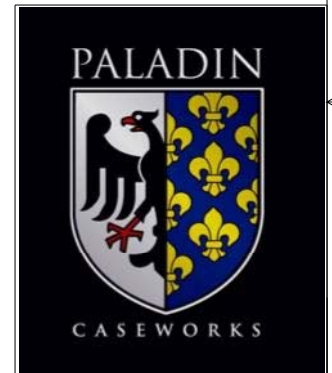
A

A

2



1



ORDER NO:	
DEALER	
PROJECT	
SIZE A	SCALE
DRAWN DG	DATE 5/20/2013
DWG NO UPRIGHT INSERT.ipt	REV
SHEET 2 OF 3	

Step One: Place base on floor with finished edge facing out and groove for back facing up.

Step Two: Attach left hand end panel to base. Align grooves for back panel with grooved rail on base. Secure with hand tightened 1-3/4" hex bolt and washer through each hole in the base into the threaded insert in the end panel.

Step Three: Attach right end panel to the base using 1 3/4" hex bolts.

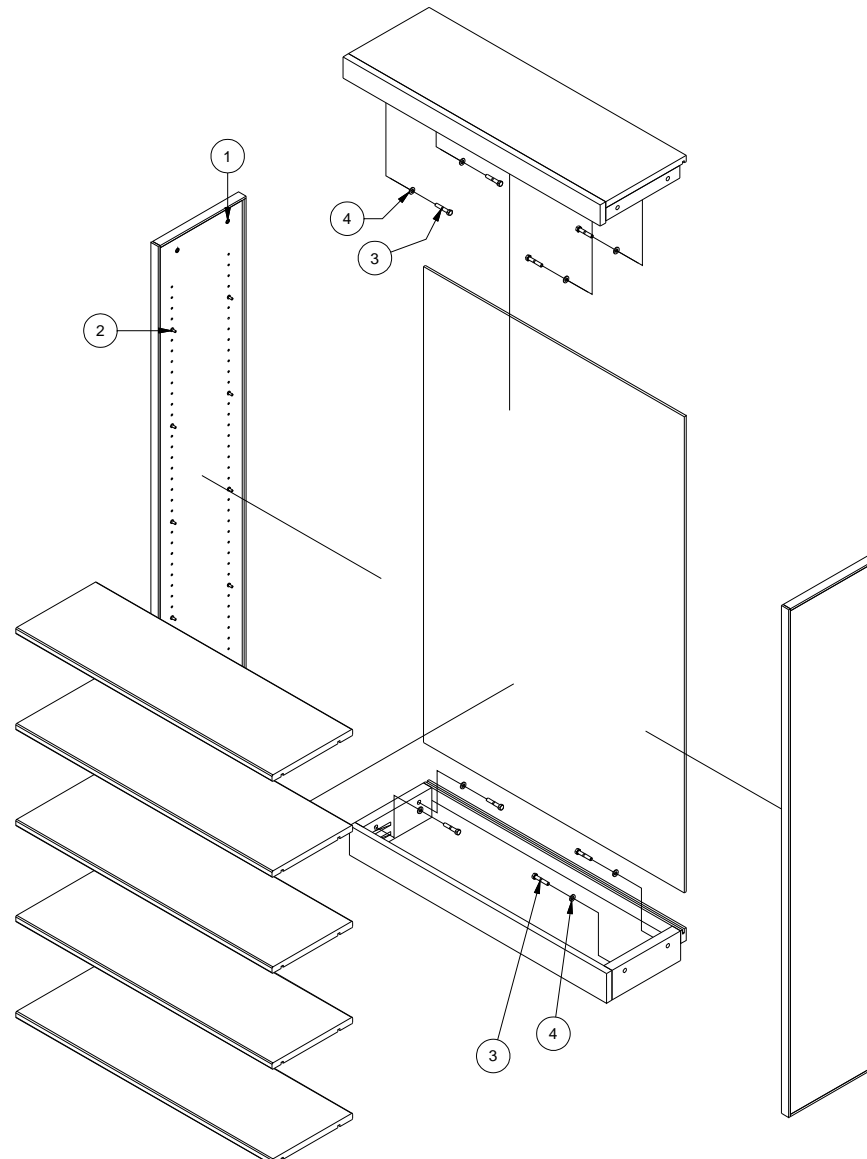
Step Four: Slide back into the grooves on both end panels and the base rail.

Step Five: Place shelving soffit between the left and right hand end panels aligning the side holes in the soffit with those in the end panels. Secure with hand tightened 1-3/4" hex bolt and washer through each hole in the soffit into the threaded insert in the end panel.

Step Six: Tighten all hex bolts with socket or wrench. Adjust base, top and end panels to straighten the units.

Step Seven: OXFORD SHELIVING ONLY: Place base shelf with counter sunk holes facing up on the base frame. Use the two 1-1/2" screws in each hole to secure the base shelf to the frame.

Step Eight: Set each adjustable shelf with four shelf clips in notches on the shelves.



ORDER NO:	
DEALER	
PROJECT	
SIZE B	SCALE
DRAWN DG	DATE 5/20/2013
DWG NO CSHF6012S.iam	REV
SHEET 3 OF 3	