Doorways and Arches




Doorways are generally emphasized in traditional stone construction, either for aesthetic reasons or because the structure of the wall is more strongly expressed. Keystones, lintel blocks, door posts and so forth are often exposed and can be elaborately carved to create a unique design statement.


The elevation drawings that follow show a wide variety of traditional door and doorway surround styles, from simple to complex, which can be created by combining field applied ArcusStone finishes with coated foam and cast ArcusStone shapes. Designers are encouraged to choose a style appropriate for their project or to use the designs as inspiration for creating custom styles.


The size of the elements of doorway surrounds should be proportional with the size of the opening. The style drawings may be used as guides, but the designer should indicate stone layouts and typical sizes on elevations.

The following information must be indicated on drawings to properly specify the products and allow the applicator to do accurate cost estimating:

- 1. Size of door or doorway opening.
- 2. Quantity of each style of door surround.
- 3. Detail of door frame, e.g., is the frame flush with walls or does the stone finish return back to arecessed frame? (To achieve an authentic appearance, we recommend that windows be recessed when possible.)
- 4. Stone Texture
- 5. Stone Color
- 6. Surround Style (as shown on drawings that follow, or custom.
- 7. Selection of cast stone molding, keystone, or foam shapes etc., as required for selected surround styles.

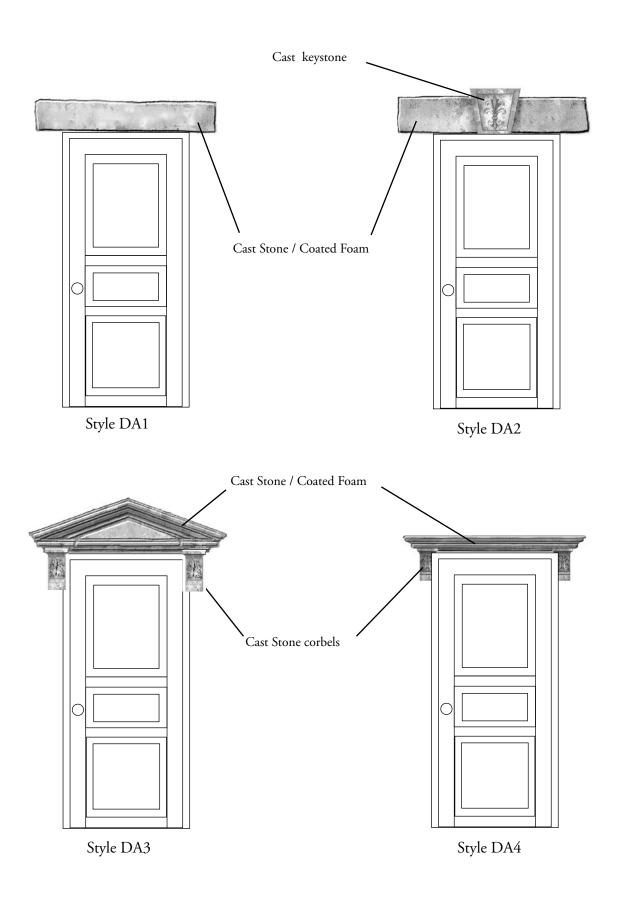

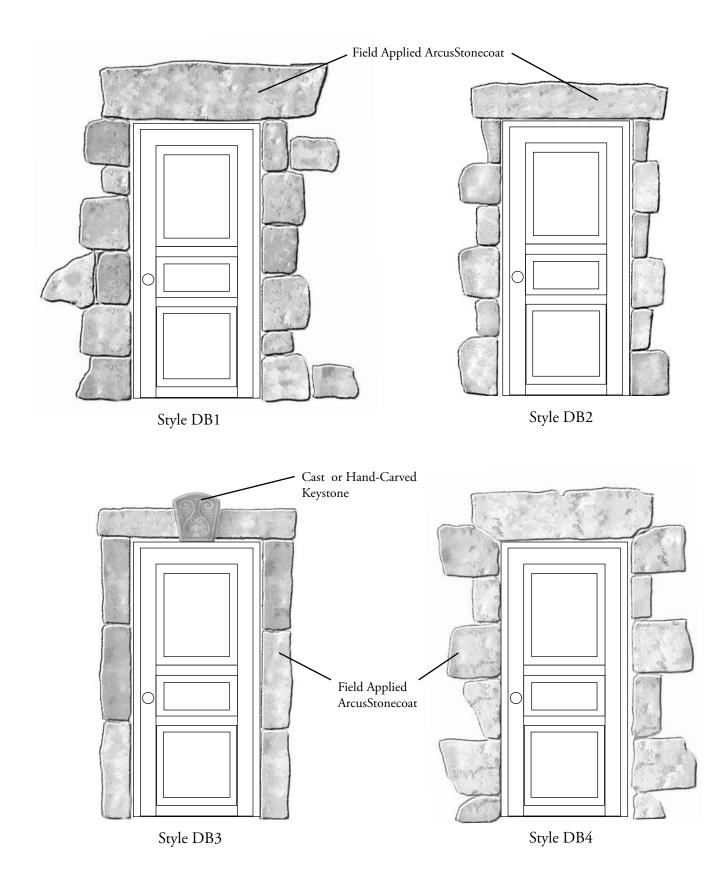

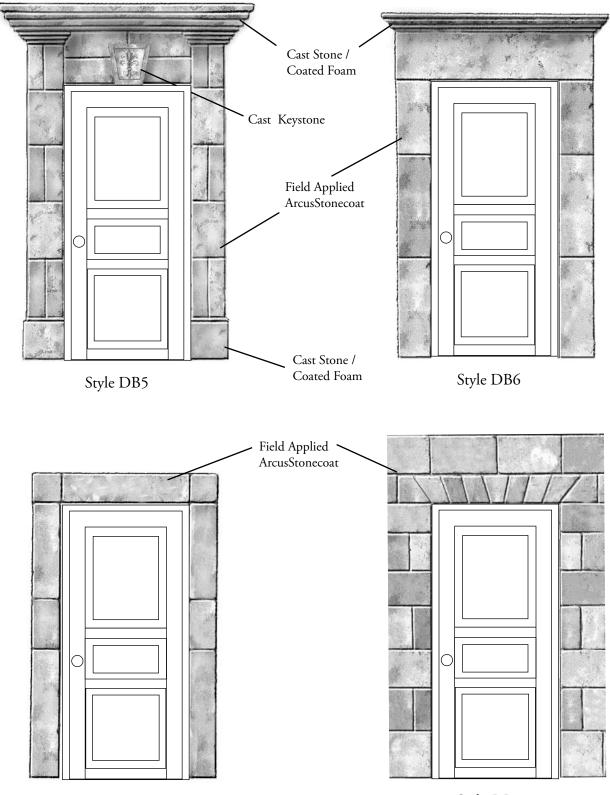

Style DB8

