


PREPARING REINFORCEMENT MAT FOR THE MAIN LAMINATE

All of the mat should now be cut to size for the main laminate on the roof.

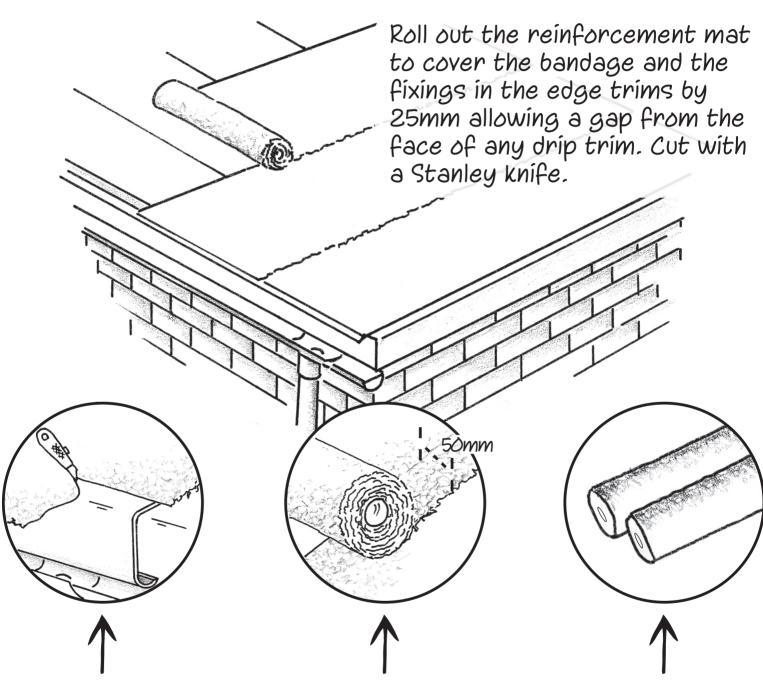

Cover edge trim
fixings keeping the
mat away from the
face of the trim to
prevent the laminate
spoiling the finish on
the front of the trim.

Overlap the feathered edge of each subsequent roll over the straight cut edge of the previous length by 50mm.

Re-roll each length and keep in order for use later.