

# 2


## FIXING THE F300

SEE NUMBER 8  
ON THE CURE IT  
BUILD-UP DIAGRAM

F300 Flat flashing is commonly used to run under the first row of slates where a pitched roof meets the flat roof.

SEE THE PRE FORMED  
CORNER SECTION OR MITRE  
GUIDE FOR INSTRUCTIONS  
ON FITTING CORNERS.

Staple or nail the flat  
sheet to the deck.

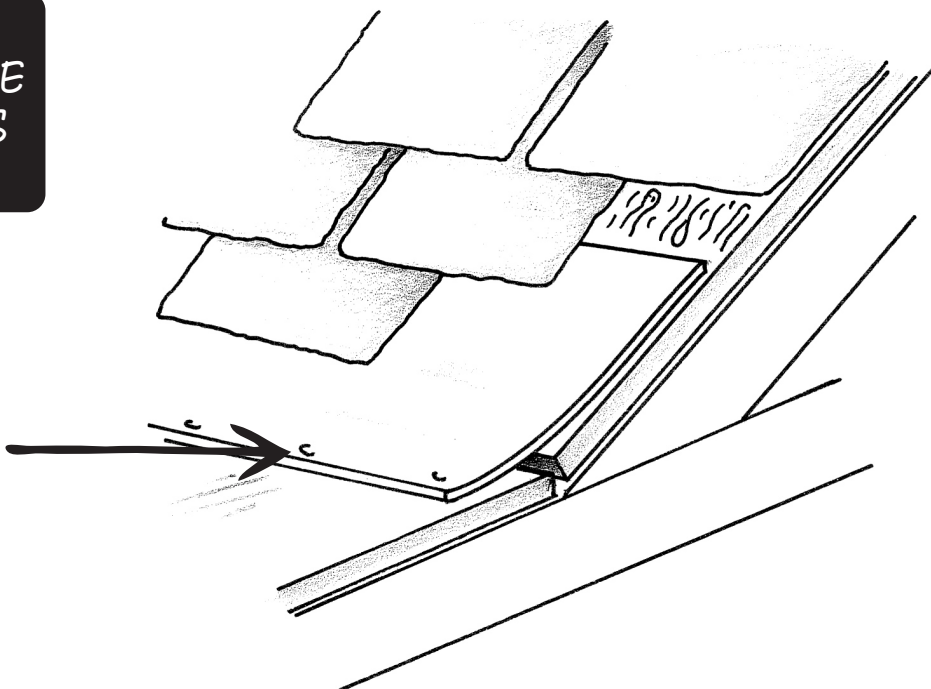


Cure It GRP  
laminate

Bandage

F300

Breather / sarking felt  
(should overlap F300).

Roofing tack

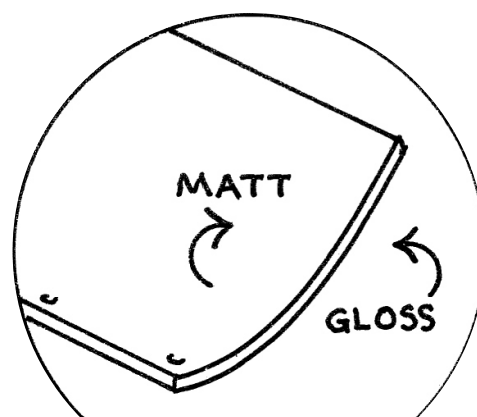

Ensure the bonding  
side (matt) is face up.

