

# 2

## PRE-FORMED CORNERS



SEE NUMBER 4,6&9  
ON THE CURE IT  
BUILD-UP DIAGRAM

Pre-formed corners are available  
for common corner detail.

### C1 Corner


C1 Universal corner for  
junctions between A200  
& B260.

SAND AND WIPE WITH  
ACETONE BEFORE USING  
FOR A BETTER BOND

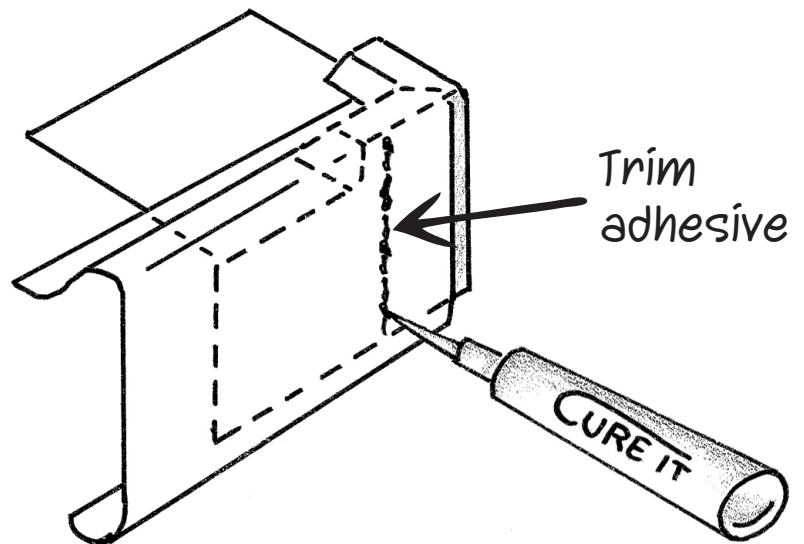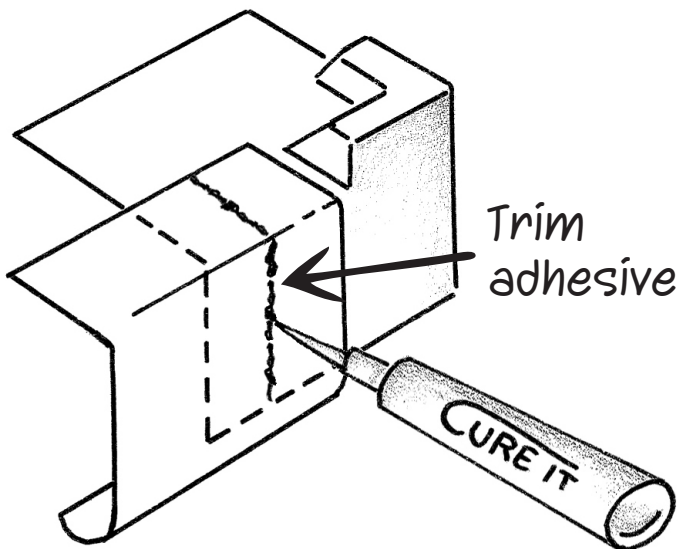

### C3 Internal / External corner

The edge between each  
trim and corner should be  
sealed with a strip of trim  
adhesive under the section  
of trim covering the corner.

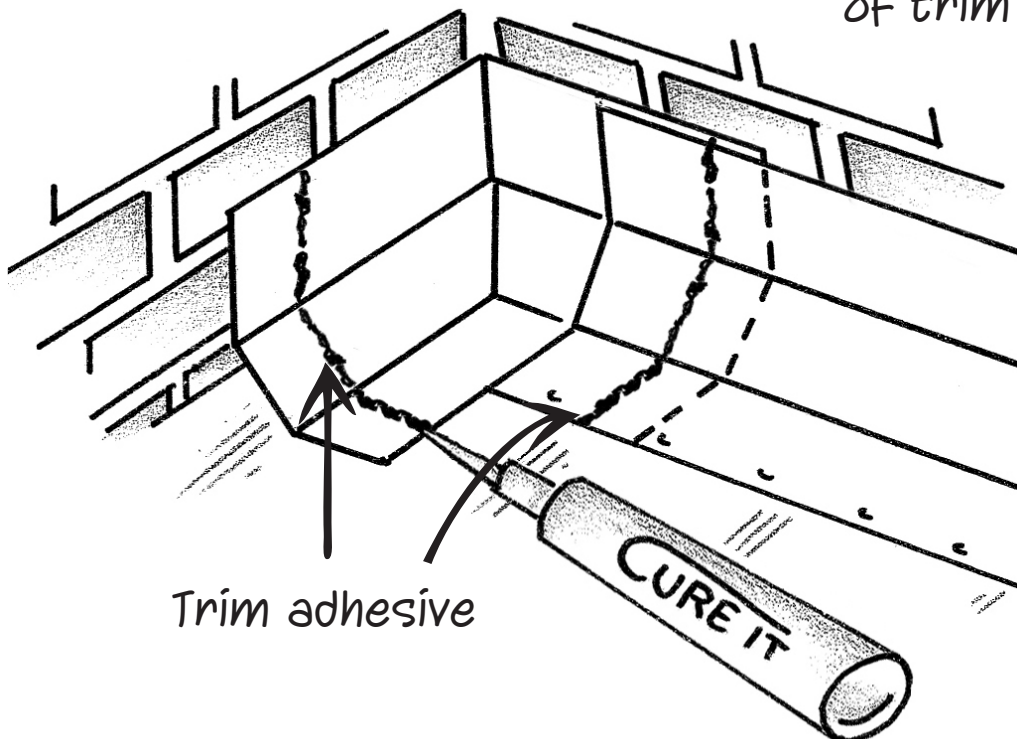

These joints will all  
be laminated with  
a bandage strip  
at a later stage.