

# 2

## B260 RAISED EDGE TRIM

The B260 is installed around the perimeter to guide water off the roof.


SEE NUMBER 3  
ON THE CURE IT  
BUILD-UP DIAGRAM

SEE THE PRE FORMED CORNER SECTION OR MITRE GUIDE FOR INSTRUCTIONS ON FITTING CORNERS.

The B260 is applied in the same way as the A200 with 2 exceptions:

The decking does not need to be planed.

Cure It GRP laminate

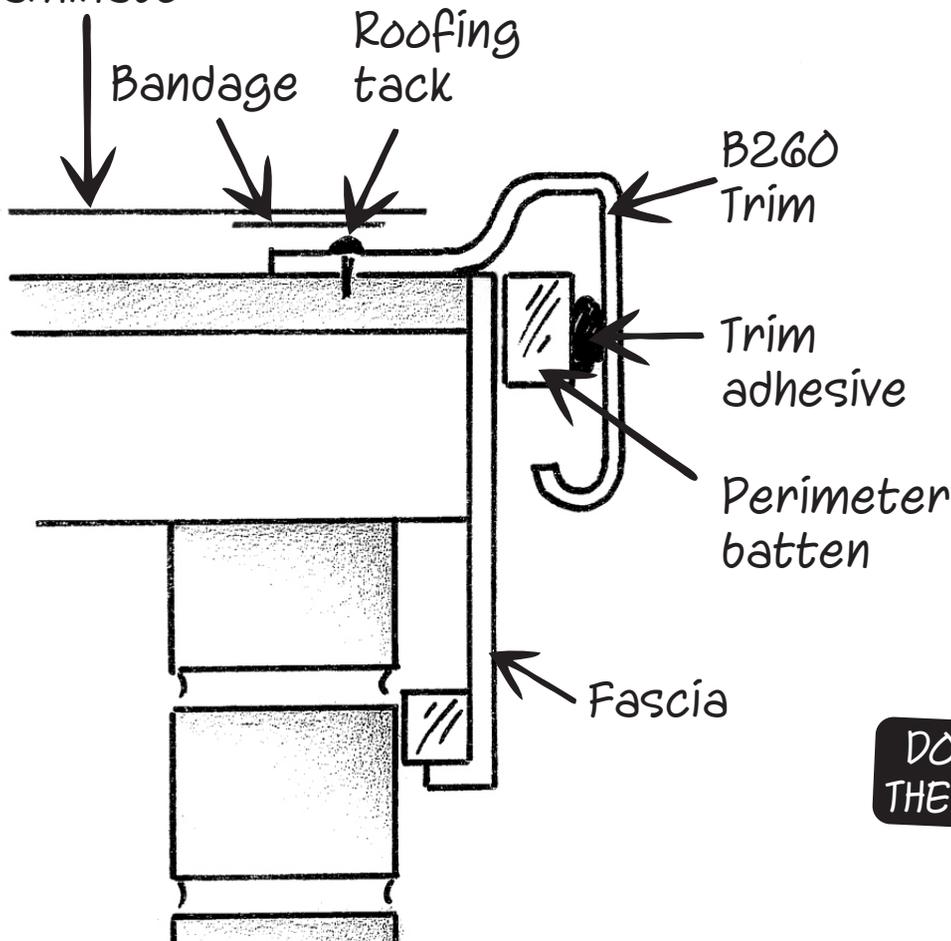

Only one perimeter batten is required.

Apply a continuous strip of Cure It Trim adhesive along the batten. Rub the trim into place and use roofing tacks / staple gun to fit the trim to the deck at 150mm centres taking care to ensure the trim sits flat on the deck. !

DO NOT NAIL THROUGH THE FRONT OF THE TRIM.