
EMBOSSED CLADDING INSTALLATION GUIDE

IMPORTANT

Storage

- Embossed cladding must be stored in a dry well ventilated area away from direct exposure to sunlight.
- Transport and store the profiles horizontally.

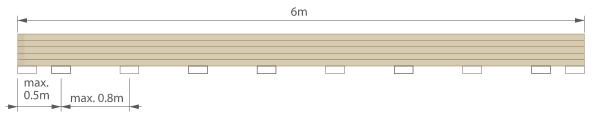

PRECAUTIONS

- Embossed cladding 167mm is not a structural product.
- Installing the cladding in temperatures below 0°C or above 30°C is not recommended.
- Do not install the cladding near a heat source.
- The protective tape should be removed immediately after installation.

MAINTENANCE

- Cleaning PVC profiles is extremely easy; simply use a soft damp sponge and household cleaning detergent. Avoid the use of abrasive materials and ammonia or chlorine based cleaning agents such as bleach.
- Never use corrosive substances; solvents such as benzene, acetone, turpentine, kerosene or white spirit for example are not permitted.
- Never attempt to clean the profile without water or some form of moisture as this may scratch the surface of the PVC.
- Never paint the PVC profiles.

RECOMMENDED SAFETY EQUIPMENT AND TOOLS



















EMBOSSED FEATHER EDGED CLADDING INSTALLATION GUIDE

