


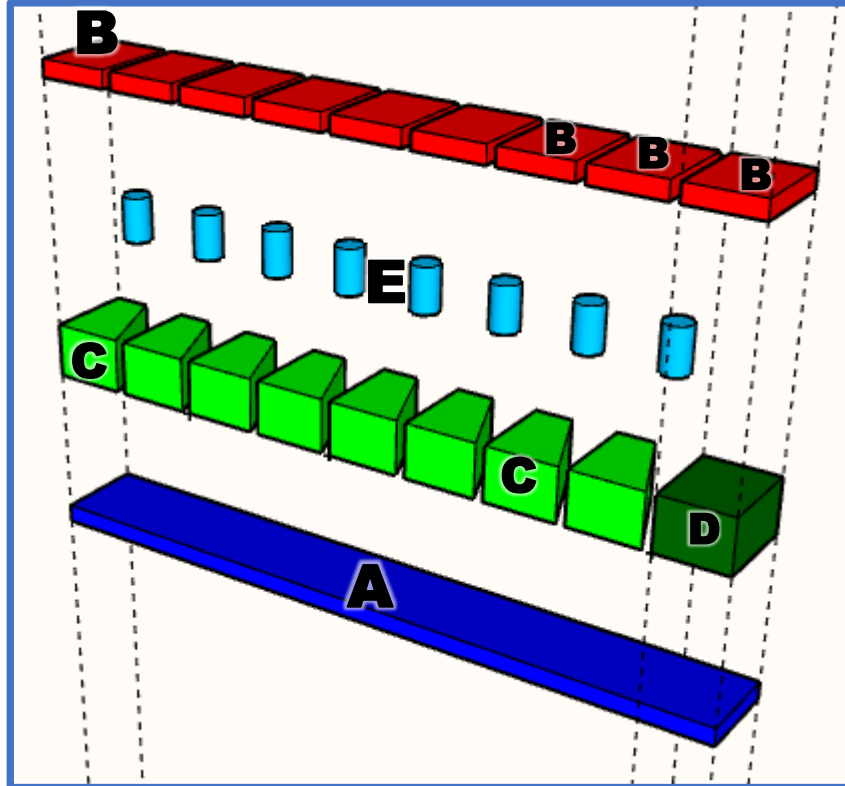
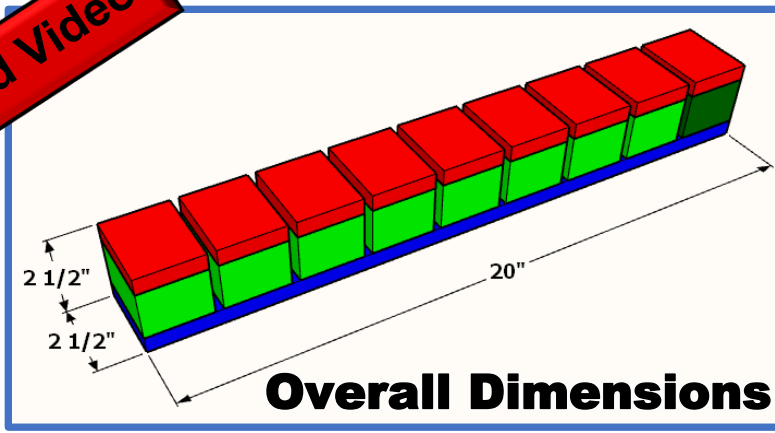
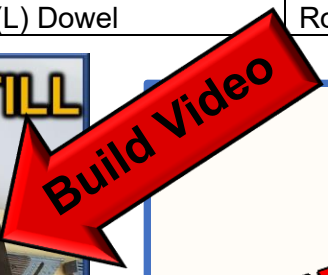
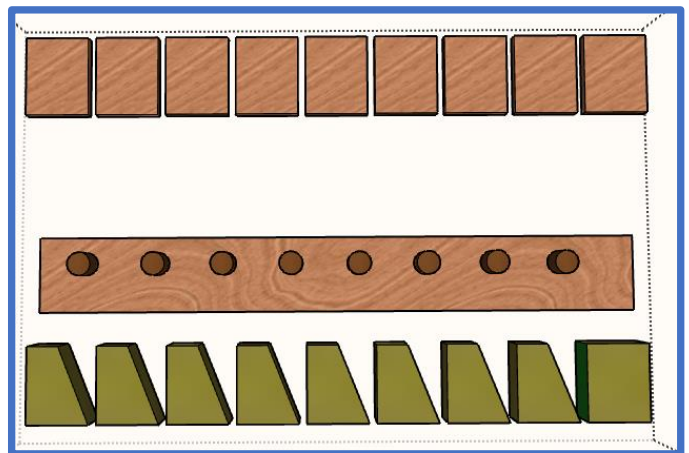
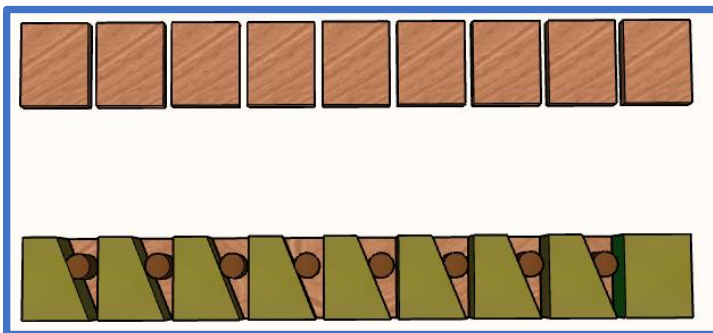


Make a space saving saw till the holds your saws vertically and ready to use!
This auto-grab design both functions well and looks cool!

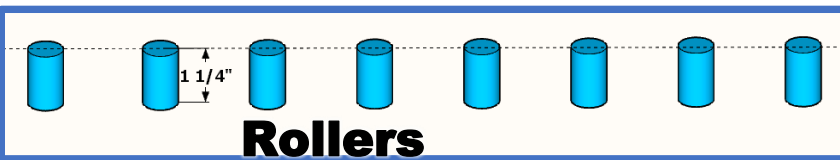

PARTS LIST & CUT SHEET			
<i>*Adjust part sizes to fit based on your actual material thicknesses & final sizes</i>			
Component	QTY	Dimensions	Description
A	1	2.5" (W) x 20" (L) x 1/2" (T)	Backer Plate (1/2" Plywood)
B	9	2.5" (W) x 2" (L) x 1/2" (T)	Front Cover Plates (Plywood)
C	8	2.5" (W) x 2" Base 1" Top x 1 1/2" (T)	Wedges (Dimensional Lumber Scrap)
D	1	2.5" (W) x 2" (L) x 1 1/2" (T)	Right-end stop
E	8	3/4" Dia. X 1 1/4" (L) Dowel	Rollers (substitute 3/4" rubber balls if desired)

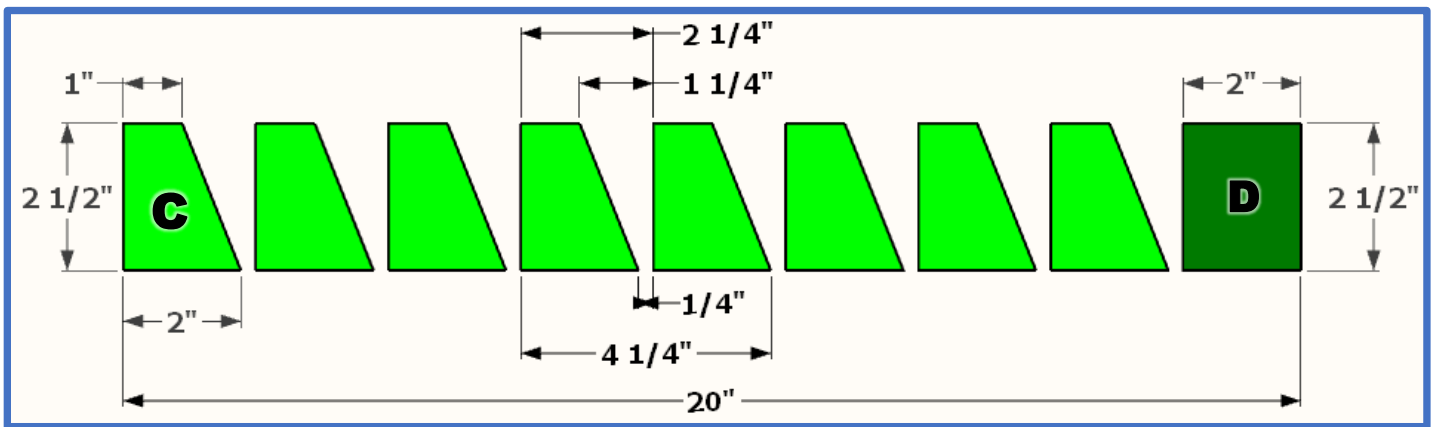

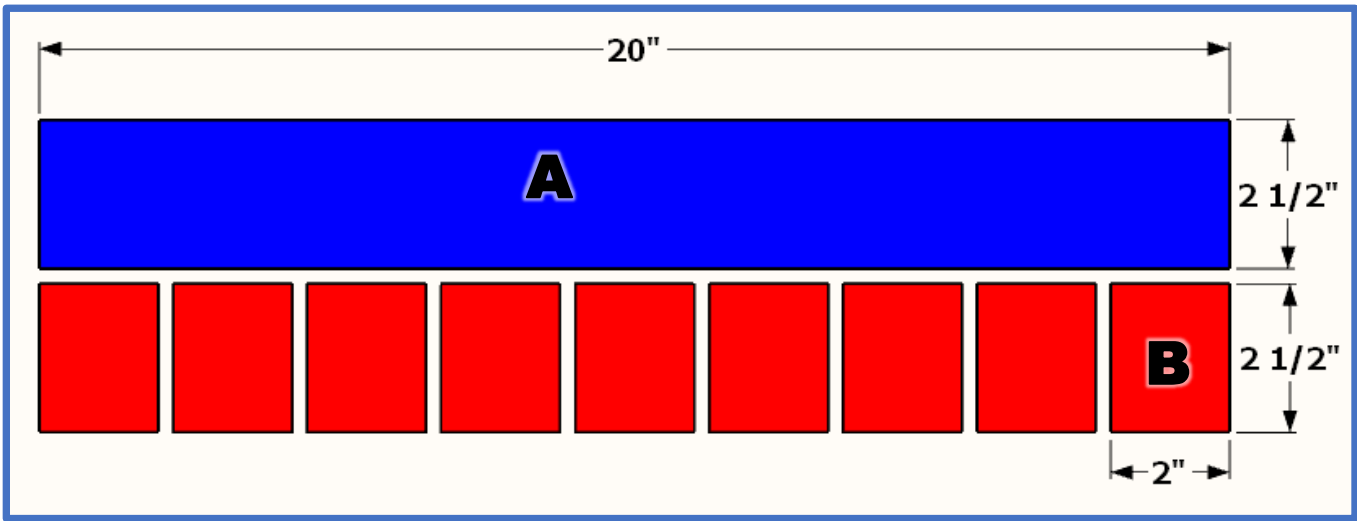

Additional Resources



 [Website: Benchtopwoodworks.com](http://Benchtopwoodworks.com)

 [YouTube Channel](#)

 [Find out about Unlimited Plans on Patreon](#)

 [Instagram](#)

 [All of my plans are available on Etsy](#)

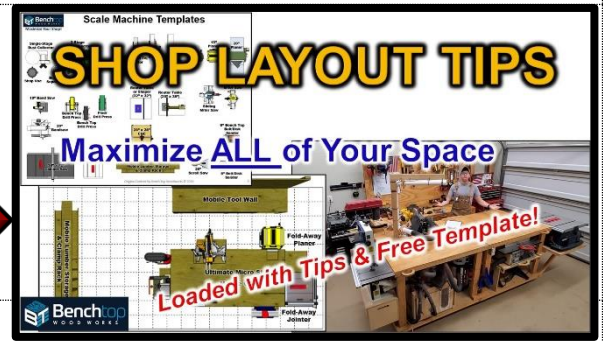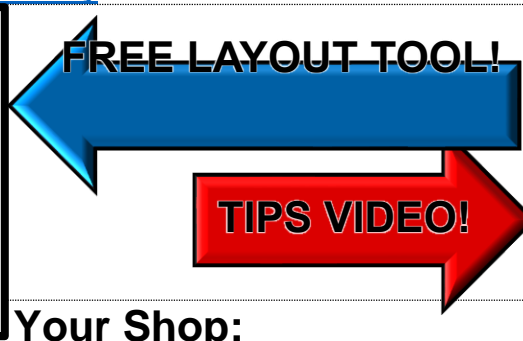

Your Shop:


My Shop's Mobile Base:



My Mobile Tool Wall:



My Planer Mount:

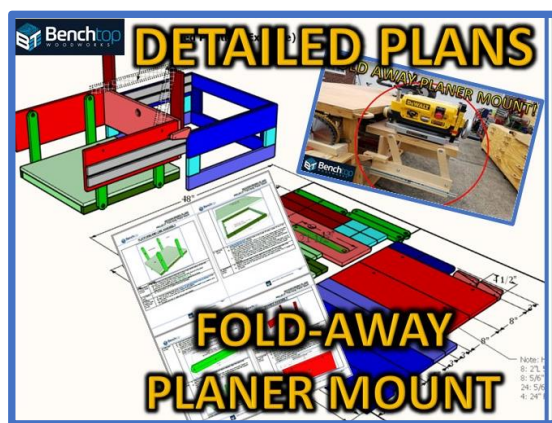

My Dust Collection Set-Up:

