
STONECORE
QUALITY SET IN STONE

3
IN 1

The 3-in-1 Molding

One profile. Three transitions. Every floor we sell.

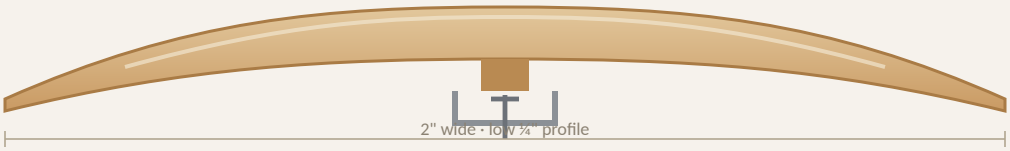

01

Reducer

Steps your floor down to a lower or thinner surface — tile, concrete, low-pile.

02

T-Molding

Joins two equal-height floors across a doorway or open threshold.

03

End Cap

Finishes an exposed edge where the floor meets carpet, a slider, or a hearth.

The same molding does all three jobs — **you just change how it's installed.** Here's how.

Order & specs: 703-499-3558

THE SYSTEM

One molding, one track, endless thresholds


Instead of stocking three separate transition strips, every StoneCore floor ships with a single 3-in-1 (3N1) molding that color-matches the plank. The trick is the track underneath: the molding snaps into a low metal channel screwed to the subfloor, and how you set that track decides whether the piece behaves as a reducer, a T-molding, or an end cap.

The molding. A wear-resistant aluminum-oxide laminate surface over a rigid PVC core, shaped in a low 2" profile that matches the floor color. The finished top is all anyone sees.

The track (SlimTrack). A cold-rolled steel channel that screws to the subfloor first. The molding's center rib locks into it — no glue lines, no exposed fasteners on the surface.

Shims for height. Thin shims raise the track so the molding meets your floor at the right height. Thicker floors take more shims; the thickest go in on dowels instead (see page 4).

Overall width	**2" · ~¼" profile height**
Surface	**Aluminum-oxide laminate**
Core	**Rigid PVC**
Track	**Cold-rolled steel + shims**
Fastening	**#6 screws to subfloor**

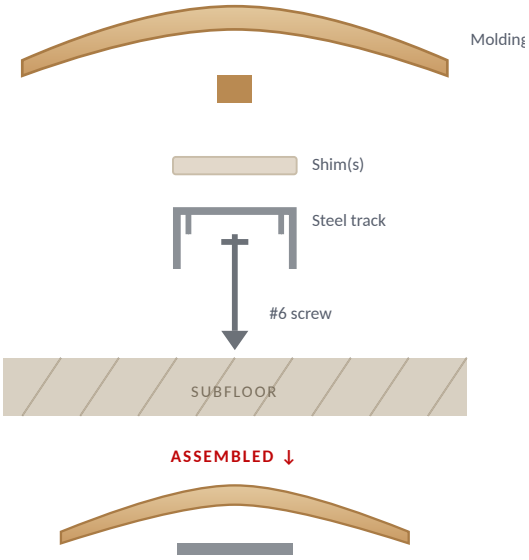

Molding → shims → track → subfloor


INSTALLER'S RULE OF THUMB

The stepped end of the molding **always sits on the lower of the two surfaces.** Rock the molding to confirm it's seated in the track, then tap it home with a rubber mallet — like sealing a zip-top bag, one end to the other.

WHAT IT REPLACES

Three moldings in one profile

Same piece, same box — positioned three different ways. Here's what each configuration looks like in cross-section and where you'd use it.

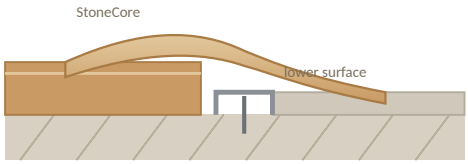


01 · REDUCER

Reducer — floor to a lower surface

Bridges a **height difference** — where StoneCore meets a thinner floor. The molding ramps down and the stepped edge rests on the low side.

- Floor-to-tile or floor-to-concrete
- Transition into a low-pile or sheet floor
- Room edges that drop to a slab or landing

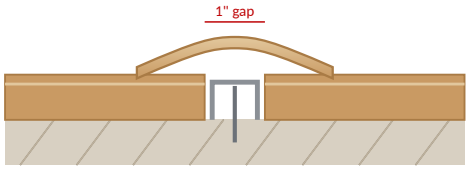

02 · T-MOLDING

T-Molding — two equal-height floors

Sits **centered in a 1" gap** between two floors of the same height, capping both edges evenly. The classic doorway transition.

- Doorways between two rooms
- Open thresholds in the same floor run
- Expansion breaks in large open areas



03 · END CAP

End Cap — finishing an exposed edge

Caps a **free edge** that would otherwise be left open — paired with a carpet tap-down trim set even with the top of the track.

- Where hard floor meets carpet
- Sliding-door and patio tracks
- Fireplace hearths and vertical drops

COLOR-MATCHED SKUS

Every StoneCore color has its 3N1

Order the 3N1 that matches the plank — one trim covers all three jobs for that color. Install method depends on the collection's thickness.

Grand Reserve

WPC CORE · 9" × 60" × 12MM · 28MIL

INSTALL **Dowel method (12mm)**

COLOR	3N1 TRIM SKU
Belmont	3N1-12-001
Paloma	3N1-12-002
Celine	3N1-12-003
Maison	3N1-12-004
Belaire	3N1-12-005
Carmel	3N1-12-006
Monclair	3N1-12-007
Montrose	3N1-12-008
Clara	3N1-12-009
Stella	3N1-12-010

Potomac Plus

SPC CORE · 7½" × 48" × 7MM · 22MIL

INSTALL **Track + shims (7mm)**

COLOR	3N1 TRIM SKU
Colombia	3N1-7CO-201
Brandywine	3N1-7BW-205
Annapolis	3N1-7AP-207
Bell Haven	3N1-7BH-210
Ashland	3N1-7AL-211
Chesapeake	3N1-7CP-212
Haymarket	3N1-7HM-213
Charlottesville	3N1-7CV-214
White Sands	3N1-7WS-220
Alexandria Place	3N1-7AX-301

INSTALL METHOD AT A GLANCE — BY TOTAL FLOOR THICKNESS

up to 3mm	to 6.35mm	6.35–9.5mm	9.5–19mm
Metal track only	Track + 1 shim	Track + shims (Potomac Plus, 7mm)	Dowel method (Grand Reserve, 12mm)

Ready to order your 3N1 trim? Contact your StoneCore rep · **703-499-3558**

Thickness ranges refer to the total build-up on the subfloor (plank plus any underlayment and vapor barrier), not the plank alone. Installation guidance is a general summary of the SlimTrim 3-in-1 system; always follow the current molding and flooring installation instructions and the flooring manufacturer's warranty requirements. In-stock quantities and available colors change — confirm current availability before ordering.