


ESS RESINWORKS

PAINT BOOTH

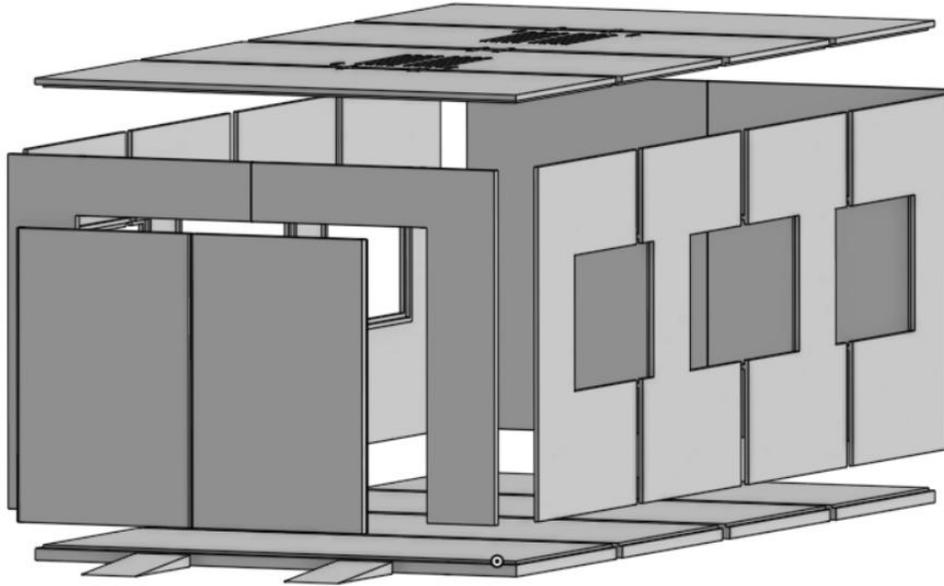

CONGRATULATIONS! YOU NOW HAVE A PAINT BOOTH KIT TO DISPLAY YOUR CREATIONS YOU'VE WORKED SO HARD TO MAKE PERFECT. THE HOURS YOU HAVE SPENT BUILDING YOUR MODELS SHOULD MAKE THE CONSTRUCTION OF YOUR PAINT BOOTH VERY SIMPLE. IF YOU TAKE YOUR TIME AND BE PATIENT, YOU WILL HAVE ANOTHER MASTERPIECE TO DISPLAY FOR MANY YEARS TO COME.

NOTES: SUPER GLUE IS YOUR BEST FRIEND WHEN ASSEMBLING YOUR PAINT BOOTH. PLEASE FOLLOW THE DIRECTIONS ON YOUR GLUE TO THE TEE FROM START TO FINISH AND YOU WILL HAVE A VERY SOLID STRUCTURE.

DRY FIT EVERY PIECE PRIOR TO USING GLUE!

THE TEXTURED SIDE OF THESE PARTS ARE TO BE ON THE OUTSIDE OF YOUR MODEL. THIS TEXTURE REPRESENTS THE SURFACE TEXTURE OF AN ACTUAL PAINTBOOTH!

DUE TO LAYER HEIGHTS AND DIRECTIONS, PARTS MAY APPEAR A DIFFERENT TONE THAN ANOTHER. THAT'S OK, YOU SHOULD BE SPRAY PAINTING THIS BOOTH SILVER WHEN YOU ARE DONE.

RECOMMENDED TOOLS: SUPER GLUE, SUPER GLUE ACCELERATOR (OPTIONAL), NEEDLE NOSE PLIERS, FILE, HOBBY KNIFE, DRILL, 1/4" DRILL BIT, SHARPIE

FLOOR AND CEILING

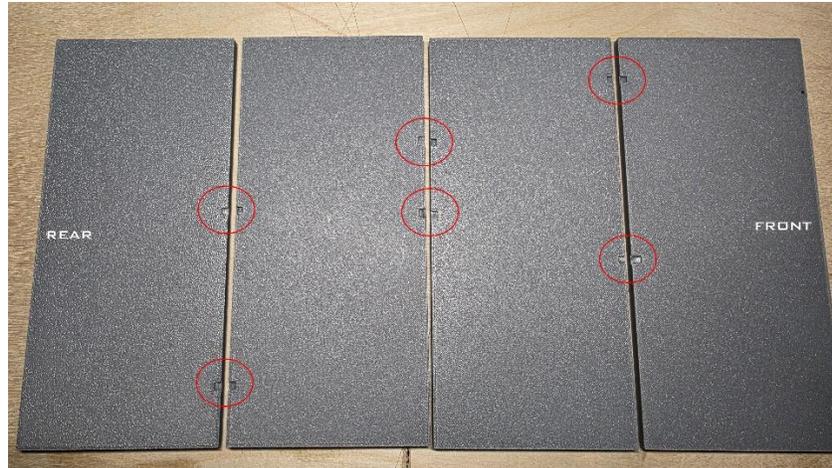


FIG. 1

LAY YOUR FLOOR PIECES FACE DOWN AND ALIGN THE TABS TO MATCH (SEE FIG. 1). APPLY GLUE TO EACH PIECE AND ALLOW TO SET ACCORDING TO THE INSTRUCTIONS ON YOUR GLUE.

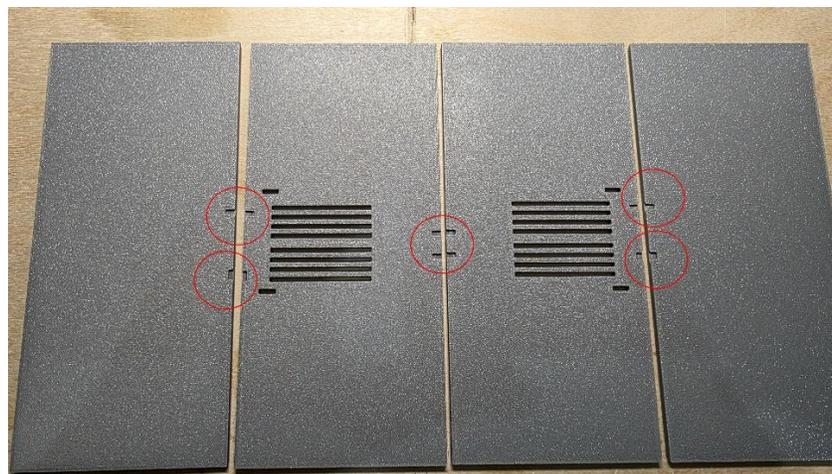


FIG. 2

LAY YOUR CEILING PIECES FACE DOWN AND ALIGN THE TABS TO MATCH (SEE FIG. 2). APPLY GLUE TO EACH PIECE AND ALLOW TO SET ACCORDING TO THE INSTRUCTIONS ON YOUR GLUE.

WALLS

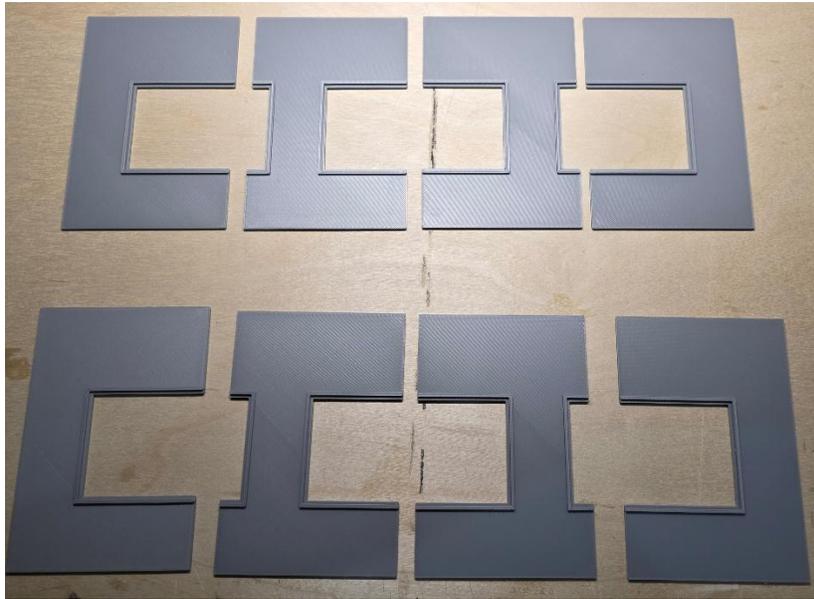


FIG. 3

LAY YOUR WALL PIECES FACE DOWN AND ALIGN THE TABS TO MATCH (SEE FIG. 2). APPLY GLUE TO EACH PIECE AND ALLOW TO SET ACCORDING TO THE INSTRUCTIONS ON YOUR GLUE. BOTH LEFT AND RIGHT WALLS SHOULD BE IDENTICAL. NOTE: THE TRIM AROUND THE WINDOW OPENINGS ARE THERE IF YOU WOULD LIKE TO ADD PLEXIGLASS WINDOWS (NOT INCLUDED)



FIG. 4

ATTACH THE SIDE WALLS TO THE FLOOR AS SHOWN IN FIG. 4. BE AS SQUARE AS YOU CAN BE. IF YOU'RE A LITTLE OUT OF SQUARE, THAT'S OK. YOUR REAR AND FRONT WALLS WILL HELP.



FIG. 5



FIG. 6

ATTACH THE REAR (FIG. 5) AND FRONT (FIG. 6) WALLS. ALL 4 PIECES SHOULD FIT OUTSIDE TO OUTSIDE. ATTACH TO THE FLOOR FIRST AND THEN ATTACH TO THE SIDE WALLS, AS THIS WILL SQUARE IT UP PROPERLY.

CAUTION! THE FRONT IS SHOWN IN FIG. 6. THERE IS A SMALL HINGE PIN HOLE THAT MUST REMAIN EXPOSED FOR THE FRONT DOORS LATER.

CEILING



FIG. 7

THERE IS NO FRONT OR REAR TO YOUR CEILING. ALL CUTOUTS ARE EQUAL FRONT TO BACK. DRY FIT YOUR CEILING! IT SHOULD LITERALLY SNAP INSIDE ALL 4 WALLS. YOU MAY CONTINUE TO ATTACH YOUR CEILING NOW, OR YOU CAN SKIP TO THE EXHAUST DUCT AND LIGHTING INSTALL, THEN COME BACK TO THIS STEP TO ATTACH THE ENTIRE CEILING/DUCT WORK/LIGHTING ASSEMBLY IN ONE STEP.

WE CHOSE TO ATTACH THE CEILING NOW (FIG. 7), AS REACHING INSIDE THE FRONT DOOR OPENING AND THROUGH THE WINDOWS IS SUFFICIENT FOR ATTACHING LIGHTING.

EXHAUST AND LIGHTING

TIP: SHOP LIGHTS HAVE A 2 SIDED TAPE TO ATTACH TO THE HOUSING. DON'T TRUST THE TAPE...ADD A DRIP OF SUPER GLUE TO EACH END OF THE LIGHT STRIP ONCE INSTALLED INTO THE HOUSING.

OUR INSTRUCTIONS WILL SHOW THE INSTALLATION OF 4 LIGHTING FIXTURES (INCLUDED WITH YOUR KIT). YOU MAY CHOOSE TO ADD MORE LIGHTING AS OUR POWER SUPPLIES (NOT INCLUDED) WILL SAFELY OPERATE UP TO 10 SHOP LIGHTS.



FIG. 8

BEGIN INSTALLING THE EXHAUST DUCT (7 PIECES) ONE AT A TIME, STARTING FROM THE REAR. (SEE FIG. 8). THE 3RD DUCT SECTION WILL NEED TO BE MARKED AND DRILLED CAREFULLY, USING A 1/4" DRILL BIT. (SEE FIG. 9)



FIG. 9

FEED THE BLACK AND RED WIRES FROM 2 SHOP LIGHTS THROUGH THE HOLES AND ATTACH SECTION 3 TO THE CEILING.

CONTINUE INSTALLING EACH EXHAUST DUCT SECTION. THE 6TH SECTION WILL NEED MARKED AND DRILLED FOR WIRING (SEE FIG. 9). FEED THE BLACK AND RED WIRES FROM 2 SHOP LIGHTS THROUGH THE HOLES AND ATTACH SECTION 6 TO THE CEILING. EXTEND THE WIRING FOR THESE 2 LIGHTS USING PROVIDED WIRE AND ROUTE THE WIRING THROUGH THE DUCTS TO THE REAR OF THE PAINT BOOTH.

ATTACH THE LAST OF 7 EXHAUST DUCTS AND CAP THE END WITH PROVIDED CAP.

DOORS



FIG. 10

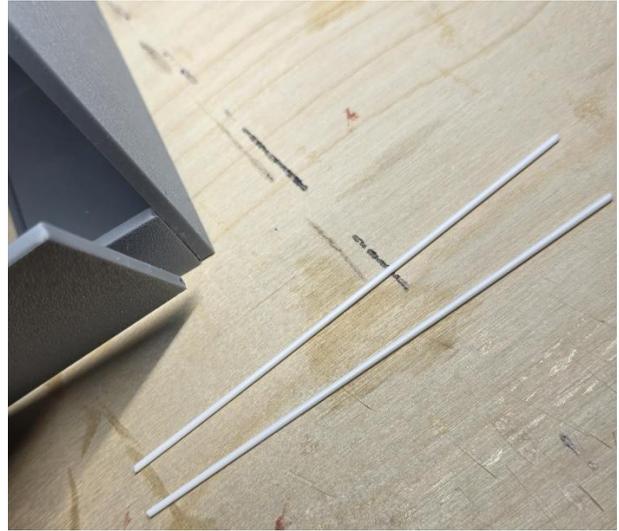


FIG. 11

AGAIN, TEXTURED SIDE IS THE OUTSIDE OF THE DOORS. USING THE PROVIDED 1/16" ROD (SEE FIG. 11), INSERT THE ROD THROUGH THE BOTTOM OF THE FLOOR, PASSING THROUGH THE HOLE IN THE DOOR, INTO THE HOLE AT THE TOP OF THE DOOR FRAME (FRONT WALL). THE PIN SHOULD BE FLUSH WITH THE BOTTOM OF THE FLOOR WHEN FULLY INSERTED. (SEE FIG. 12)



FIG. 12

DOOR HANDLES



FIG. 13

THERE ARE 2 HANDLES (SEE FIG. 13) INCLUDED IN YOUR KIT. THESE ARE RESIN PARTS THAT WERE LEFT ON THE SUPPORTS TO MAKE PAINTING THEM EASIER. THE HANDLES SHOULD BE APPROXIMATELY 44MM OFF THE FLOOR. THE RAMPS INCLUDED WITH YOUR KIT MAKE A FANTASTIC MEASURING TOOL AND JUST SO HAPPEN TO BE 44MM LONG. LET'S ATTACH THOSE HANDLES AND CALL THIS PAINT BOOTH DONE! (SEE FIG. 14)



FIG. 14

CONGRATULATIONS! YOU ARE READY TO START PAINTING!

REPLACEMENT PARTS ARE AVAILABLE AT A MINIMAL CHARGE PLUS SHIPPING AND HANDLING. IF YOU HAVE ANY QUESTIONS OR NEED REPLACEMENT PARTS, CONTACT US VIA ESSRESINWORKS@OUTLOOK.COM OR THROUGH OUR WEBSITE AT WWW.ESSRESINWORKS.COM