

Examples are not to scale

Base



2-1/4" Streamline



2-1/4" Reversible



2-1/2" #711



3-1/4" #623/Coronado



3-1/4" 320mul

Examples are not to scale



3-1/2" #711



3-1/2" Craftsman Base



3-7/8" Newport/Victorian



4" Cape Cod



4-1/4" #620/Coronado



4-1/2" Craftsman

Examples are not to scale



4-½" Santa Fe



4-½" New Hampshire



5" Newport/Victorian
5-¼" Newport/Victorian



5-¼" Cape Cod



5-¼" #618/Coronado



5-¼" Sierra

Examples are not to scale



5-1/2" Craftsman



6" Santa Fe

Casing



1-1/2" Prefit



1-5/8" #711




1-5/8" Moulded




2-1/4" 2RE




2-1/4" Colonial/#356

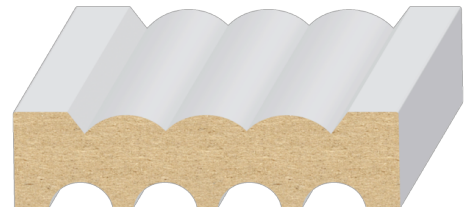


2-1/4" Flute and Reed

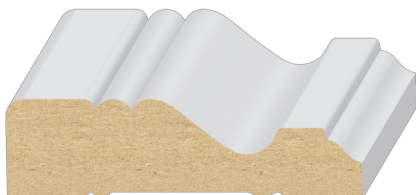

2-7/16" Palisade

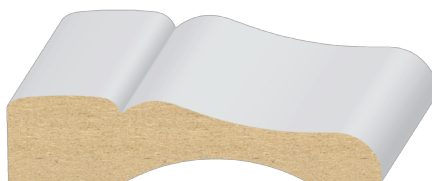


2-1/2" #711

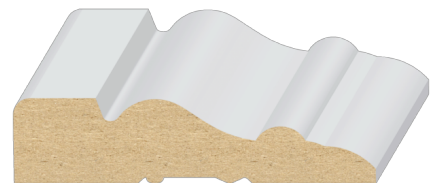

2-1/2" Newport

Examples are not to scale

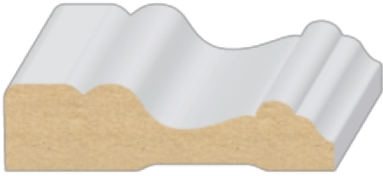

2-1/2" Cape Cod



2-3/4" 2RE



2-7/8" Newport

Crown



1-7/8" Bed Mould



2-1/2" Bed Mould




3-1/4" Colonial




4-1/4" Georgian

Examples are not to scale

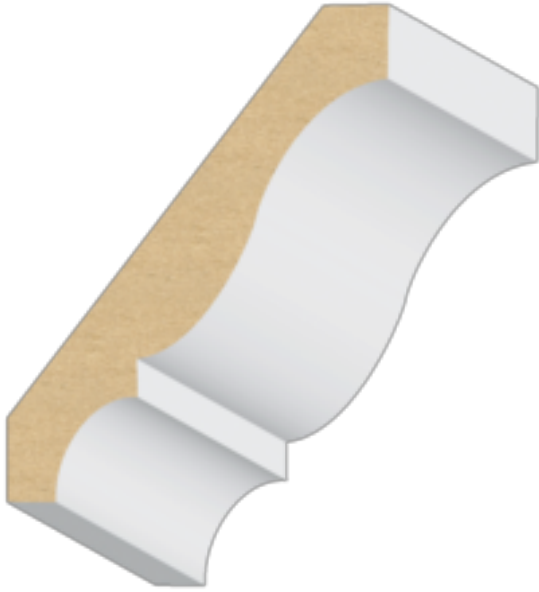

4-1/4" Colonial

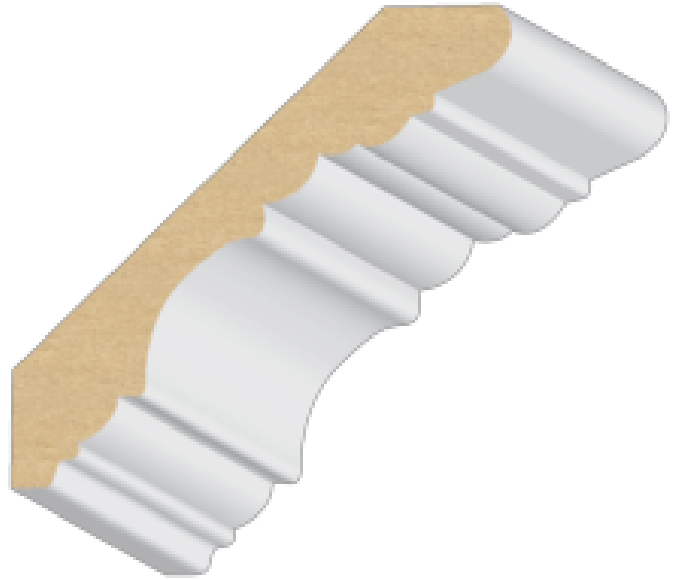

4-1/2" Coronado



6" Georgian