


# CASE STUDY

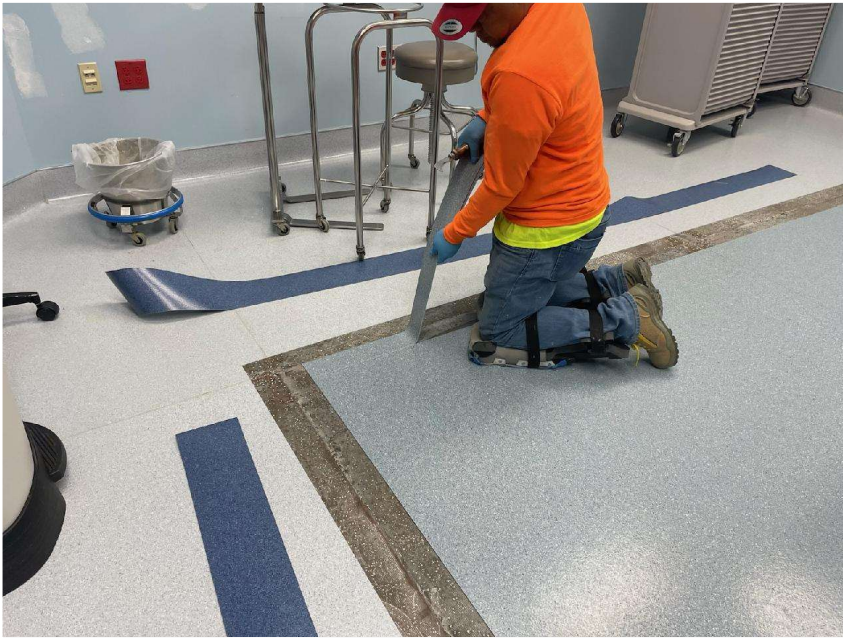

We removed existing sheet vinyl and prepped subfloor



Application of new vinyl borders



*Cracked vinyl cove base that needs repaired*




*Removal of old vinyl*



*New vinyl cove base*



## CASE STUDY

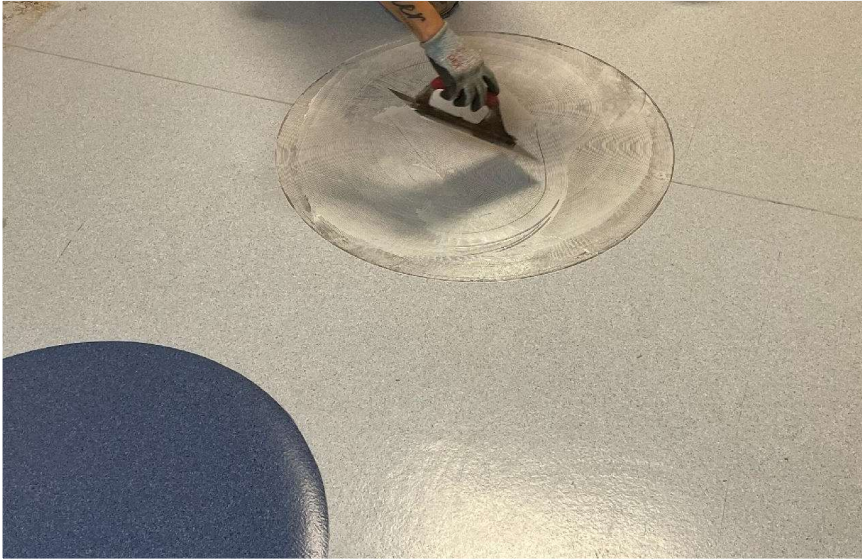

Preparing for the vinyl inlay



Vinyl inlay installed



*Cracked cove corner*



*Corner w/new vinyl, prior to heat welding*



*Finished corner with heat welding*