


- Elevation of spill-way must be set at lowest natural point.
- Control measure must be installed to form ponding volume
- Terminal ends of structure must be installed so bottom of control measure is the same elevation as spill way to prevent flows from running around ends. I
- Control measure used to form berm must be installed to individual specification.

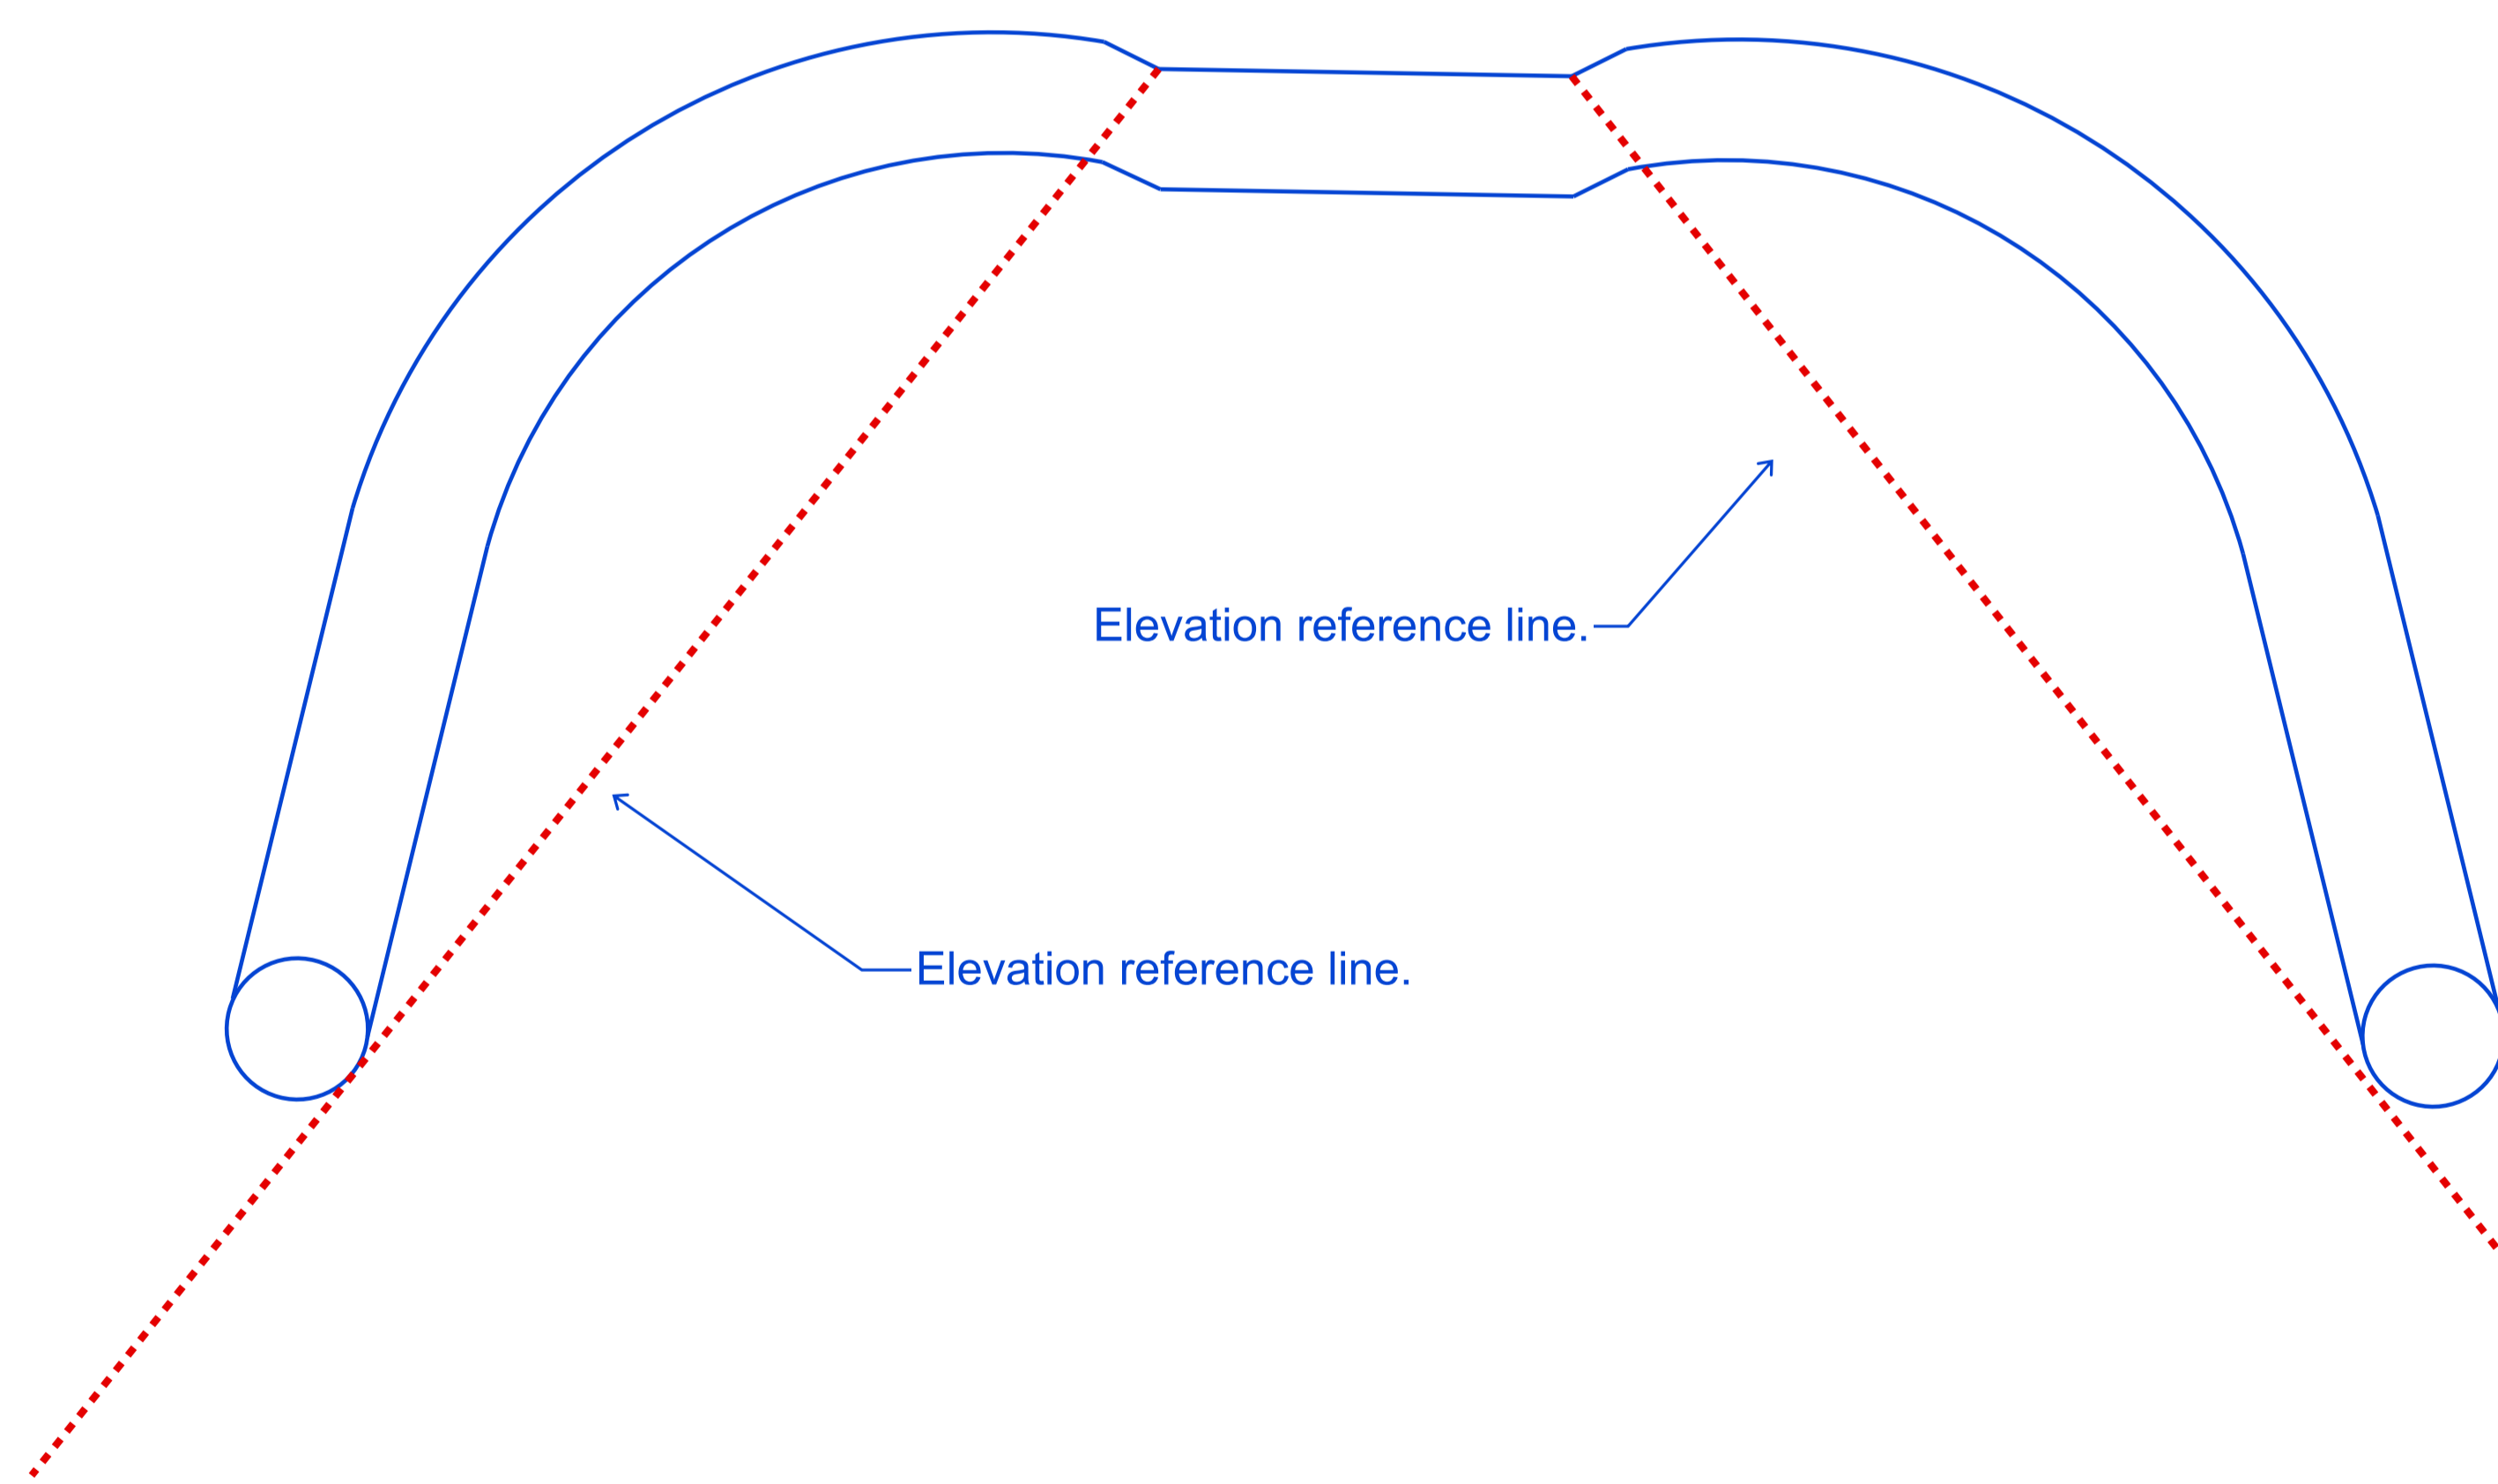

 <b>OPEN 8 CONSULTING</b> WWW.OPEN8.ORG		
DATE: 5/10/21	LOCATION:	PROJECT: MHBC
CLIENT:	SCALE	SHEET SIZE 11 x 17
Pond alternative design		DRAWING No. <b>1</b>