



MOTORSPORTS

Highland Jack Mount kit Instructions

Thank you for choosing [Maddogs Motor Sports](#).

Please read all instructions completely before beginning installation.

Important Safety Information


This installation guide is provided for informational purposes only. Always follow proper safety procedures when working on your vehicle. Maddogs Motor Sports is not responsible for any injury, damage, or loss resulting from improper installation or use of this product.

Professional installation is recommended if you are unfamiliar with vehicle modifications or mechanical work.

Kit Contents

Your Highland Jack Mount Kit includes:

- (2) Knobs 4 lobe
- (2) Carriage bolts
- (2) Washers big
- (2) Washers small
- (2) Lock nuts
- (2) TPU rubber bushings

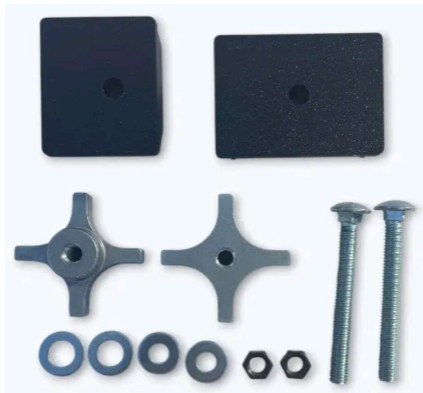

Tools Required

- 9/16 wrench or deep well socket
-

Installation Instructions


Step 1 — Install hardware

1. Install the carriage bolts in the location shown in the pictures below.
2. Install the washers with the larger id hole first and then the smaller id washers
3. Install the lock nuts and tighten securely.



Step 2 — Install Rubber Bushings


1. Slide the TPU rubber spacer bushings over each of the carriage bolts
2. Thread the Knobs onto each carriage bolt

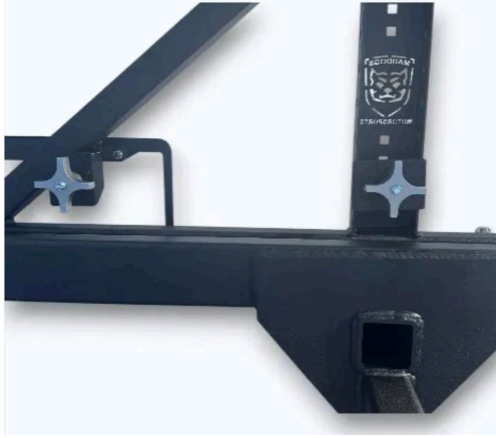

Installation Complete

Your Highland Jack Mount Kit is now installed and ready for you to mount your Jack..

Thank you for your support!

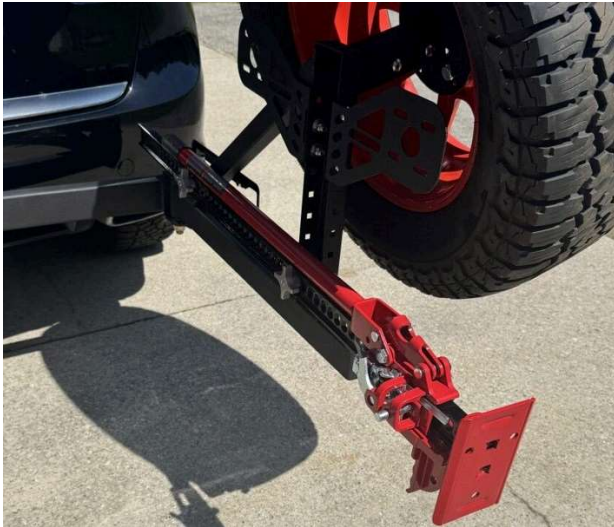

Maddogs Motor Sports

Grand Rapids, Michigan
www.maddogsmotorsports.com