



FABROTECH INDUSTRIES, INC.


MAINTENANCE INSTRUCTIONS

CONICAL & BASKET TEMPORARY STRAINERS


For maximum efficiency, determine length of time it takes for screen to become approximately 1/3 clogged to create a 10-PSI pressure drop. Unbolt from each end the spool piece containing the strainer. Remove strainer and clean with water or steam. Reinstall strainer and spool piece to continue operation. Pressure gauges installed before and after strainer in the line will indicate differential pressure loss due to clogging and can be used as a guide to determine when cleaning is required.

SPARE PARTS

The strainer itself has no spare parts. Upon removal for cleaning, new gaskets should be installed at either end of spool piece.

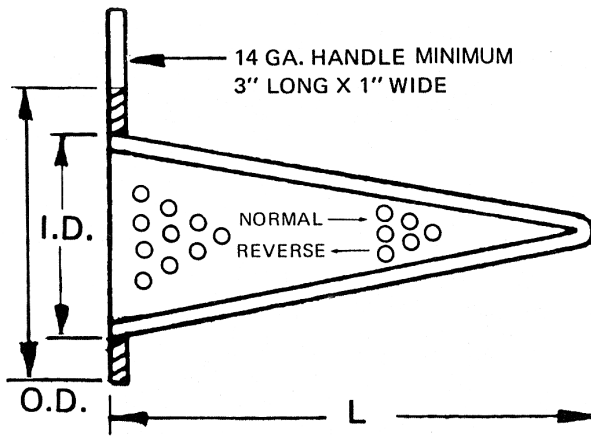

STYLE "B" CARBON STEEL
STYLE "BS" STAINLESS STEEL
CONE TYPE

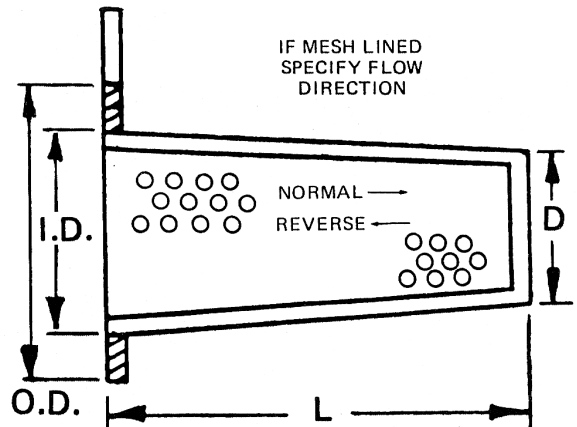

IF MESH LINED
SPECIFY FLOW
DIRECTION
STYLE "C" CARBON STEEL
STYLE "CS" STAINLESS STEEL
BASKET TYPE