



**BARON UPHOLSTERERS INC.**

**1 SQUARE CHAIR 7½ YARDS 50" PLAIN**  
**DEPTH: 36"**  
**WIDTH: 29½"**  
**HEIGHT: 30½"**



**BARON UPHOLSTERERS INC.**

**24 MEDIUM CHARLES CHAIR**

**DEPTH: 35"**

**8½ YARDS 50" PLAIN**

**WIDTH: 34"**

**HEIGHT: 36½"**



**BARON UPHOLSTERERS INC.**

**6 SIDE CHAIR**

**DEPTH: 22½"**

**WIDTH: 21½"**

**HEIGHT: 37"**

**1¾ YARDS 50" PLAIN**

**¾ YARDS OB**



**BARON UPHOLSTERERS INC.**

**9 LARGE RADNOR CHAIR**

**DEPTH: 38"**

**10 YARDS 50" PLAIN**

**WIDTH: 32"**

**HEIGHT: 32"**



**BARON UPHOLSTERERS INC.**

**9 RADNOR CHAIR SCROLL BACK**

**DEPTH: 36"**

**10 YARDS 50" PLAIN**

**WIDTH: 29"**

**HEIGHT: 30"**



**BARON UPHOLSTERERS INC.**

**9 LARGE LOOSE PILLOW BACK RADNOR CHAIR**

**DEPTH: 38½"**

**WIDTH: 32"**

**HEIGHT: 32"**

**10 YARDS 50" PLAIN**



**BARON UPHOLSTERERS INC.**

**17 LAWSON CHAIR**

**DEPTH: 32"**

**7½ YARDS 50" PLAIN**

**WIDTH: 30½"**

**HEIGHT: 31"**



**BARON UPHOLSTERERS INC.**

**19 CUSHION SEAT ELSIE DE WOLFE SLIPPER CHAIR**

**DEPTH: 23"**

**WIDTH: 19½"**

**HEIGHT: 30"**

**4½ YARDS 50" PLAIN**





**BARON UPHOLSTERERS INC.**

**19 SIDE CHAIR SOLID SEAT**

**DEPTH: 23"**

**4½ YARDS 50" PLAIN**

**WIDTH: 19"**

**HEIGHT: 36"**



**BARON UPHOLSTERERS INC.**

**39 BALL LEG CHAIR**

**DEPTH: 34½"**

**WIDTH: 31"**

**HEIGHT: 29"**

**7 YARDS 50" PLAIN**



**BARON UPHOLSTERERS INC.**

**78 BRIDGEWATER CHAIR LARGE**

**DEPTH: 38"**

**9 YARDS 50" PLAIN**

**WIDTH: 32"**

**HEIGHT: 35"**



**BARON UPHOLSTERERS INC.**

78 LOOSE PILLOW BACK BRIDGEWATER CHAIR

DEPTH: 37"

3½ YARDS

WIDTH: 32"

HEIGHT: 34"



**BARON UPHOLSTERERS INC.**

**80 TUFTED BACK BARON CHAIR**

**DEPTH: 35"**

**10 YARDS 50" PLAIN**

**WIDTH: 34"**

**HEIGHT: 32½"**



**BARON UPHOLSTERERS INC.**

**3 PILLOW TOP X BENCH**

DEPTH: 18½"

4 YARDS 50' PLAIN

WIDTH: 21½"

HEIGHT: 20½"



**BARON UPHOLSTERERS INC.**

**128 ERTEGUN CHAIR**

**DEPTH: 33"**

**WIDTH: 28"**

**HEIGHT: 26"**

**6 YARDS 50" PLAIN**



**BARON UPHOLSTERERS INC.**

**154 SMALL CHARLES CHAIR**

**DEPTH: 34"**

**7½ YARDS 50" PLAIN**

**WIDTH: 30½"**

**HEIGHT: 33"**





**BARON UPHOLSTERERS INC.**

**164 BOK CHAIR**

**DEPTH: 32½"**

**WIDTH: 31½"**

**HEIGHT: 29"**

**7½ YARDS 50" PLAIN**



**BARON UPHOLSTERERS INC.**


**187 REINERS CHAIR**

**DEPTH: 27"**

**WIDTH: 30"**

**HEIGHT: 33½"**

**7 YARDS 50" PLAIN**

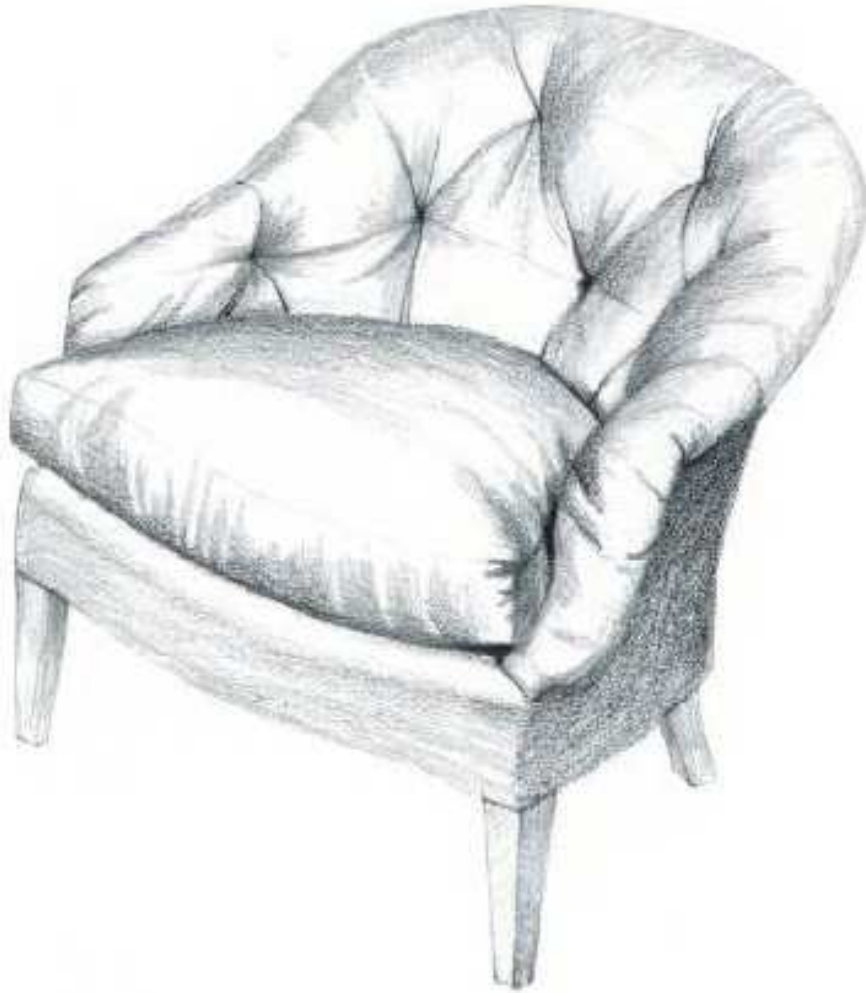

**BARON UPHOLSTERERS INC.**

188 MEDIUM CUSHION SEAT MARSHALL FIELD CHAIR  
DEPTH: 34" 7½ YARDS 50" PLAIN  
WIDTH: 34"  
HEIGHT: 34"



**BARON UPHOLSTERERS INC.**

**04 LARGE SHAPED BACK ODOM CHAIR**

**DEPTH: 35"**

**WIDTH: 34"**

**HEIGHT: 32"**



**BARON UPHOLSTERERS INC.**


**188 PIPED BACK CHAIR**

**DEPTH: 36"**

**8 YARDS 50" PLAIN**

**WIDTH: 36"**

**HEIGHT: 36"**

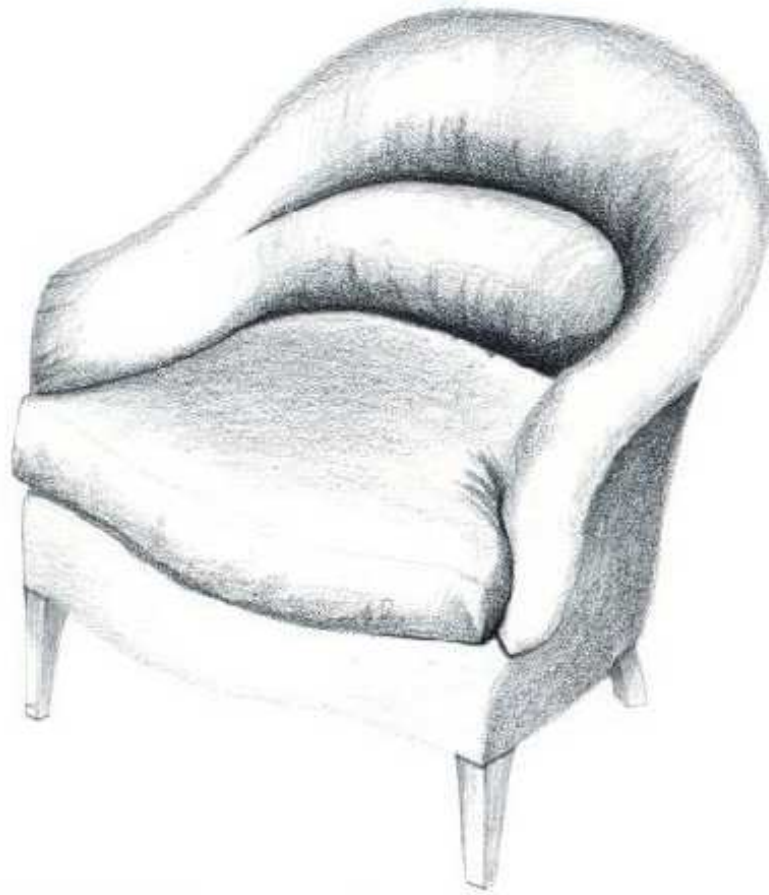

**BARON UPHOLSTERERS INC.**

183 MED. SPLIT BACK CHAIR

DEPTH: 34"                      7½ YARDS 50" PLAIN

WIDTH: 34"

HEIGHT: 34"



**BARON UPHOLSTERERS INC.**

**193 SPLIT BACK CHAIR**

**DEPTH: 32"**

**7 YARDS 50" PLAIN**

**WIDTH: 33½"**

**HEIGHT: 32"**



**BARON UPHOLSTERERS INC.**

4 ODOM CHAIR MED.


DEPTH: 33"

15 YARDS 50" PLAIN

WIDTH: 31"

HEIGHT: 30½"



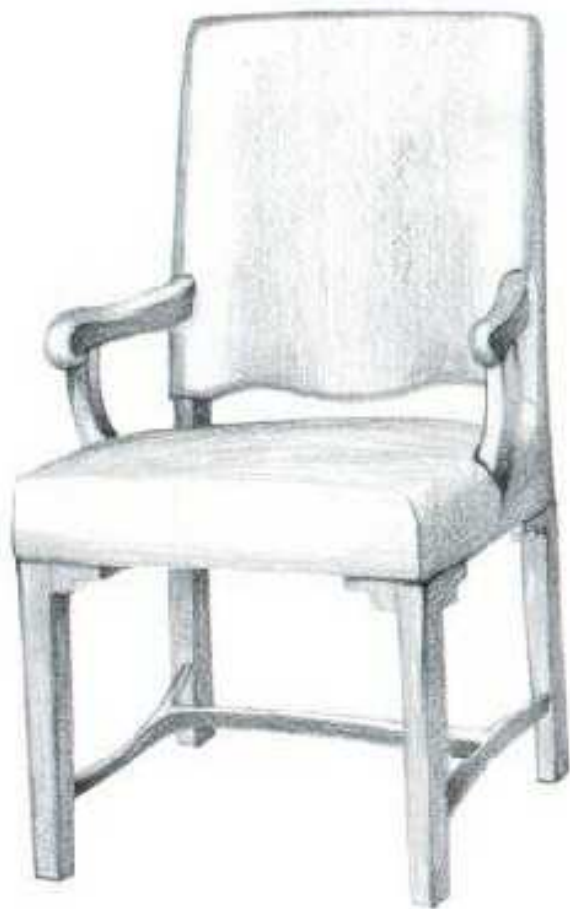

**BARON UPHOLSTERERS INC.**

**206 CHAIR**

**DEPTH: 23½"**

**WIDTH: 23½"**

**HEIGHT: 38"**

**3½ YARDS 50" PLAIN**



**BARON UPHOLSTERERS INC.**

**216 CHIPPENDALE WING CHAIR**

**DEPTH: 31"**

**7 YARDS 50" PLAIN**

**WIDTH: 34"**

**HEIGHT: 46"**



**BARON UPHOLSTERERS INC.**


**245 ARMLESS LAWSON CHAIR**

**DEPTH: 30½"**

**6 YARDS 50" PLAIN**

**WIDTH: 26½"**

**HEIGHT: 29"**

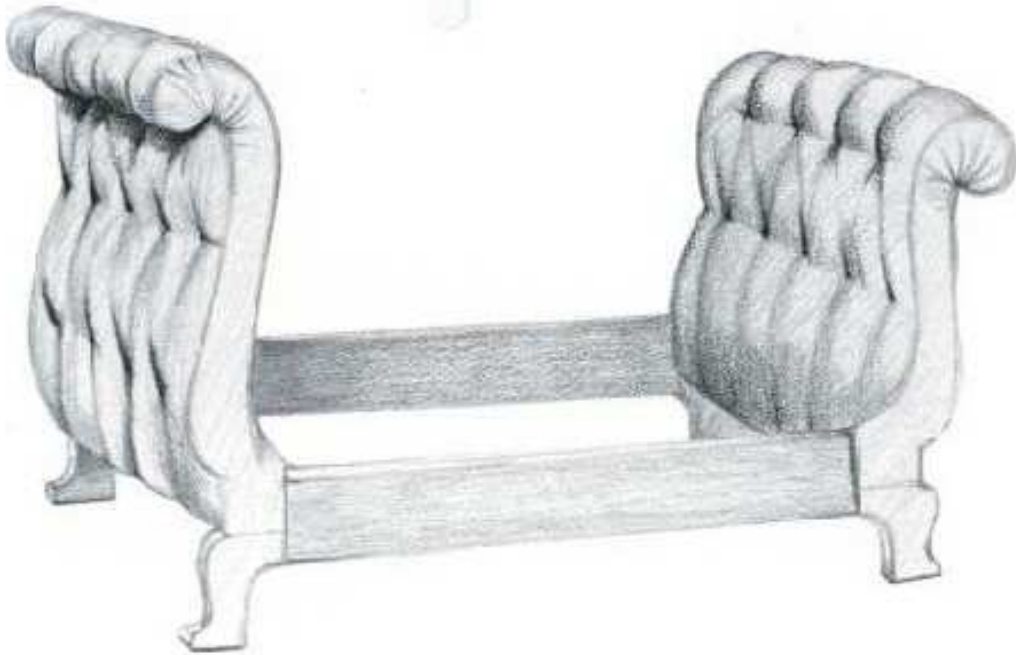

**BARON UPHOLSTERERS INC.**

**246 SLEIGH BED**

**DEPTH: 00"**

**14 YARDS 50" PLAIN**

**WIDTH: 00"**

**HEIGHT: HEAD 38" FOOT 31"**



**BARON UPHOLSTERERS INC.**

247 SLAYED ARM CHAIR TUFTED SEAT  
DEPTH: 31½"                      7½ YARDS 50" PLAIN  
WIDTH: 36"  
HEIGHT: 32"



**BARON UPHOLSTERERS INC.**

252 SPLIT BACK STUMP ARM CHAIR  
DEPTH: 25½"                      4 YARDS 50" PLAIN  
WIDTH: 25½"  
HEIGHT: 32¼"



**BARON UPHOLSTERERS INC.**

**257 V ARMLESS CHAIR**

**DEPTH: 27½"**

**6 YARDS 50" PLAIN**

**WIDTH: 22"**

**HEIGHT: 29½"**



**BARON UPHOLSTERERS INC.**

**257 SMALL SLIPPER CHAIR**


**DEPTH: 25½"**

**4½ YARDS 50" PLAIN**

**WIDTH: 18"**

**HEIGHT: 29"**



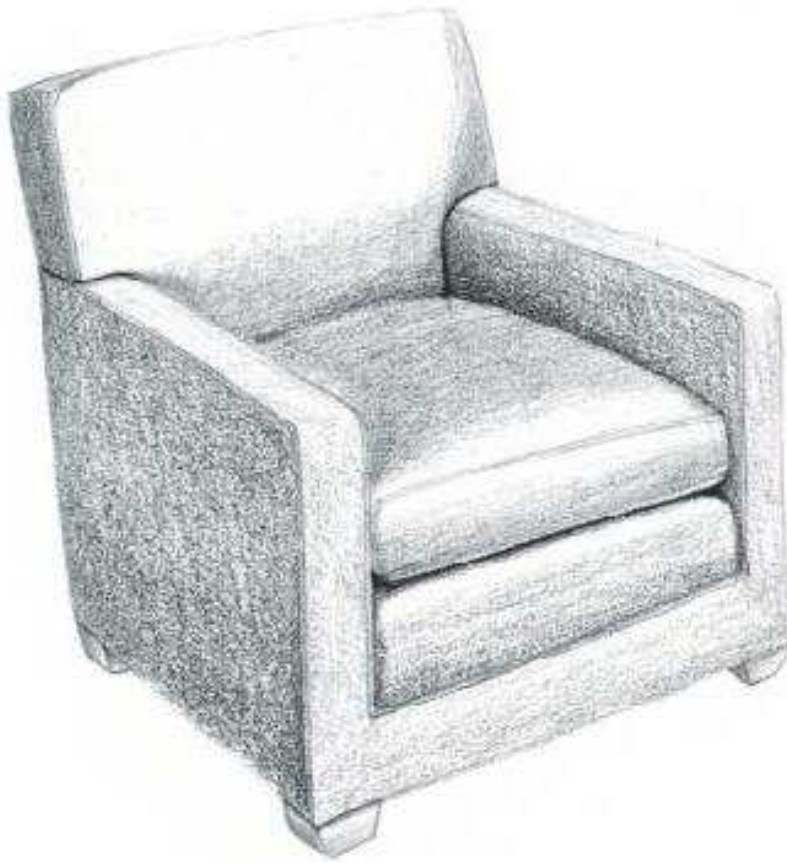

**BARON UPHOLSTERERS INC.**

253 NEW MODEL SQUARE ARM CHAIR

DEPTH: 32"

7 YARDS 50" PLAIN

WIDTH: 30"

HEIGHT: 31½"



**BARON UPHOLSTERERS INC.**

**262 JANIE CHAIR**

**DEPTH: 32"**

**6½ YARDS 50" PLAIN**

**WIDTH: 28"**

**HEIGHT: 31"**



**BARON UPHOLSTERERS INC.**

**265 MELHADO CHAIR**

**DEPTH: 41"**

**10 YARDS 50" PLAIN**

**WIDTH: 34"**

**HEIGHT: 30"**



**BARON UPHOLSTERERS INC.**

**4 MED. SCROLL BACK ODOM CHAIR**

**DEPTH: 34"**

**7 YARDS 50" PLAIN**

**WIDTH: 31"**

**HEIGHT: 32½"**



**BARON UPHOLSTERERS INC.**


**271 LOUIS XV OPEN ARM CHAIR**

**DEPTH: 28"**

**1 1/4 YARDS 50" PLAIN**

**WIDTH: 27 1/2"**

**HEIGHT: 36 1/2"**

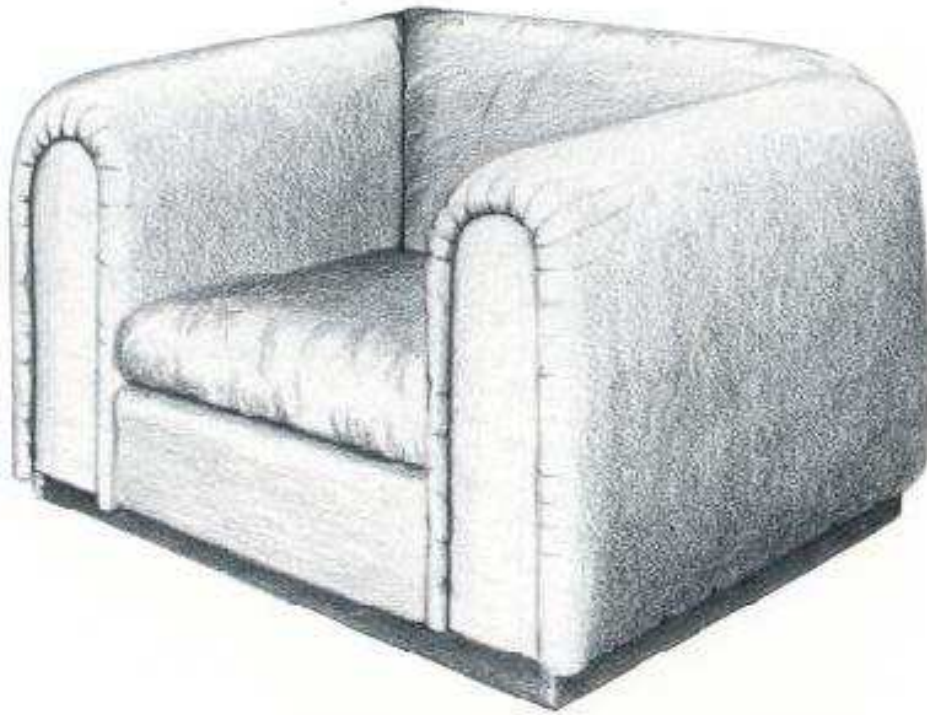

**BARON UPHOLSTERERS INC.**

**274 CANFIELD CHAIR**

DEPTH: 35"

7½ YARDS 50" PLAIN

WIDTH: 38"

HEIGHT: 27"



**BARON UPHOLSTERERS INC.**

**274 CANFIELD CHAIR—LOW ARM**

**DEPTH: 35"**

**7 1/2 YARDS 50" PLAIN**

**WIDTH: 37"**

**HEIGHT: 27"**



**BARON UPHOLSTERERS INC.**

**279 CLINTON CHAIR**

**DEPTH: 27"**

**WIDTH: 26"**

**HEIGHT: 30"**

**6 YARDS 50" PLAIN**





**BARON UPHOLSTERERS INC.**

**280 SPLIT BACK CHAIR**

**6 YARDS**

**DEPTH: 28"**

**WIDTH: 26½"**

**HEIGHT: 30"**



**BARON UPHOLSTERERS INC.**

**280 TUFTED BACK CHAIR**

**DEPTH: 28"**

**6 YARDS 50" PLAIN**

**WIDTH: 26½"**

**HEIGHT: 33"**



**BARON UPHOLSTERERS INC.**

**281 ANTONY CHAIR**

**DEPTH: 38"**

**9 YARDS 50' PLAIN**

**WIDTH: 34"**

**HEIGHT: 30"**



**BARON UPHOLSTERERS INC.**

**295 LAMAR CHAIR**

**DEPTH: 26"**

**4 YARDS 50" PLAIN**

**WIDTH: 26"**

**HEIGHT: 31"**




**BARON UPHOLSTERERS INC.**

**296 COMMONWEALTH CHAIR**

**DEPTH: 30½"                      8 YARDS 50' PLAIN**

**WIDTH: 30½"**

**HEIGHT: 30½"**

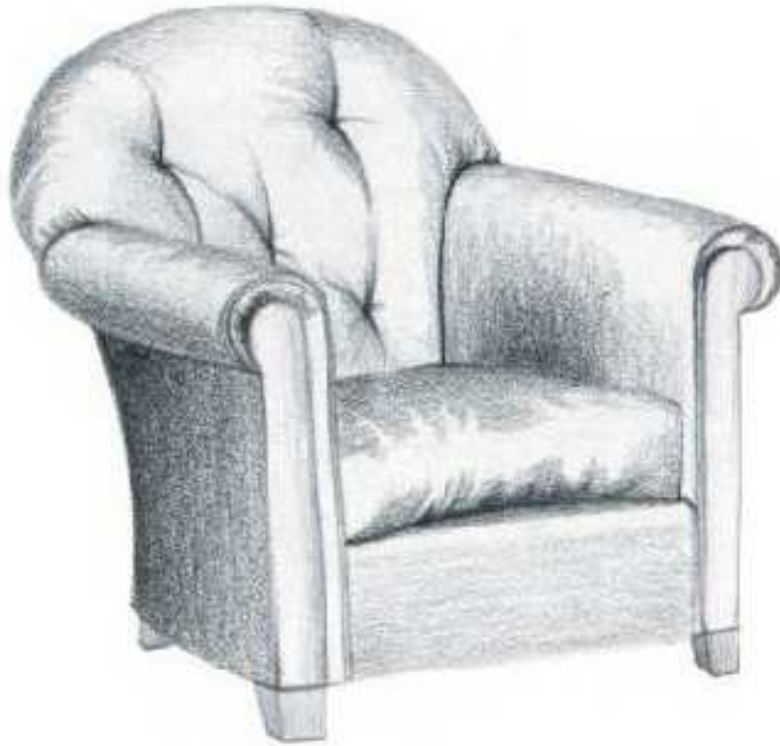

**BARON UPHOLSTERERS INC.**

**300 ART DECO CHAIR**

**DEPTH: 29½"**

**WIDTH: 32½"**

**HEIGHT: 29"**

**7 YARDS 50" PLAIN**



**BARON UPHOLSTERERS INC.**

**302 COLEFAX CHAIR**

DEPTH: 27 $\frac{1}{2}$ "

5 YARDS 50" PLAIN

WIDTH: 23 $\frac{1}{2}$ "

3 $\frac{1}{2}$  YARDS FRINGE ON BASE 9"

HEIGHT: 36 $\frac{1}{2}$ "

6 BUTTONS



**BARON UPHOLSTERERS INC.**

**303 SIDE CHAIR**

**DEPTH: 25 $\frac{1}{2}$ "**

**WIDTH: 22"**

**HEIGHT: 36"**

**1 $\frac{1}{4}$  YARDS**

**50" PLAIN**





**BARON UPHOLSTERERS INC.**

**6 OPEN ARM CHAIR**

**DEPTH: 24"**

**WIDTH: 24"**

**HEIGHT: 37"**

**1 3/4 YARDS 50" PLAIN**

**3/4 YARDS OB**



**BARON UPHOLSTERERS INC.**

**303 LION REGENCY CHAIR**

DEPTH: 25½"      ¼ YARDS 50" PLAIN  
WIDTH: 24½"      10 YARDS TRIM  
HEIGHT: 36"



**BARON UPHOLSTERERS INC.**

**310 BUATTA CHAIR SPLIT BACK**

**DEPTH: 32"**

**6½ YARDS 50" PLAIN**

**WIDTH: 32"**

**HEIGHT: 33"**