



SHOOTER SHELVES INSTALLATION

STEP 1 - LOCATE THE CENTER SHELF AND ATTACH IT TO THE WALL DIRECTLY ACROSS FROM THE DOOR. HOLD IT IN PLACE DIRECTLY IN FRONT OF THE WINDOW BY INCERTING 2 BOLTS FROM OUTSIDE THE BLIND INTO THE SHELF **[LEAVE BOLTS LOOSE UNTILL ALL SHELVES ARE IN PLACE]**

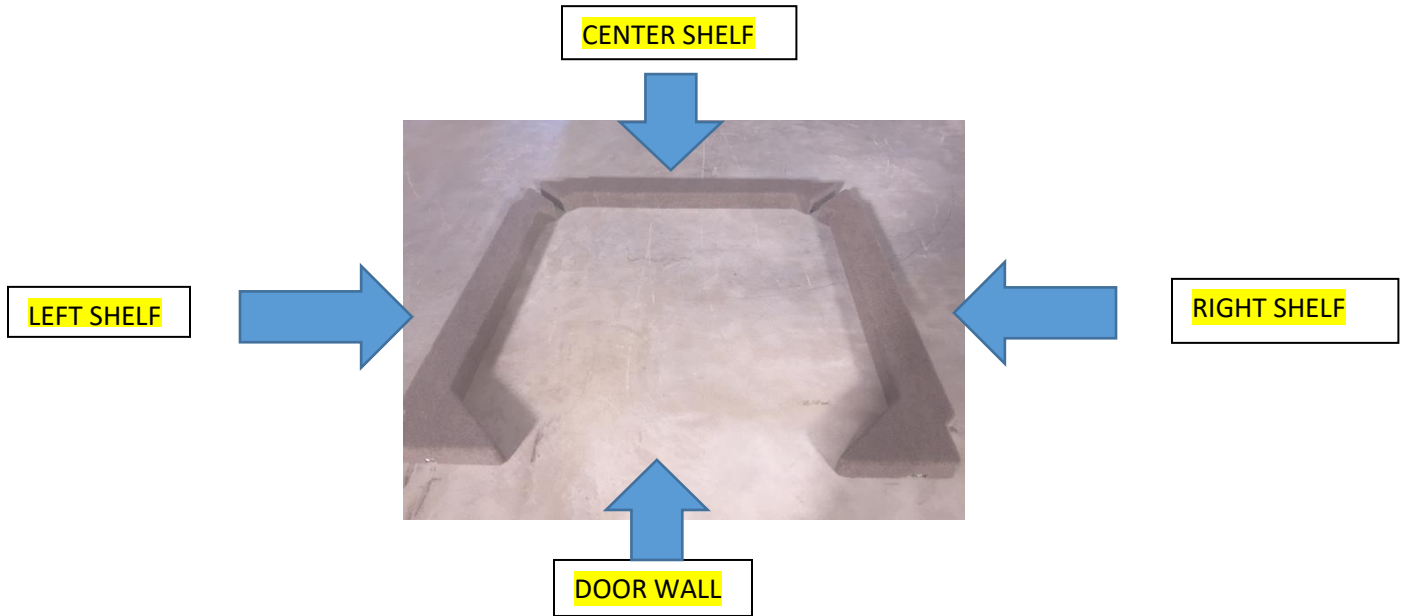

STEP 2 – INSTALL ONE OF THE REMAING SHELVES ON THE SIDE **[BUTT THE MATCHING END OF THE SHELF UP TOO THE END OF THE SHELF ALREADY INSTALLED IN THE CENTER WALL]** THESE SHELVES FIT VERY TIGHT AND WILL TAKE A LITTLE EFFORT TO ALINE UP WITH THE BOLTS HOLES IN THE WALL [IF NEEDED TAKE A SMALL SCREWDRIVER AND STICK IT THRU THE OUTSIDE WALL BOLT HOLE AND THE CLIP NUT ON THE SHELF TO HELP LINE IT UP.] REPETE STEP 2 FOR THE REMAINING SHELF.

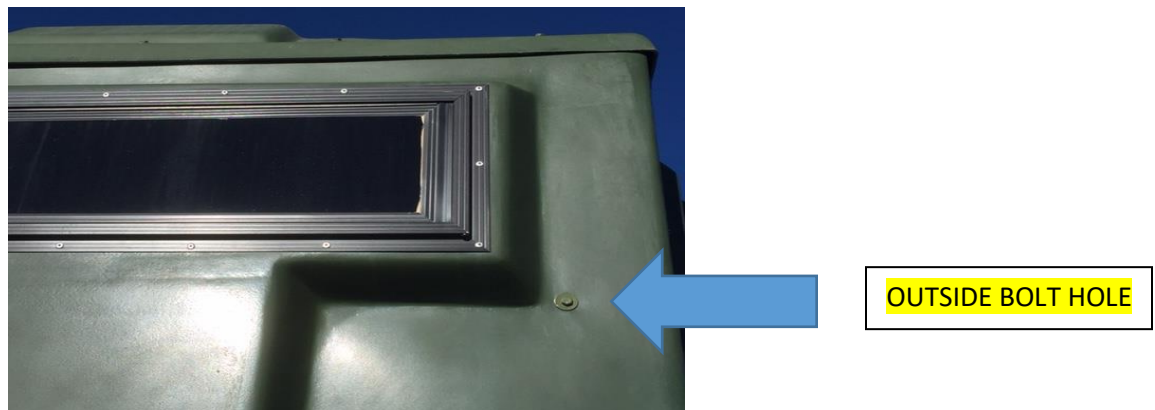



STEP 4 – UNDER THE SHELF ON BOTH CORNERS WHERE ALL 3 SHELVES MEET THERE ARE 2 MORE BOLTS THAT ATTATCH ALL 3 SHELVES TOGETHER , AFTER YOU INSTALL THEM, MAKE SURE ALL THE SHELVES ARE FLUSH WITH BOTTOM OF THE WINDOW OR JUST BELOW THEN TIGHTEN ALL THE BOLTS UP.

