



1. Take off the top spray cover, drill the holes as shown above

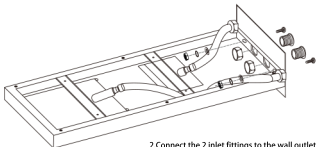

2. Connect the 2 inlet fittings to the wall outlet fittings; then install the nuts, expansion screws and inlet pipe.

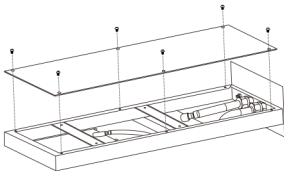

3. Put on the cover and screw it on